

Automatically Start LANforge GUI

Goal: Configure LANforge to automatically start LANforge GUI on boot or login.

Follow these steps to Configure LANforge to automatically start LANforge GUI on boot or login. Requires version 5.4.1 or greater.



1. Quick Start

A. Open a terminal or connect to your lanforge machine via ssh:

```
$ cd /home/lanforge/LANforgeGUI_5.4.1  
$ cp LANforge-auto.desktop ~lanforge/.config/autostart  
$ sudo systemctl restart vncserver@:1.service
```

C. If you were connected via VNC, your session will close. When you reconnect via VNC, you will see a LANforge GUI running on the desktop. This will now start again every reboot.

2. Setting RESTARTS

A. In the GUI, navigate to the Control → Preferences → JVM and Memory tab

B. In extra settings, on its own line, add the following:

```
RESTARTS=2000
```