

LANforge-ICE Cookbook

The LANforge-ICE Cookbook provides a set of high-level examples of how to setup useful test scenarios in LANforge-ICE for WAN emulation. Each example intends to give the reader a brief introduction to the test scenario and a set of step-by-step instructions on how to use the LANforge-GUI to configure the test.

All of the following examples will work on Linux systems running the LANforge software with the LANforge kernel and a sufficient license. If you are running another Linux kernel, you will not be able to exactly duplicate some of the examples, but there are usually work-arounds available to assist you. Please contact us at support@candelatech.com if you have any questions.

If you are using the Windows version of LANforge, you will have to modify ports using the Windows utilities and you will not be able to duplicate the Routed Mode ICE examples. Everything else should work approximately the same, but the performance is limited to 10Mbps speeds.

LANforge-ICE WAN Emulation

Before attempting the examples below, ensure that you have successfully followed these software installation guides:

- [LANforge-GUI Installation](#)
- [LANforge-Server Installation](#)

It is also recommended that you back up your current running LANforge-Server database so that you may safely return to your current operating state.

LANforge-ICE Cookbook Examples

1. [Bridged Mode \(Non-routed\) WanLink](#)
2. [Bridged Mode WanLink with Virtual Ports and Redirect Devices](#)
3. [Routed Mode WanLinks with Virtual Routers](#)
4. [Routed Mode WanLinks with a Single Physical Port](#)
5. [Routed Mode WanLinks with WanPaths](#)
6. [Virtual Router with DHCP Service](#)
7. [Virtual Router with NAT](#)
8. [Multiple Layer-2 Switches](#)
9. [Multiple Virtual Routers](#)
10. [Multiple Physical Port Testing - CT970-48](#)
11. [Bridging Three Wanlinks](#)
12. [WanPath Corruptions](#)
13. [WanLink Queue Discipline](#)
14. [ICE WiFi Gaming Demonstration Video](#)


Bridged Mode (Non-routed) WanLink

Goal: Allow LANforge-ICE to sit transparently on a network segment by using a Bridged Mode WanLink to simulate a WAN.

In this test scenario, a LANforge-ICE WanLink is created in Bridged Mode to simulate a WAN consisting of a DS1 speed (1.544Mbps) link with 20ms of delay in one direction and 30ms of delay in the other direction.

1. Setup the LANforge Ports so that they have 0.0.0.0 IP addresses. (Bridged Mode WanLinks use ports that have no IP address because the ports are transparent to the traffic flowing through them.)


A. A: Go to the Port Manager to see what ports are available. In this example, we will use eth1 and eth2. eth0 is the management port and cannot be used for WanLinks.

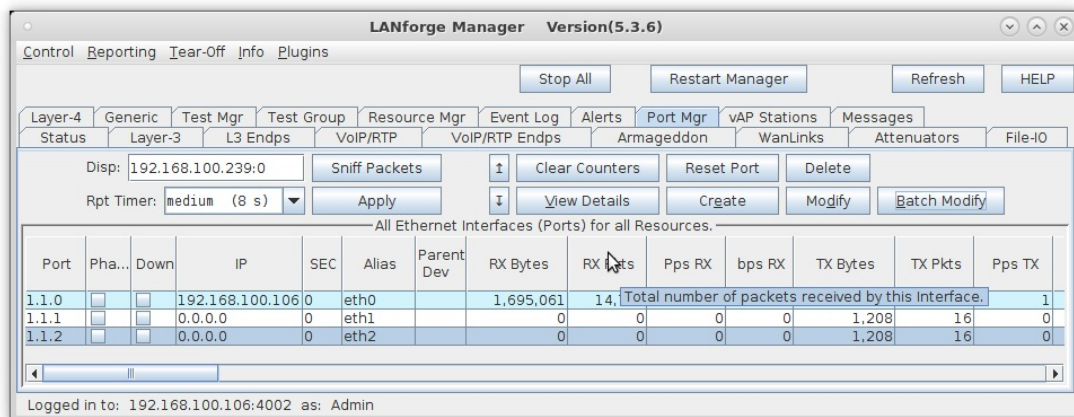


For more information see [LANforge-GUI User Guide: Ports \(Interfaces\)](#)

2. Create a WanLink.

A. Go to the **WanLinks** tab

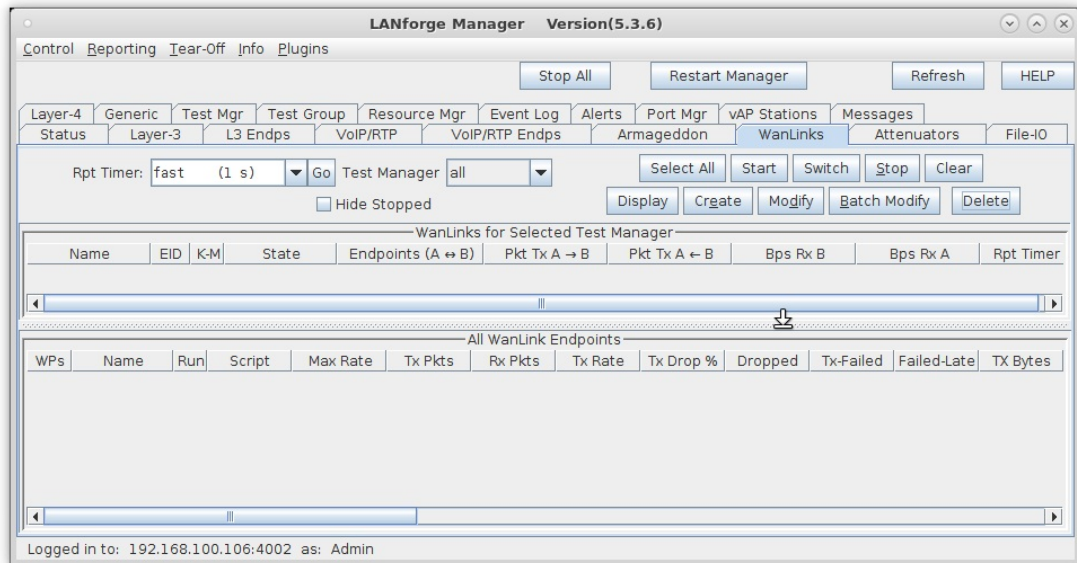


B. Create a WanLink

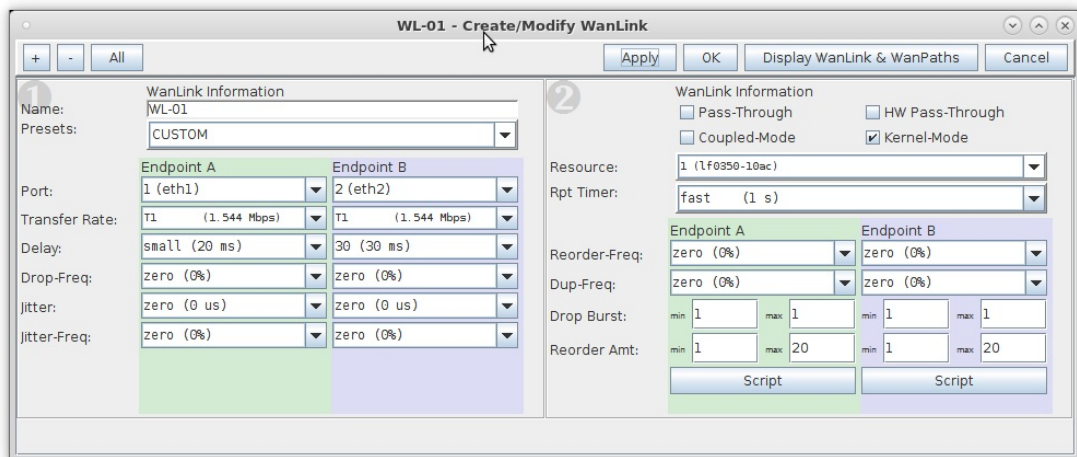


- A. To simulate a WAN, enter a specific amount of delay or other impairment
- B. For this example, enter 20ms of delay for Entry Point A and 30ms of delay for Entry Point B
- C. Be sure to set the correct ports and transfer rate for each Entry Point
- D. Click **OK** when done


C. Verify the WanLink was created

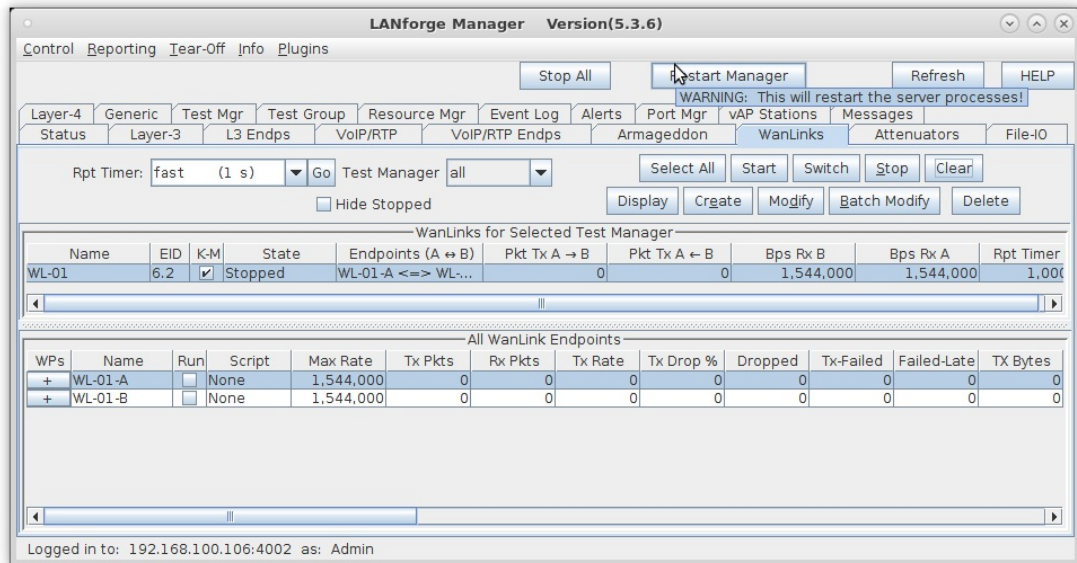

D. Go to the **Status** tab and click **NetSmith** to view the graphical representation of the WanLink

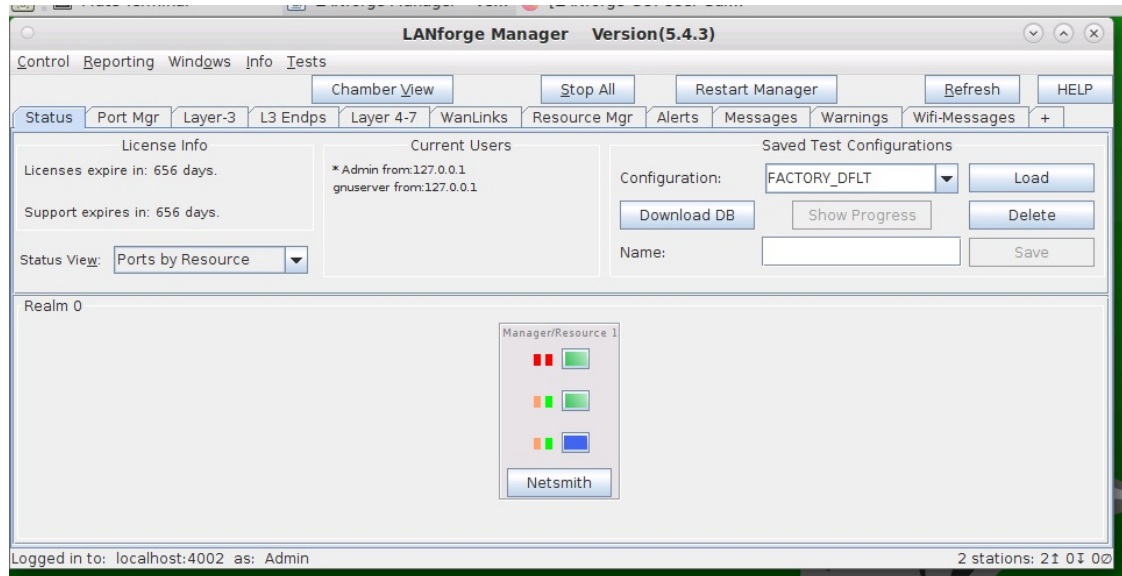


E. This is the general form of a Bridged Mode WanLink in Netsmith. It consists of two 0.0.0.0 IP addressed ports with a vertical bar between them.

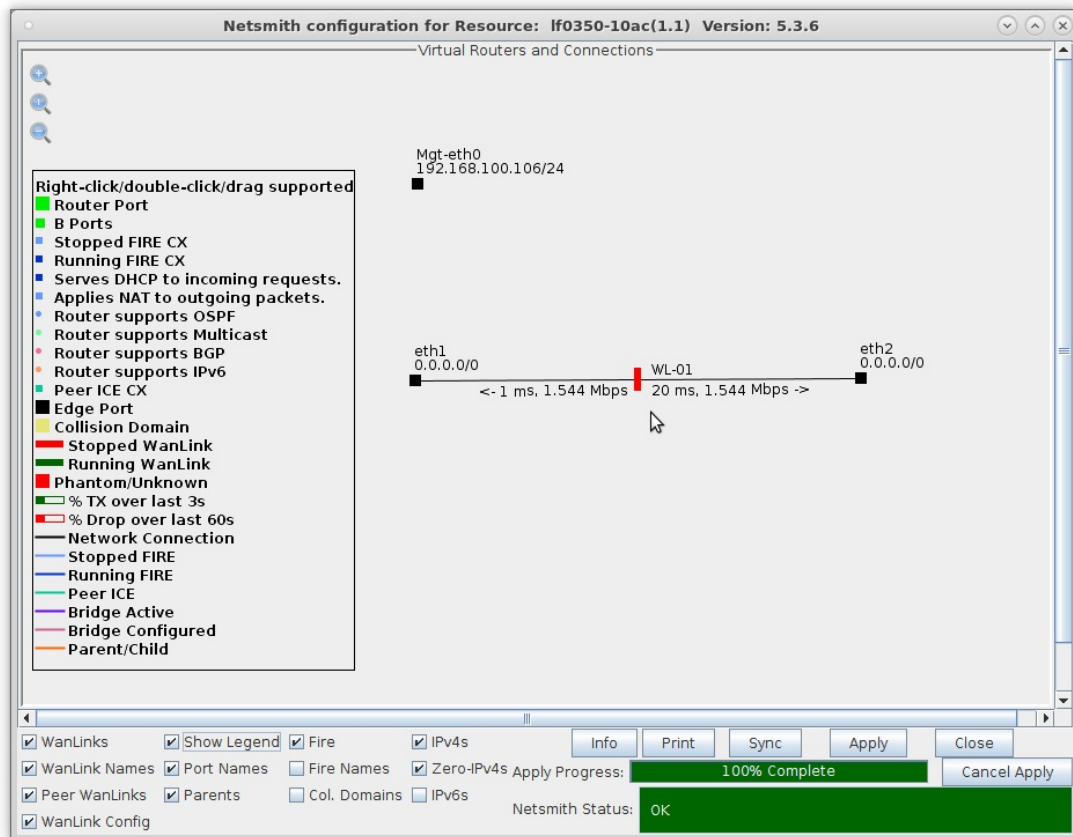


For more information see [LANforge-GUI User Guide: WanLinks \(ICE\)](#)

3. Run traffic and verify results.

- A. Right-click on the WanLink and select **Toggle WanLink** to allow traffic to flow from a transmitting device to a receiving device

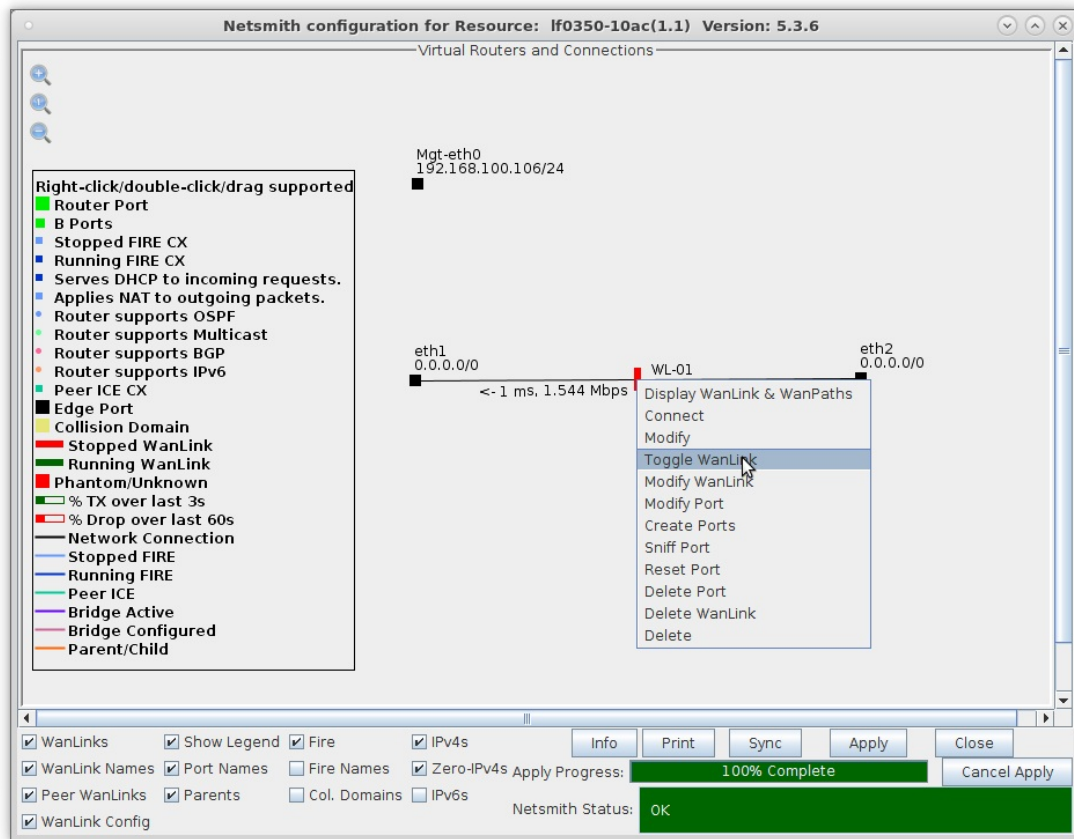


- B. The transmitting/receiving devices can be just about anything that generates and receives traffic such as a web server and client or a pair of LANforge-FIRE ports.

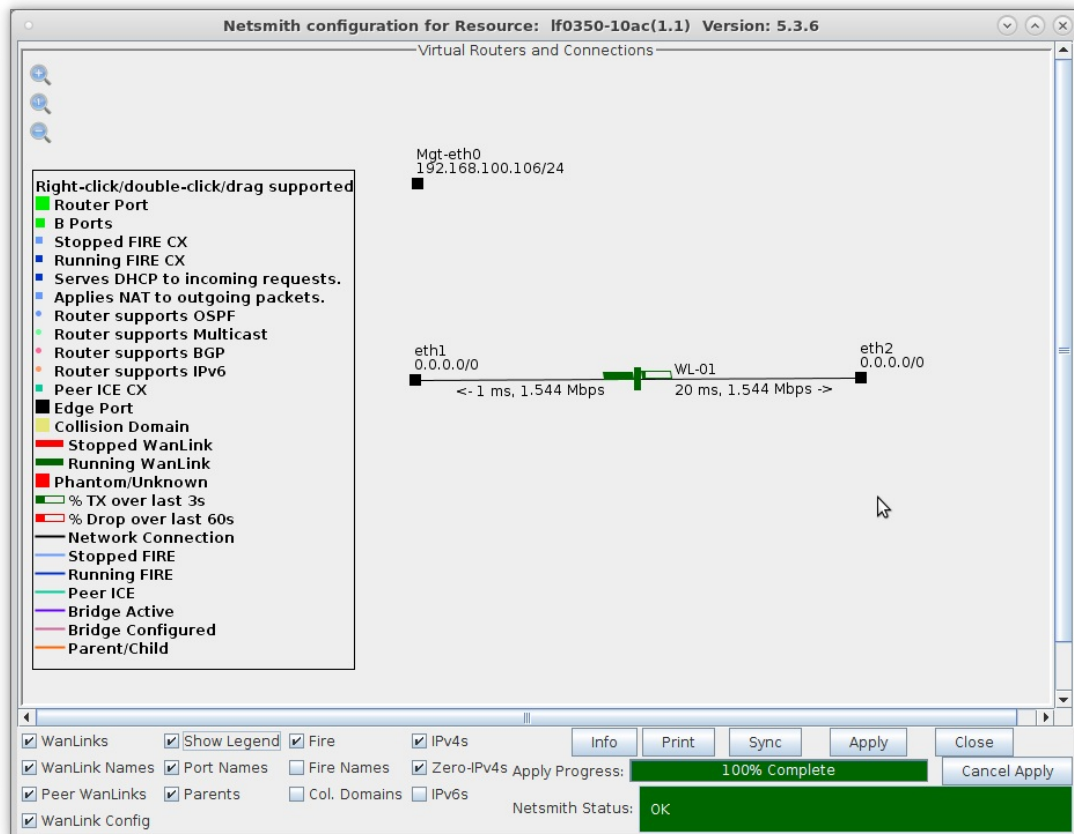


- A. Right-click the WanLink and select **Display WanLink**

C. View the WanLink display

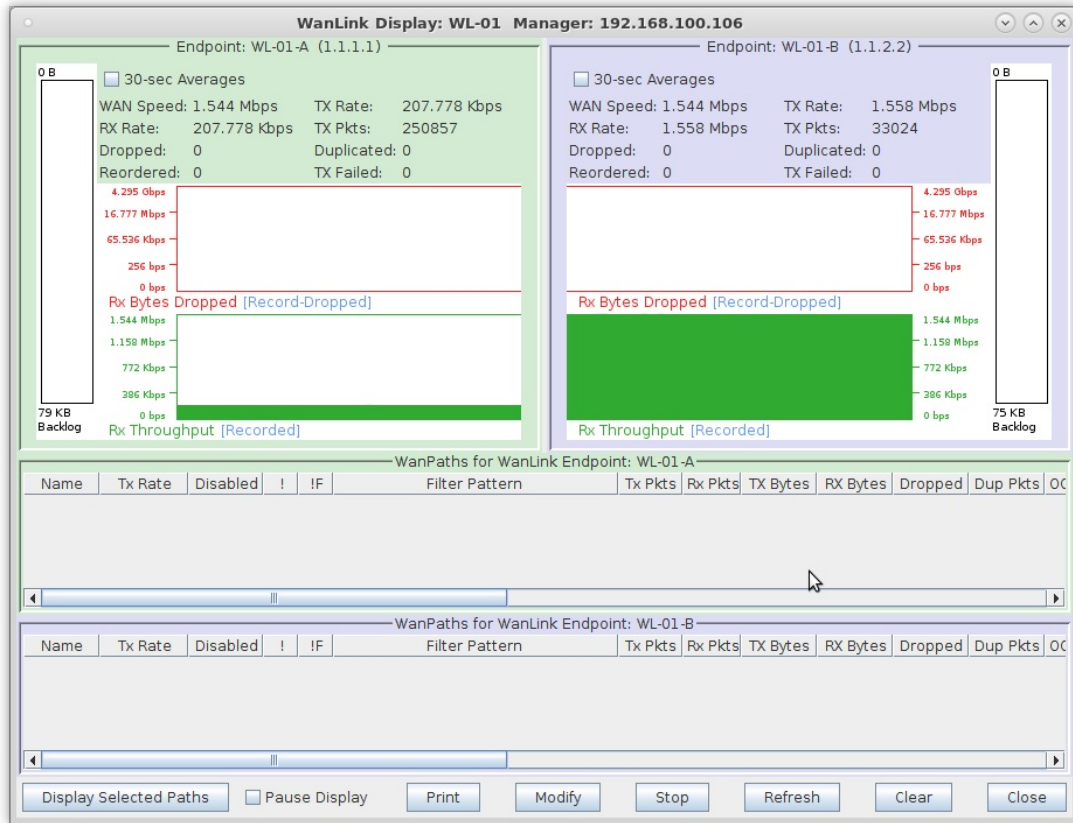

For more information see [Refer to the LANforge FIRE Cookbook to run traffic.](#)

4. View the **WanLinks** tab

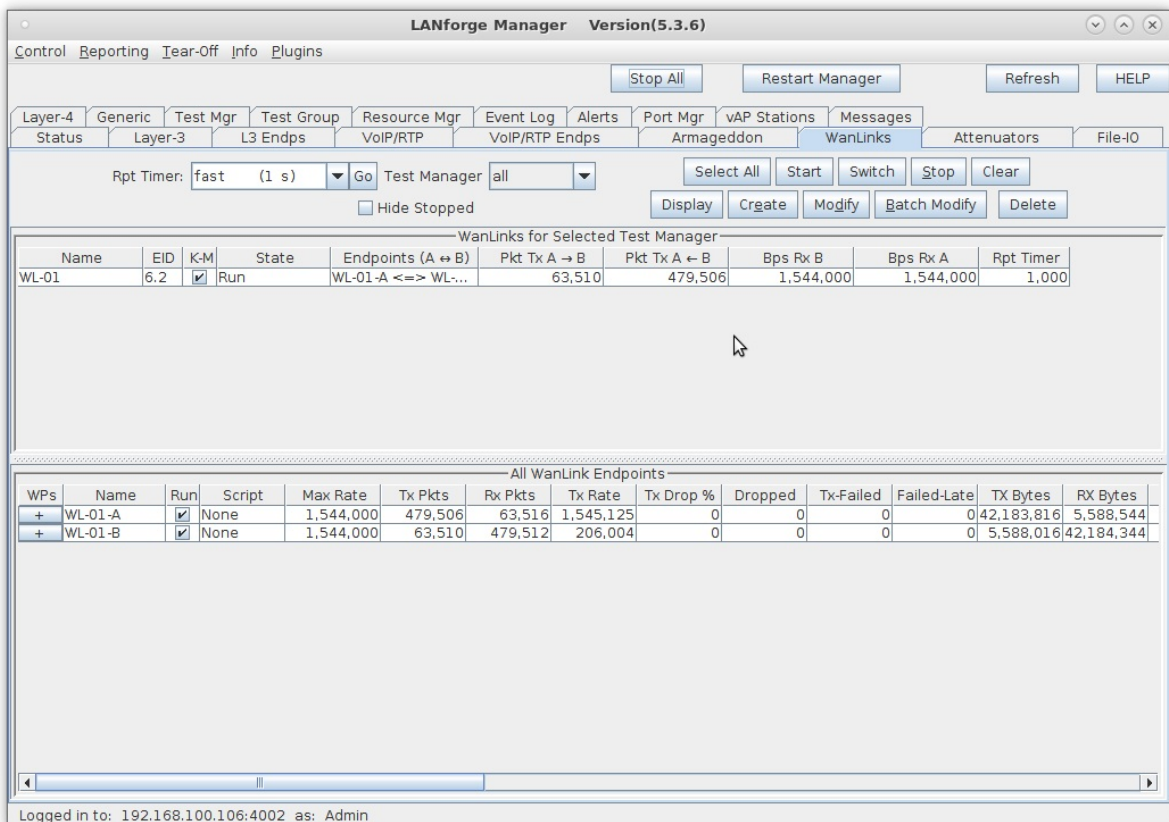

A. Selecting a WanLink automatically selects the WanLink Endpoints on the bottom panel

- B. Scroll to the right on the bottom panel to note the Serialization Delay (delay injected by LANforge to account for packet size and transfer rate). Also, the WanLink must have a high enough transfer rate to pass all the traffic. In other words, if a layer-3 connection is sending 100Mbps of traffic, the WanLink must allow at least 100Mbps transfer rate
- C. In this case, $SD = (1514 \text{ bytes} * 8 \text{ bits/byte}) / 1.544\text{Mbps} = 7.8\text{ms}$
- D. The total delay as experienced by the transmitting/receiving device is the sum of the WanLink configured delay and the serialization delay which in this case would be about 28ms in one direction and 38ms in the other.

For more information see [LANforge FAQ: Serialization Delay](#)


Bridged Mode WanLink with Virtual Ports and Redirect Devices

Goal: Setup a Bridged Mode WanLink using RDDs (Redirect Devices).


In this test scenario, a LANforge-ICE WanLink is created in Bridged Mode using Redirect Devices to illustrate an example of how to send LANforge-FIRE traffic to yourself through LANforge-ICE. This is useful when physical ports are in short supply and a proof-of-concept test is needed. NOTE: THIS WILL NOT WORK PROPERLY WITHOUT THE INSTALLATION OF THE CANDELA KERNEL.

1. Setup a Netsmith Connection.


- A. Go to the **Status** tab and click **Netsmith**

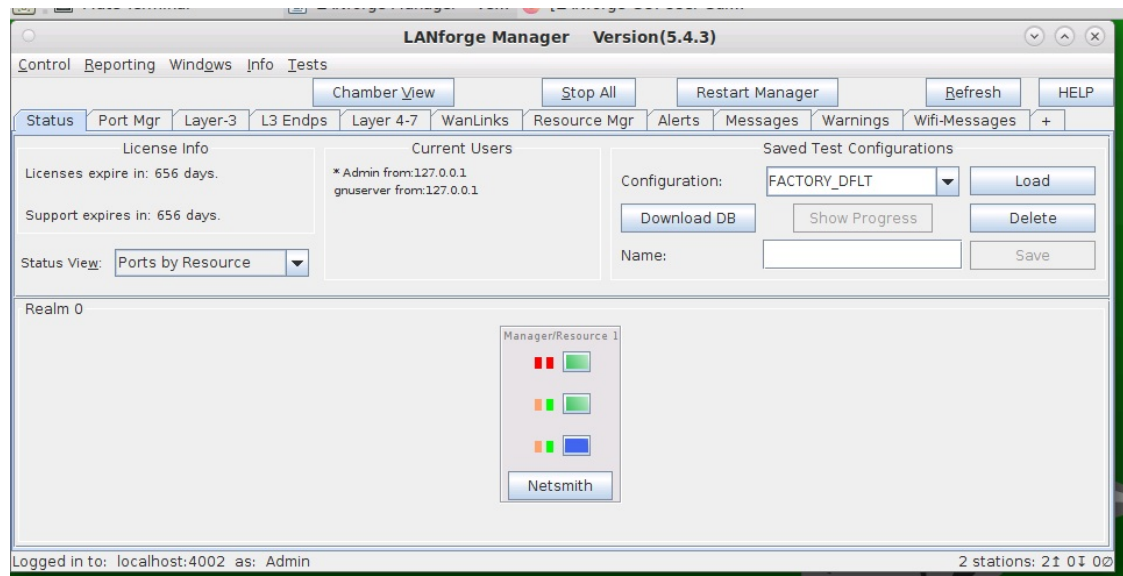

B. Right-click inside the Netsmith window and select **New Connection**

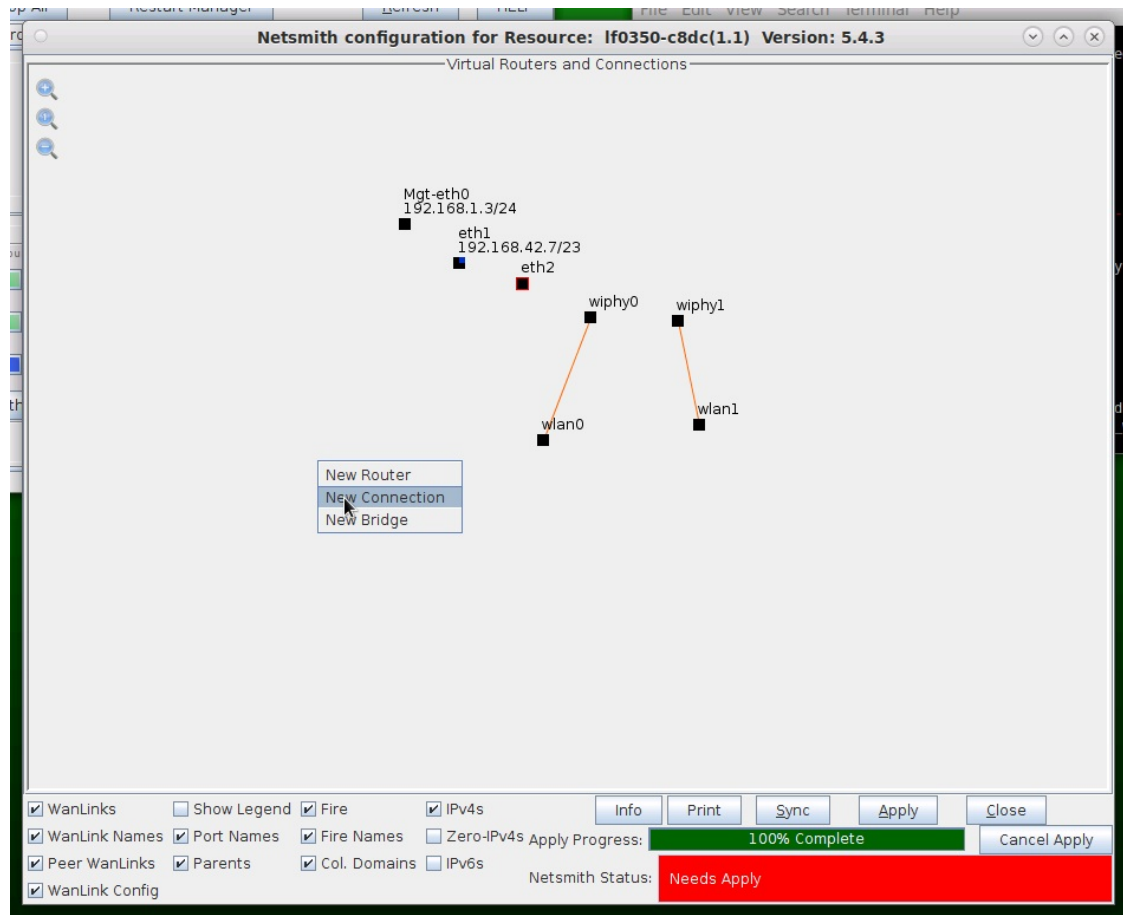


C. Accept defaults, Auto Create everything and click **OK**

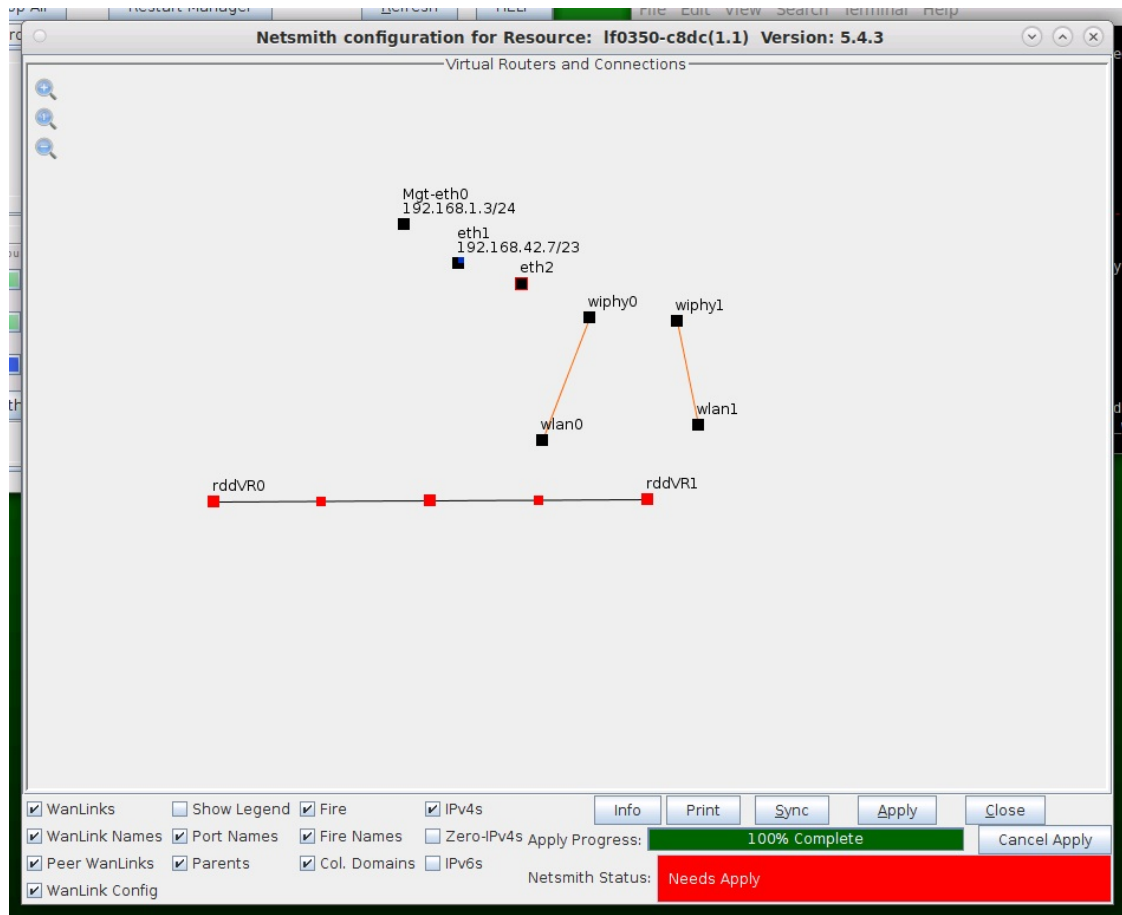

A. **NOTE:** The new connection consists of two pairs of Redirect Devices, Port 1A, 1B and Port 2A, 2B and a WanLink. The new connection is not created until you click the **Apply** button in the Netsmith window.

D. Apply the new connection

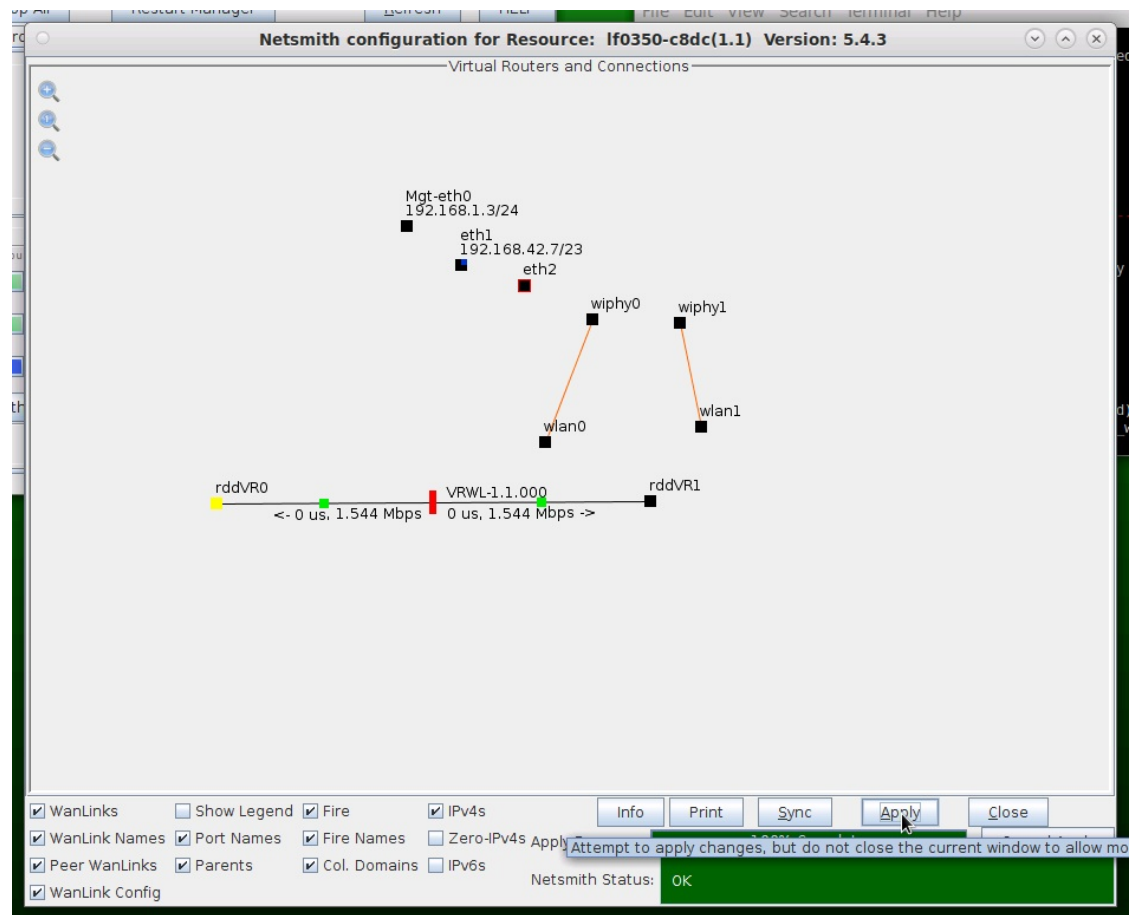


- A. **NOTE:** The new connection is created and has a Bridged Mode WanLink between Redirect Device ports 1B and 2B which are shown as smaller, green squares (B-Ports) connected by a vertical bar (WanLink).


For more information see [LANforge-GUI User Guide: Virtual Interfaces](#)

2. Setup the WanLink.

A. Right-click the WanLink and select **Modify WanLink**

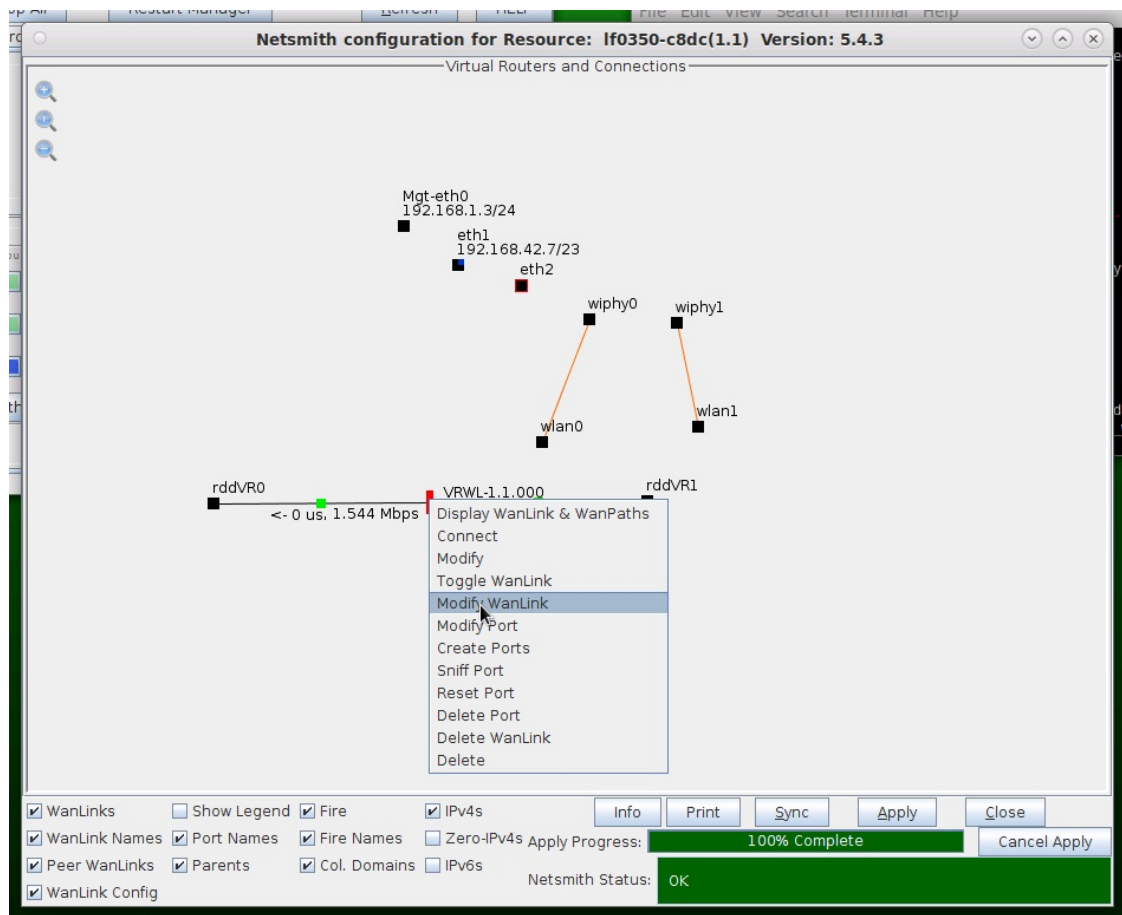


B. Verify that the B-side ports of the Redirect Device pairs (rddvR0b and rddvR1b) are configured

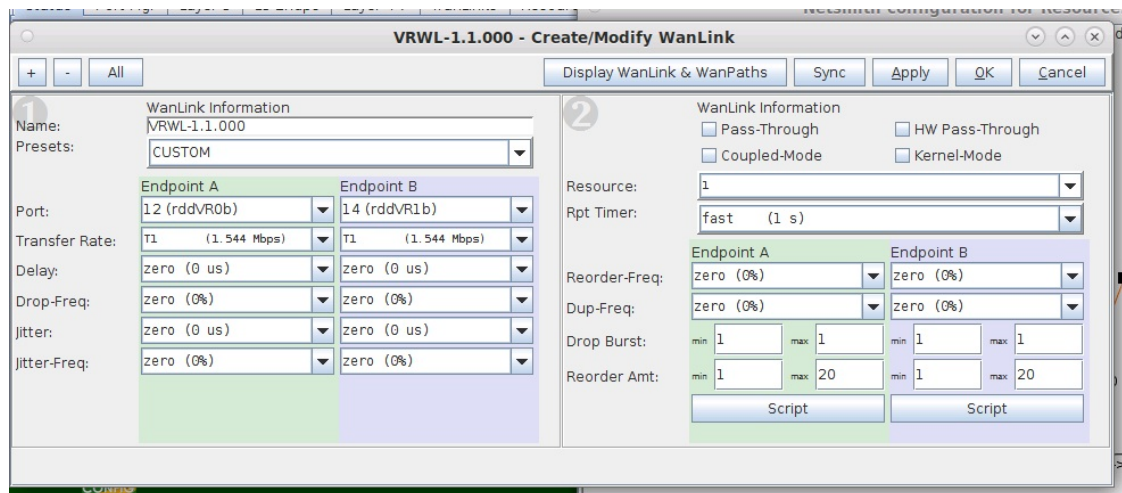

A. **NOTE:** Be sure to set the impairment, if any, and transfer rate

B. Click **OK** when done


C. Right-click on the WanLink and select **Toggle WanLink** to Running (green)

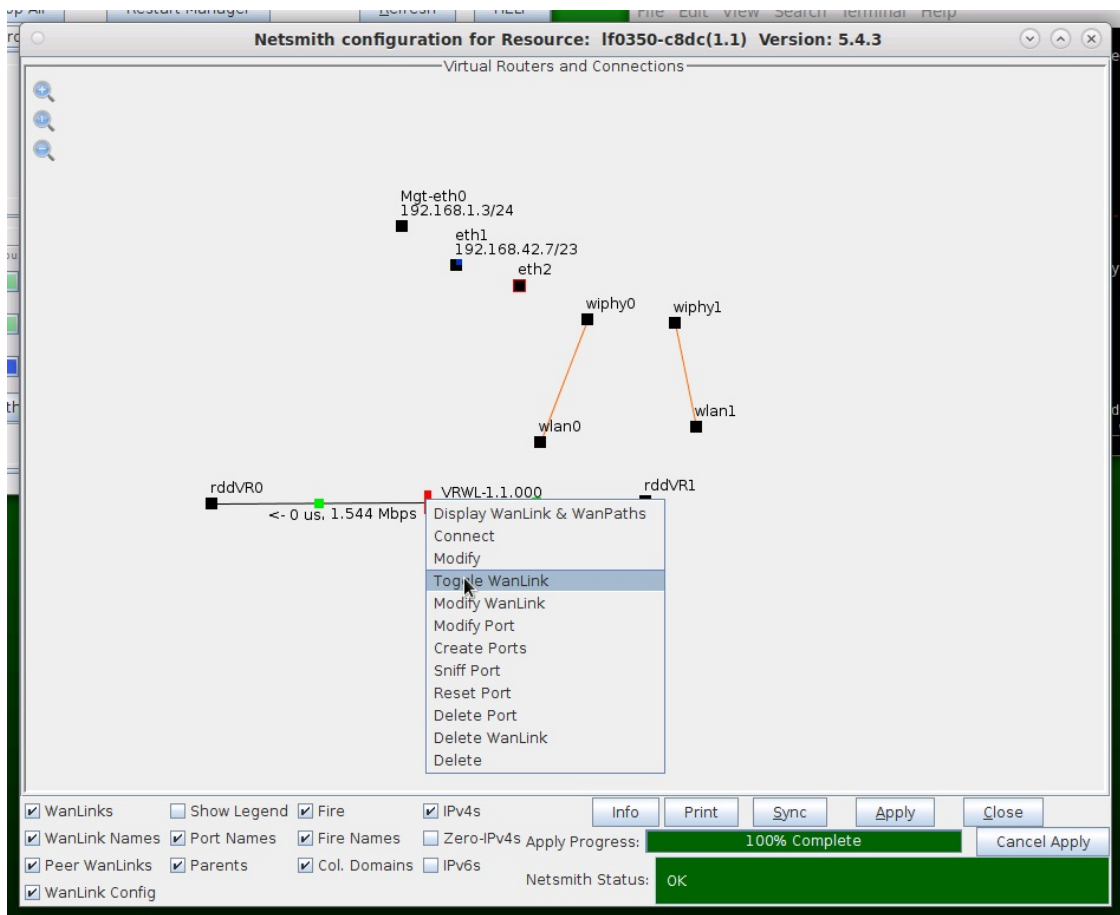


For more information see [LANforge-GUI User Guide: WanLinks \(ICE\)](#)

3. Setup the ports.


A. Right-click port rddVR0 and select **Modify Port**

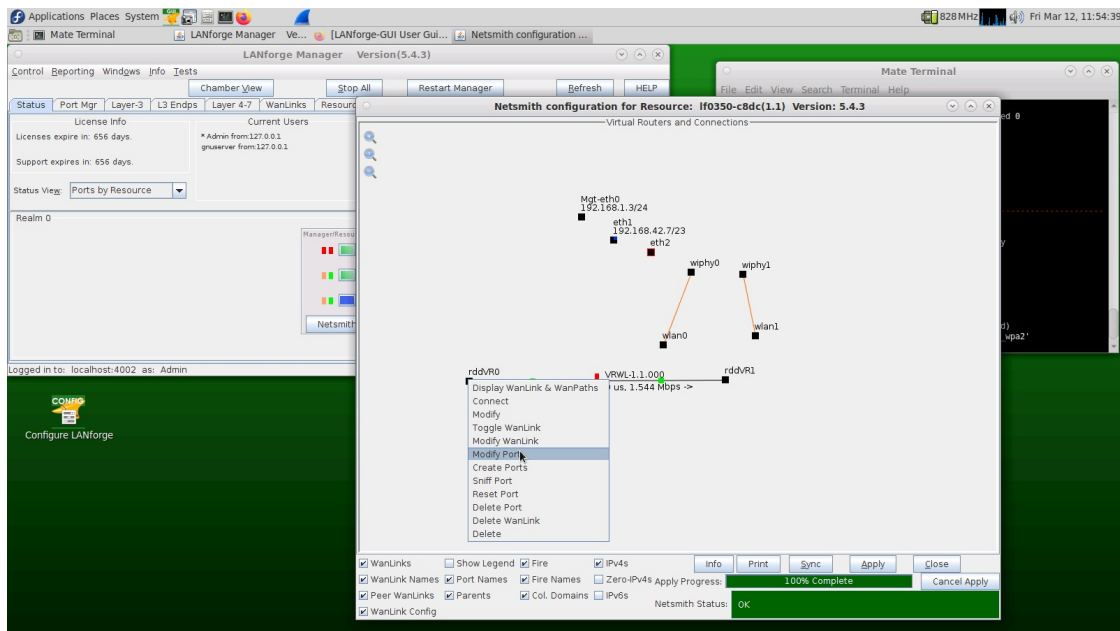


B. Assign an IP address and Network Mask to rddVR0

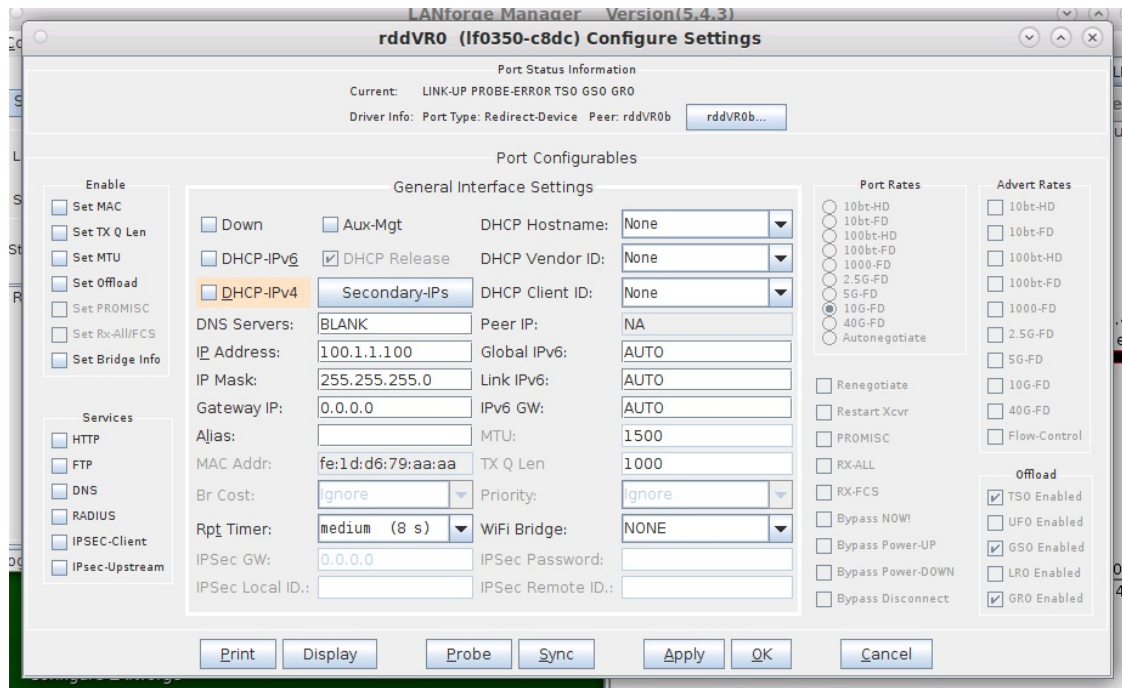

C. Right-click port rddVR1 and select **Modify Port**

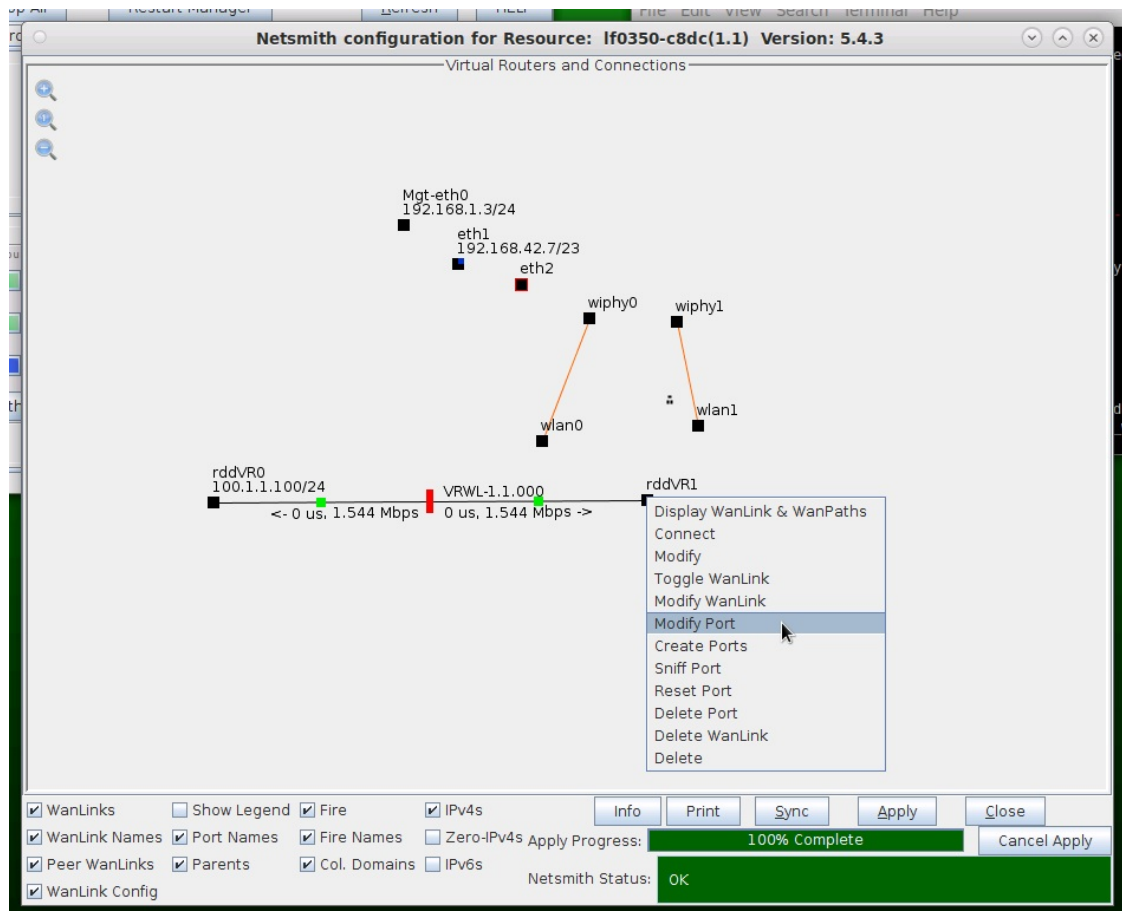


D. Assign an IP address and Network Mask to rddVR1

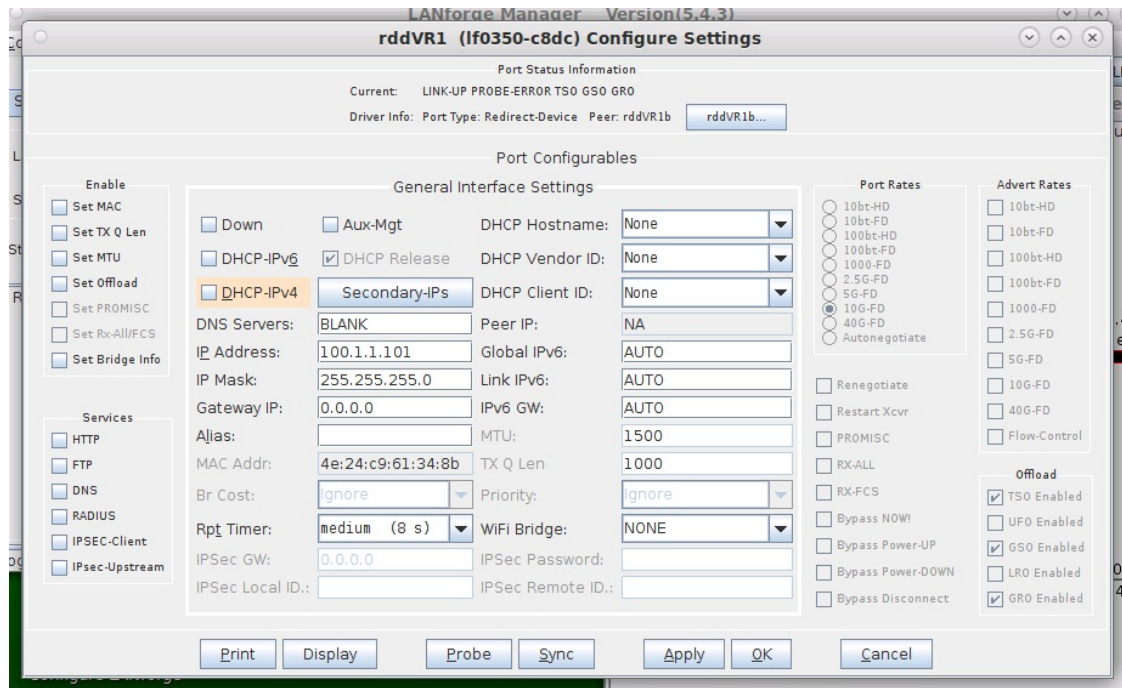


A. **NOTE:** As an alternate method to set Network Mask, enter a / followed by the number of mask bits after the IP address. In this case, /24 is equivalent to 255.255.255.0

E. Select the **IPv4s** checkbox at the bottom of the Netsmith window to verify port configuration

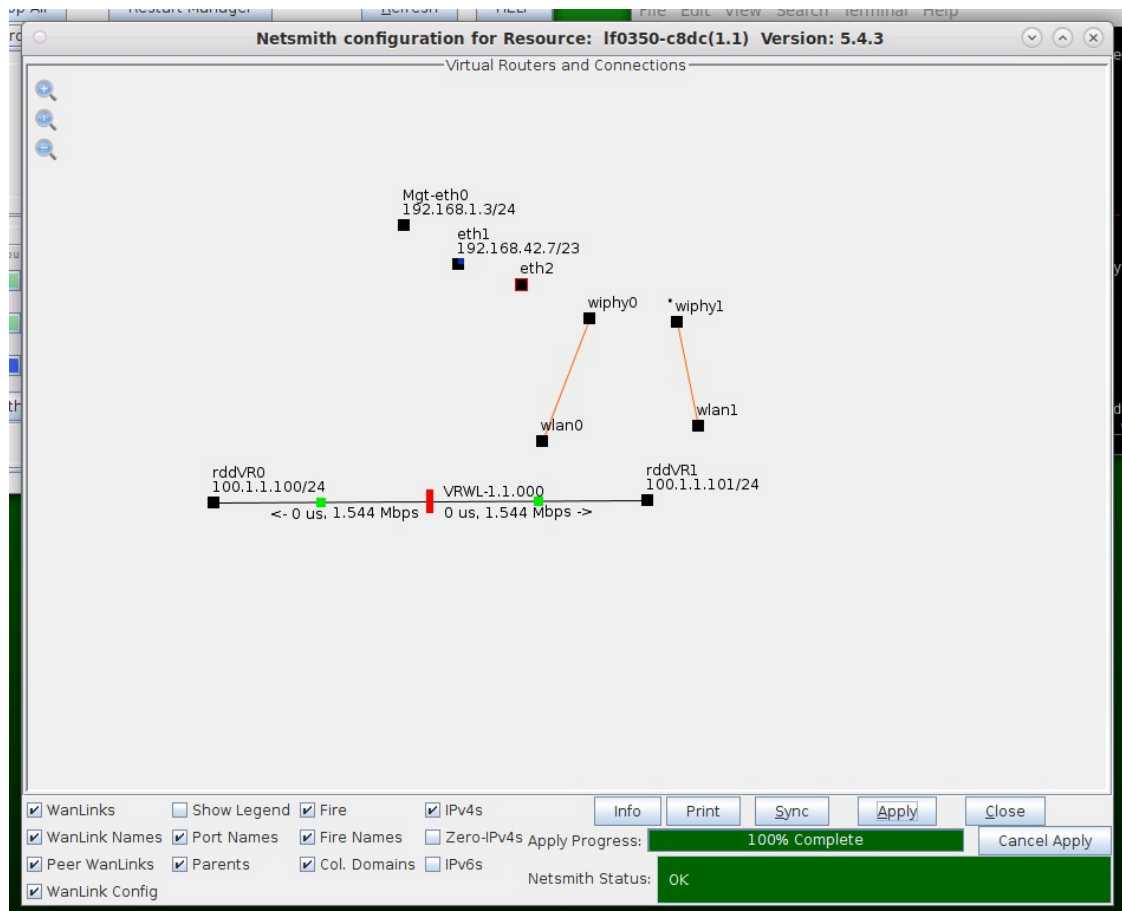

F. Go to the **Port Mgr** tab to verify port configuration

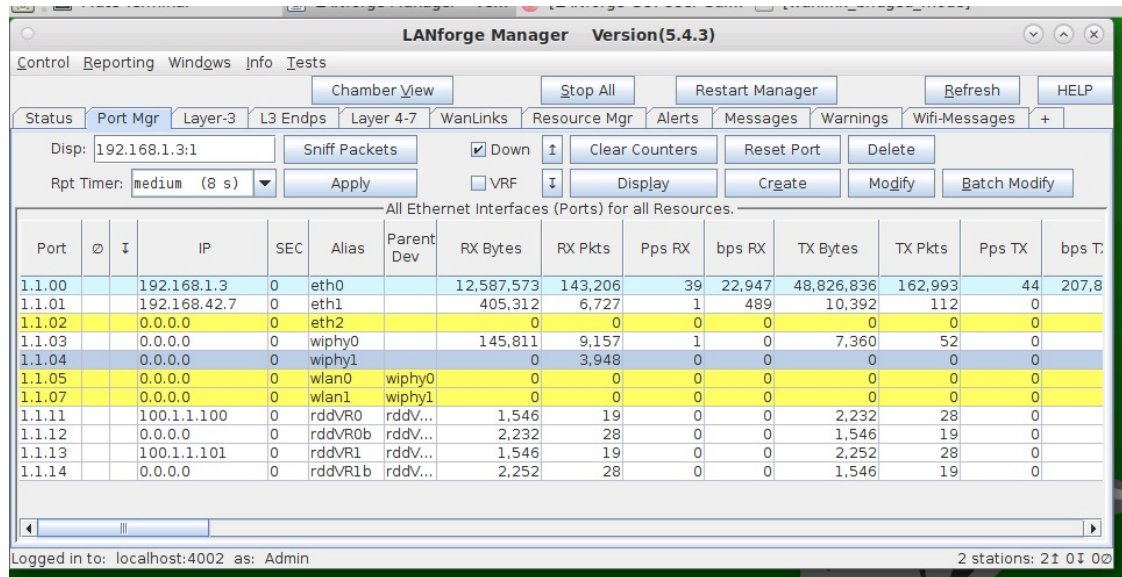


A. **NOTE:** The Bridged Mode WanLink is connected between rddVR0b and rddVR1b which both have 0.0.0.0 IP addresses


For more information see [LANforge-GUI User Guide: Ports \(Interfaces\)](#)

4. Create a Layer-3 Connection.

A. Go to the **Layer-3** tab and click **Create**

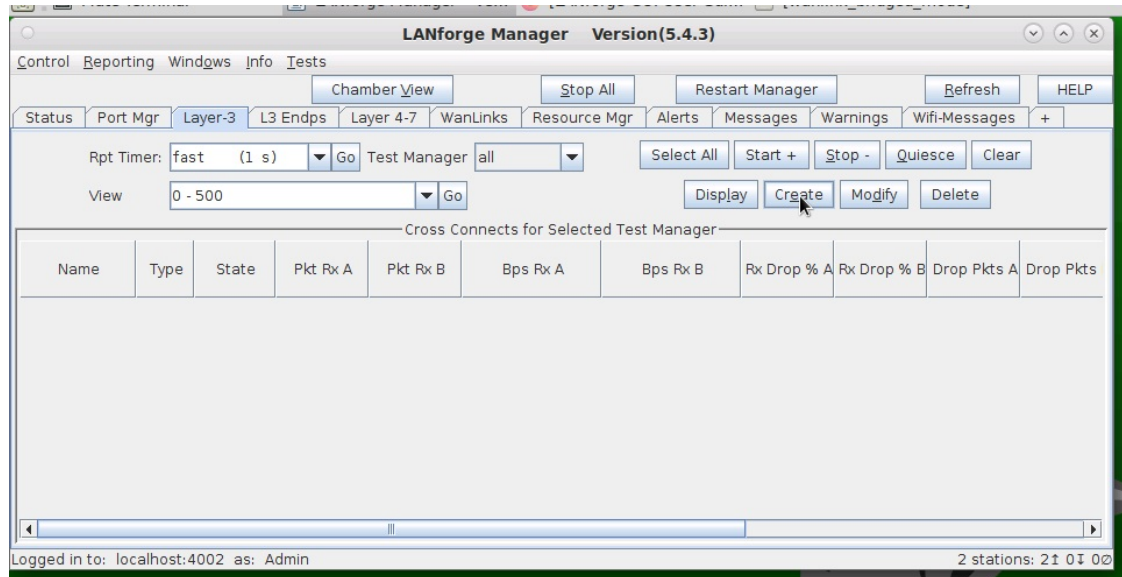


B. The RDD-FIRE connection will use the A-side of the Redirect Device pairs

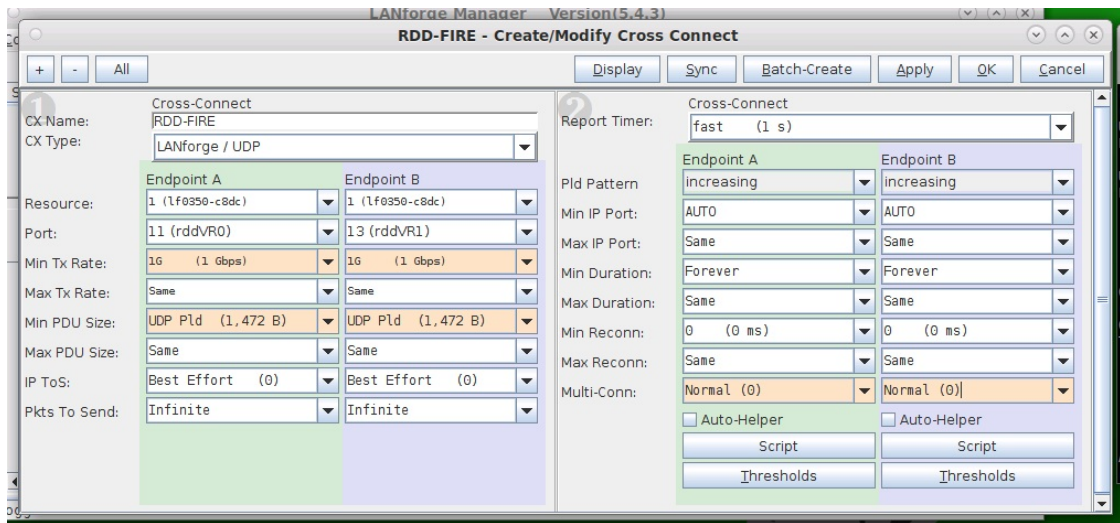

A. **NOTE:** These are the ports rddVR0 and rddVR1 that were assigned IP addresses in step 2


C. Verify the Layer-3 connection was created

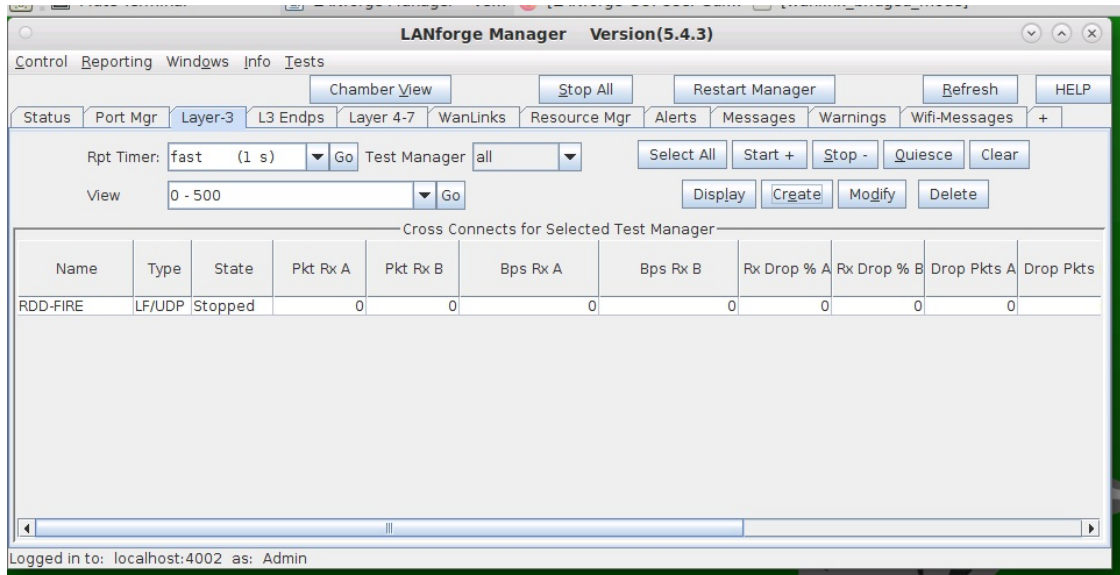


For more information see [LANforge-GUI User Guide: Layer-3 Cross Connects \(FIRE\)](#)

5. Run LANforge-FIRE to yourself through LANforge-ICE1


A. Select the Layer-3 Cross Connect and click **Start**

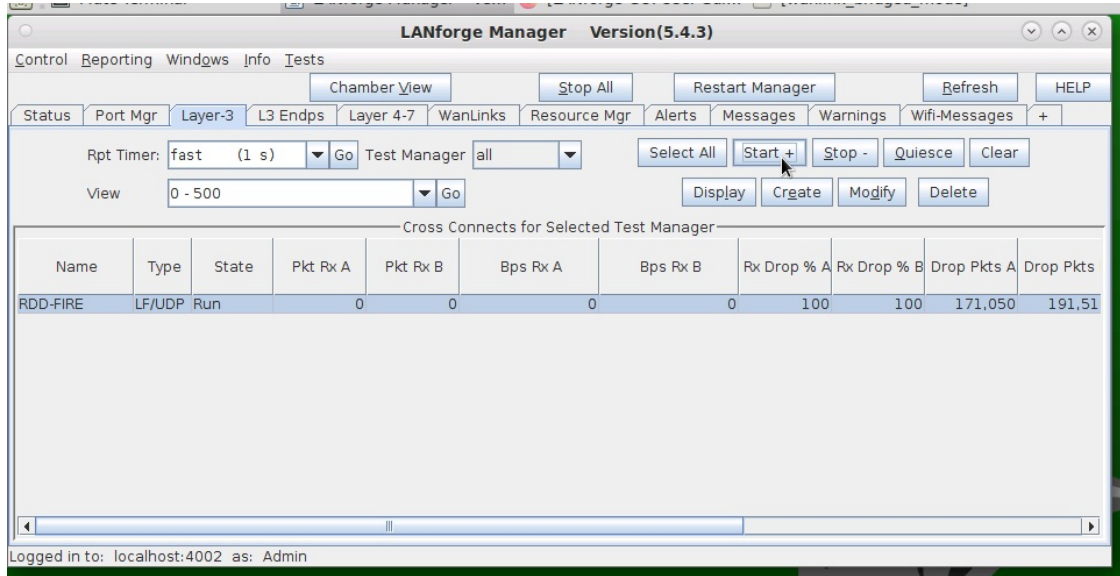


B. Click **Display** to show the Layer-3 Cross Connect details

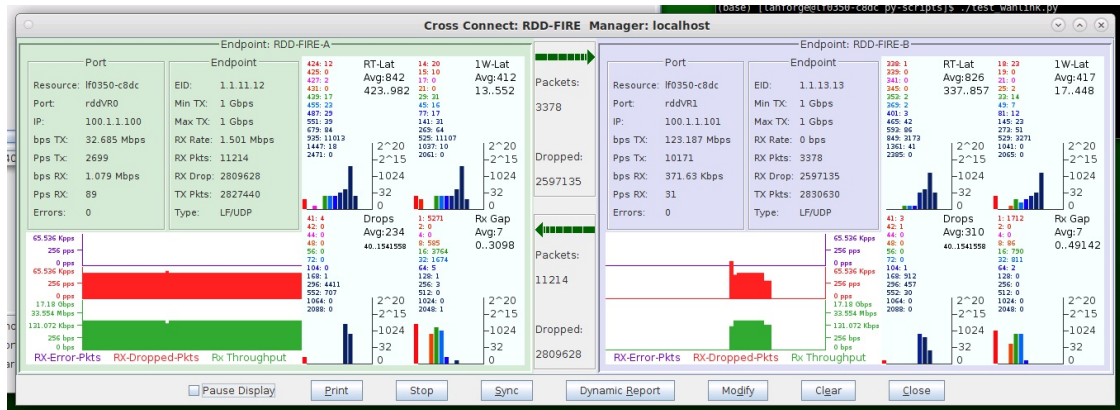

C. Go to the **Status** tab and click **Netsmith** to view the graphical representation of the setup

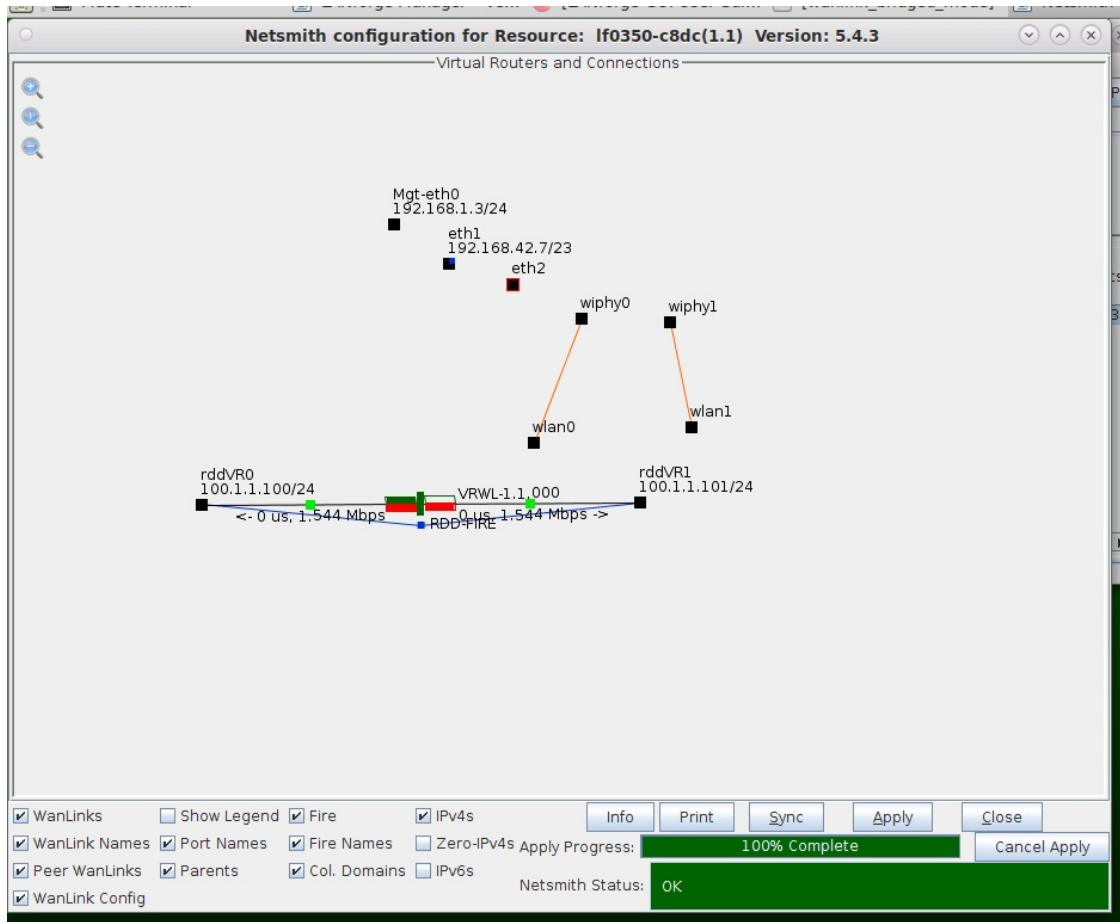

D. Right-click on the WanLink and select **Display WanLink** to display the WanLink details

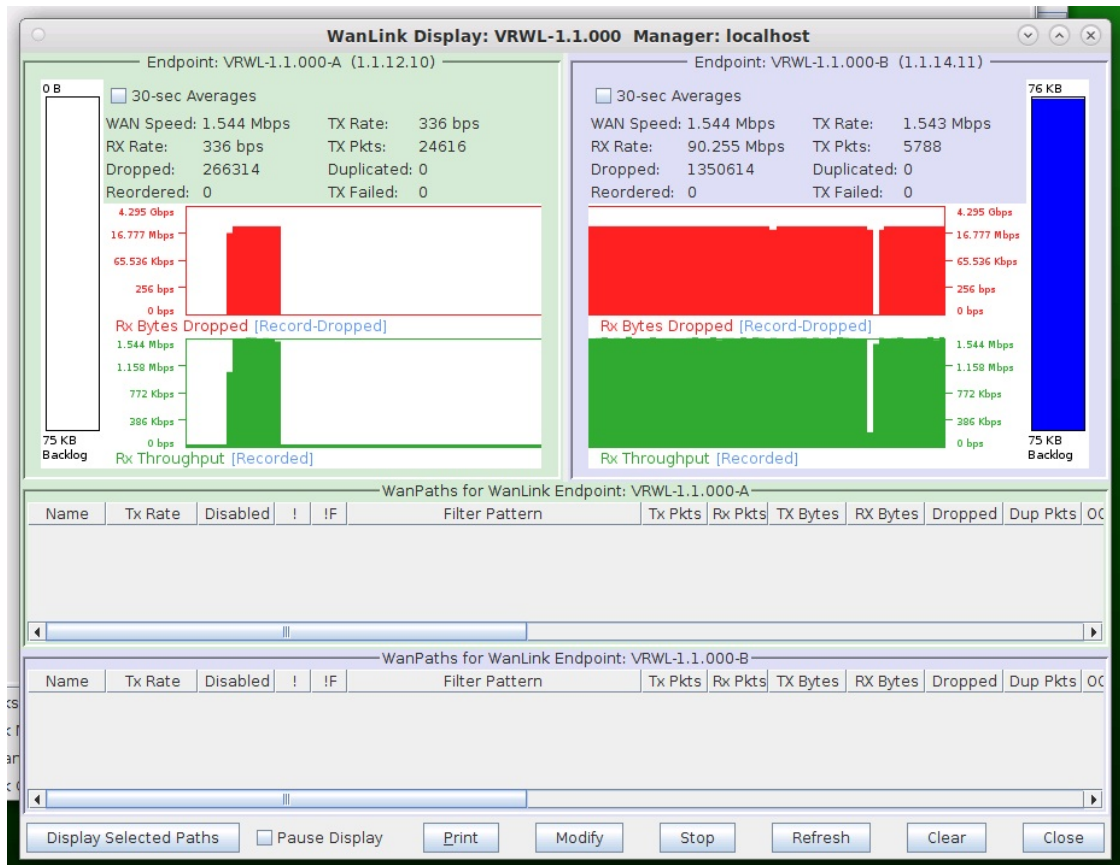


Routed Mode WanLinks with Virtual Routers


Goal: Setup a Routed Mode WanLink between two Virtual Routers.

In this test scenario, LANforge-ICE is used to simulate a routed network where incoming traffic on one port is sent through one Virtual Router then through a WanLink, then through a second Virtual Router and then finally out to a port on a different network.


1. Setup a Netsmith Connection.
 - A. Go to the **Status** tab and click **Netsmith**

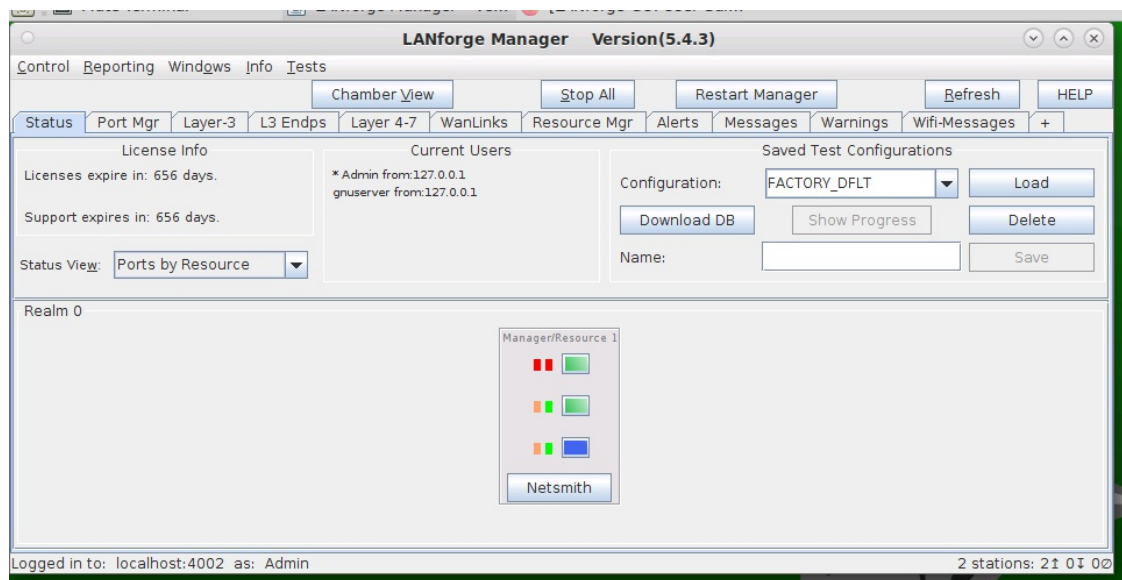


B. Right-click in the Netsmith window and select **New Connection**

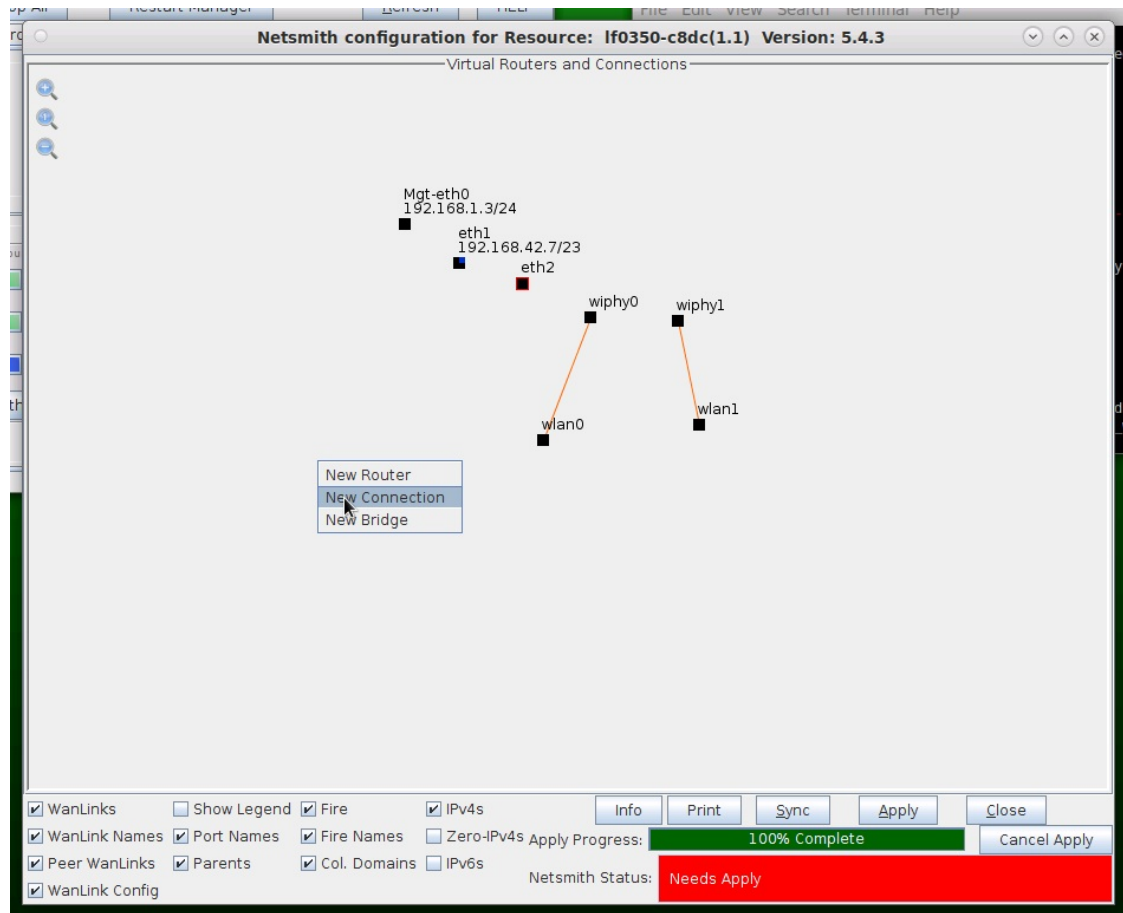

C. Accept defaults, Auto Create everything then click **OK**

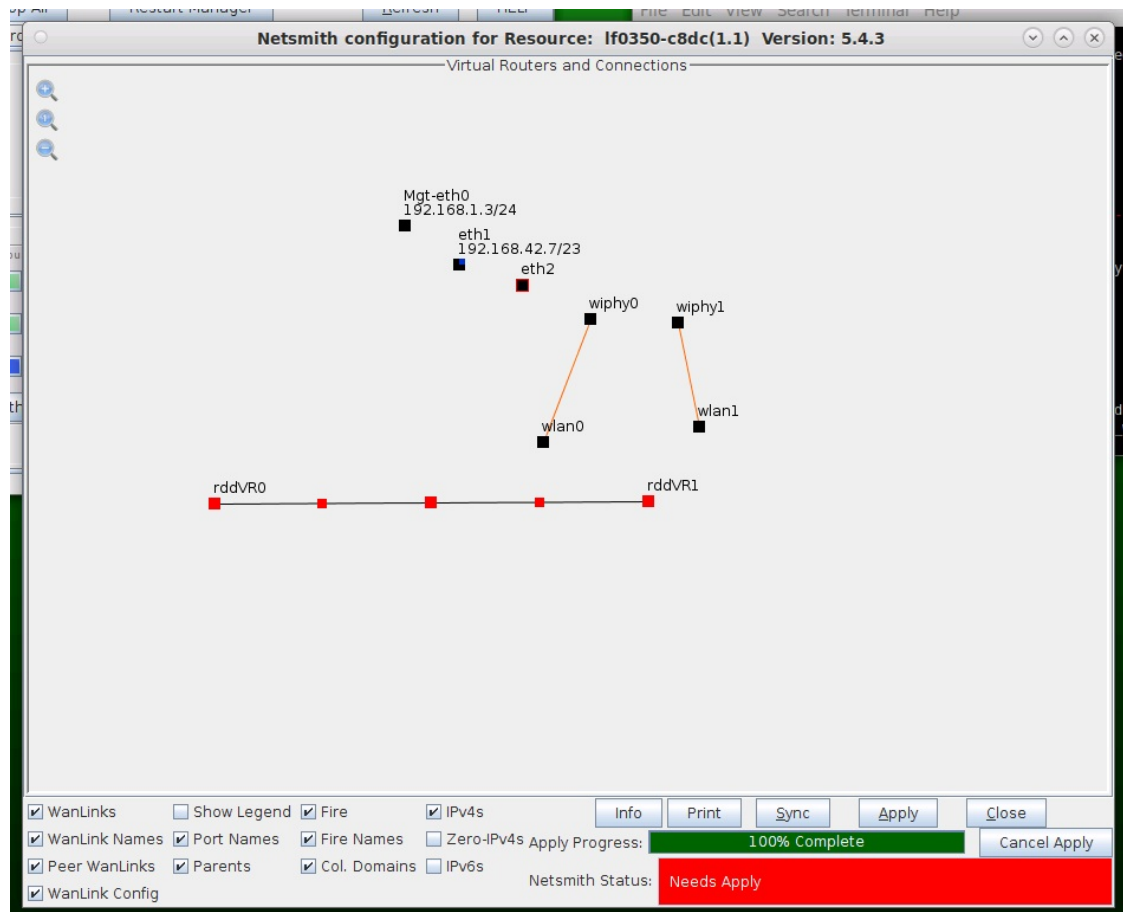


D. Click **Apply** in the Netsmith window to create the connection

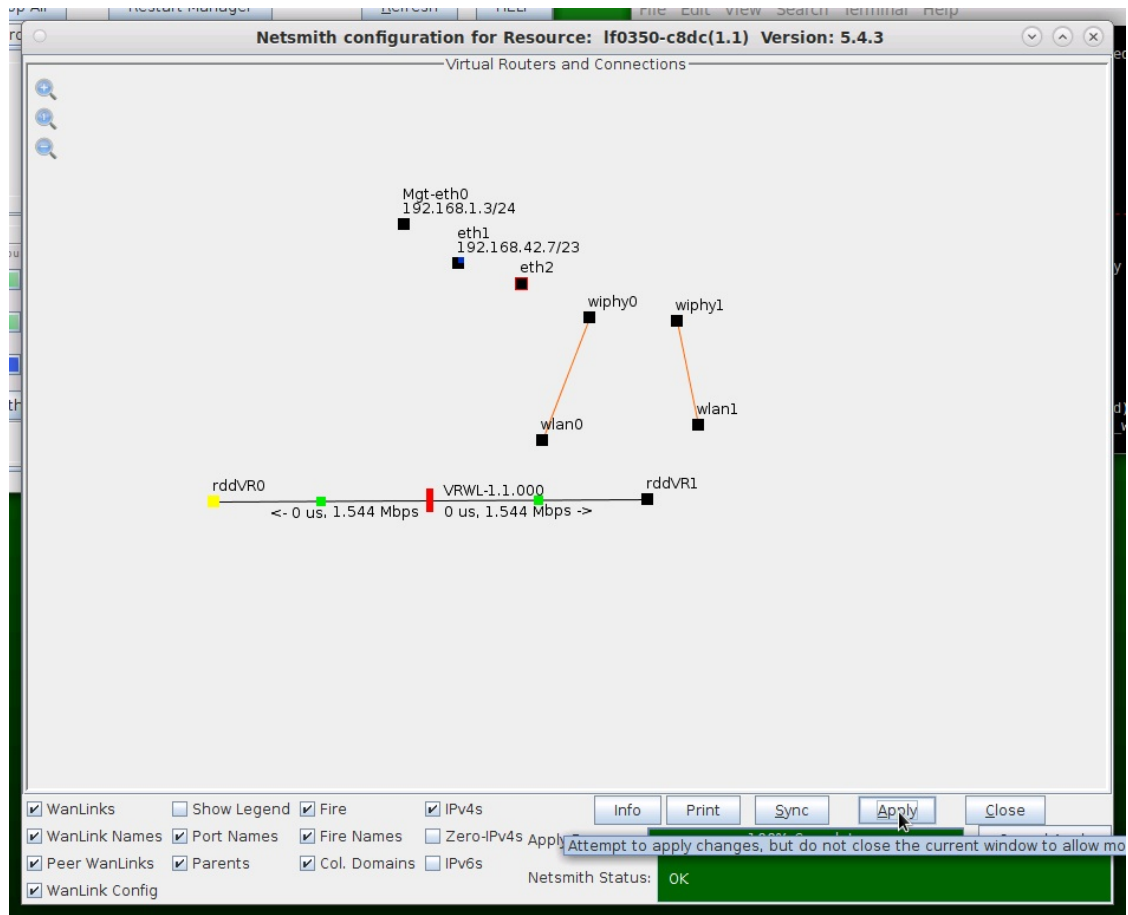


For more information see [LANforge-GUI User Guide: Netsmith](#)

2. Setup two Virtual Routers.

A. Right-click in the Netsmith window and select **New Router**

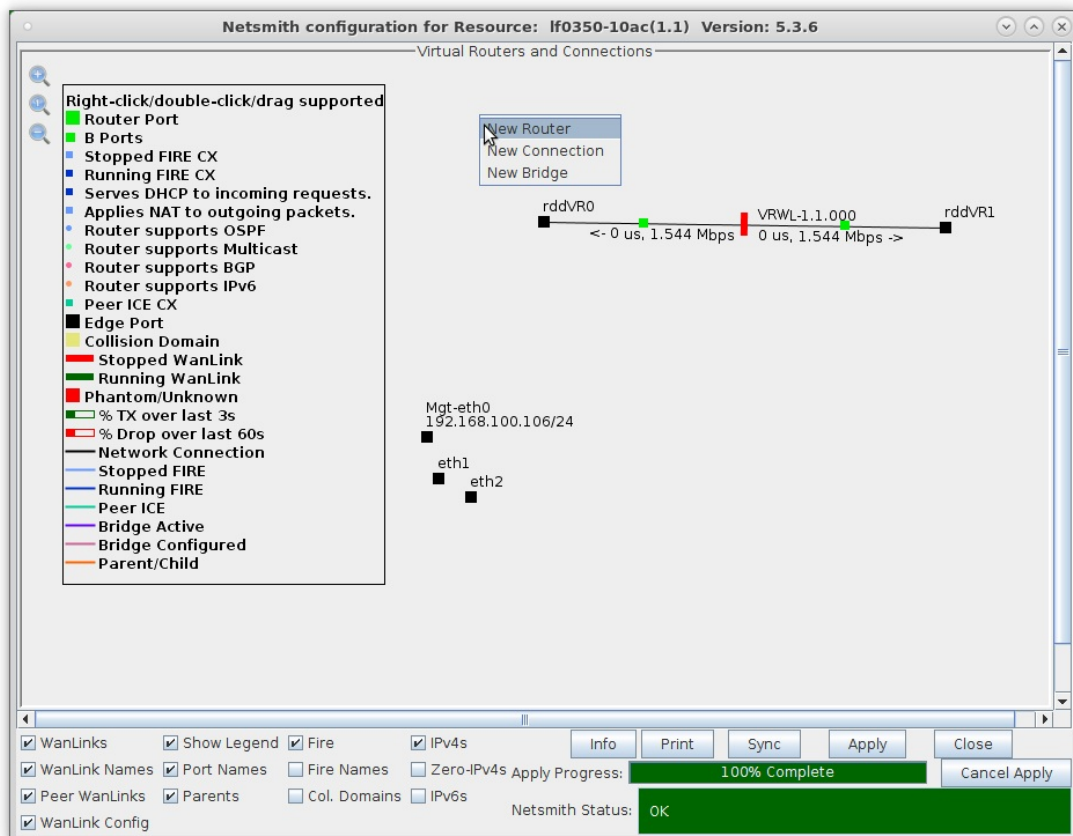


B. Accept defaults, or change the name, graphical size and notes about the Virtual Router.

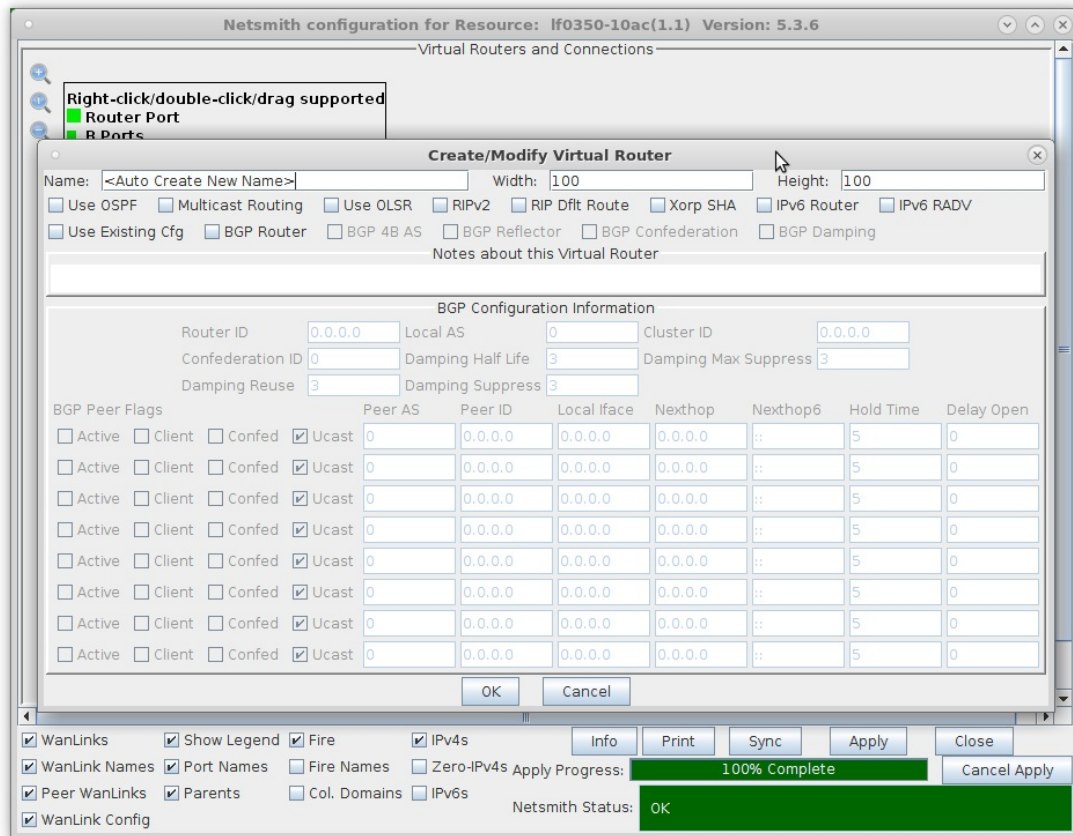


A. Click **OK** when done

C. Click the **Apply** button and repeat for the second Virtual Router

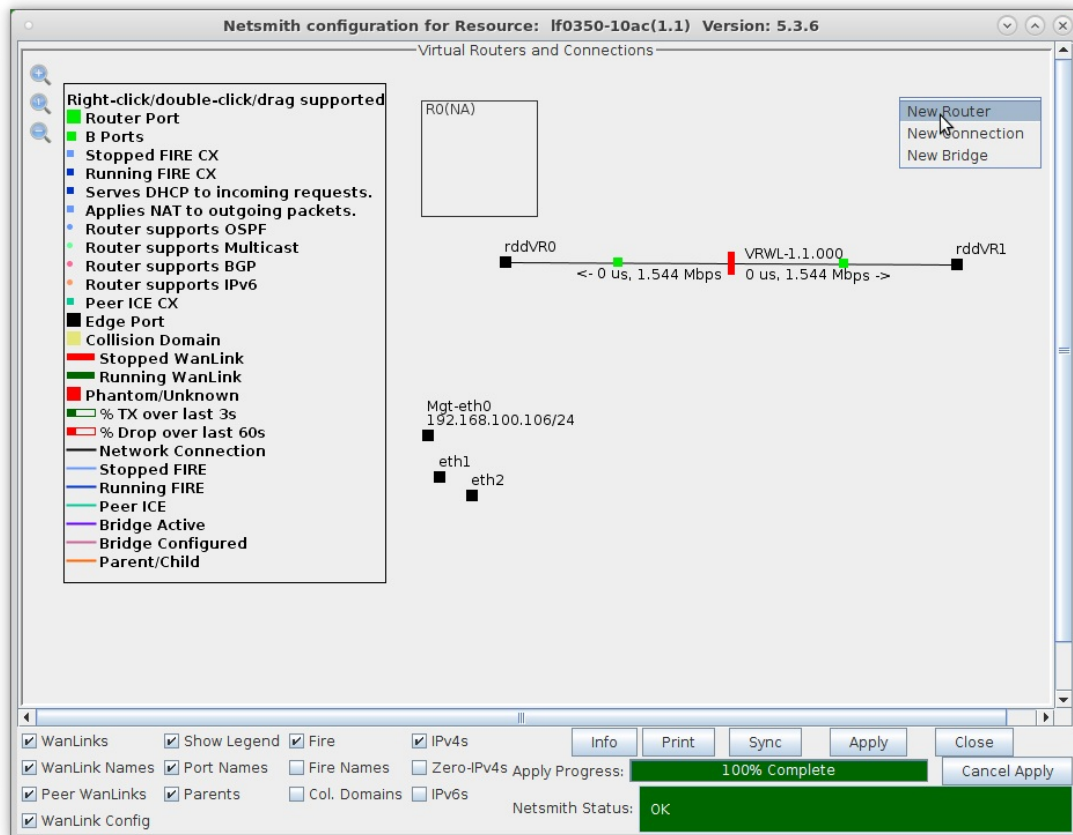

A. **NOTE:** After making any changes to the NetSmith window, you must click **Apply** or your changes will NOT be implemented and could be lost.

D. Click the **Apply** button followed by the **Sync** button

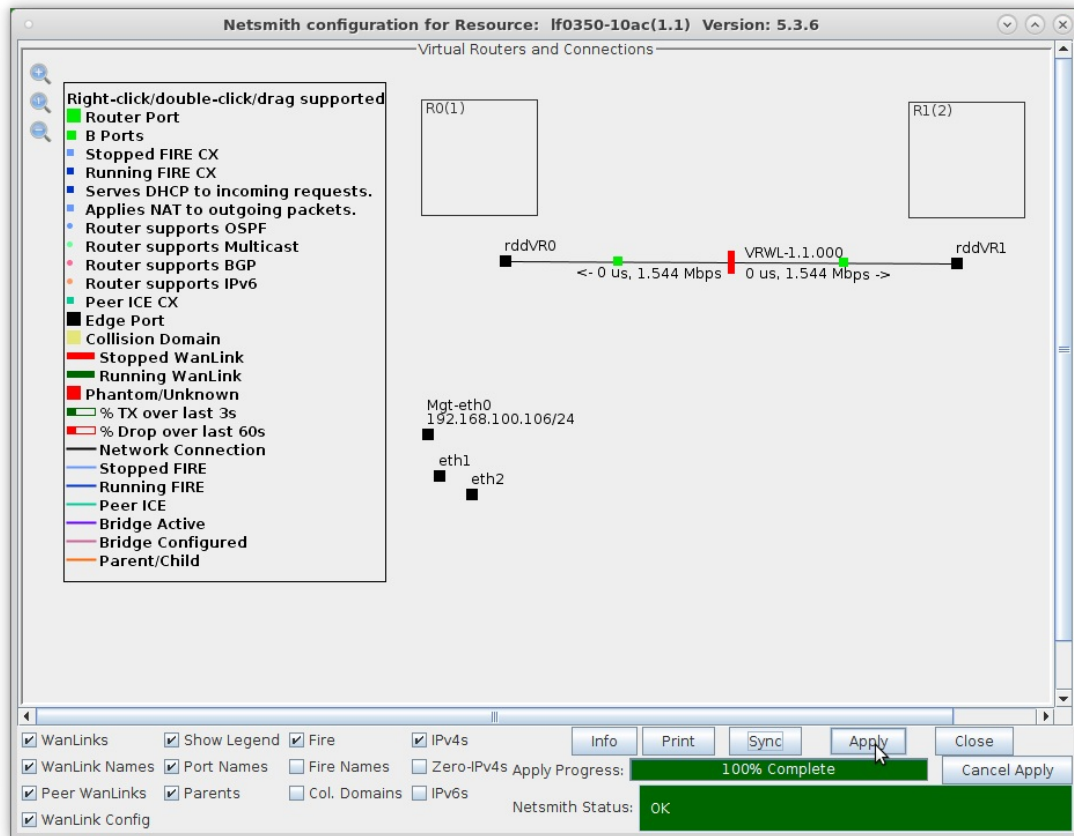


- A. **NOTE:** Clicking **Sync** makes sure any changes are synchronized with the current database.
- B. Also, note the Netsmith Apply Progress bar displayed at the bottom of the Netsmith window.


For more information see [LANforge-GUI User Guide: Netsmith](#)

3. Configure the ports on the ends of the WanLink.

A. Right-click port rddVR0 and select **Modify Port**

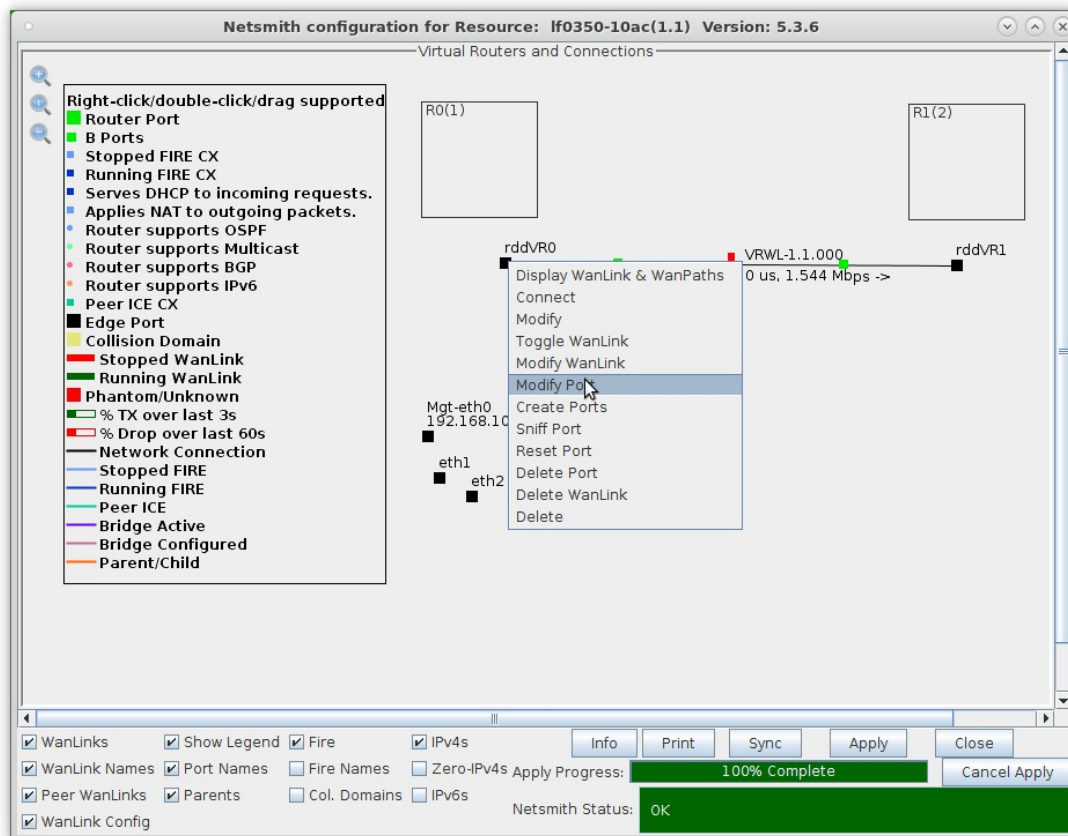


B. Assign an IP address and Network Mask.

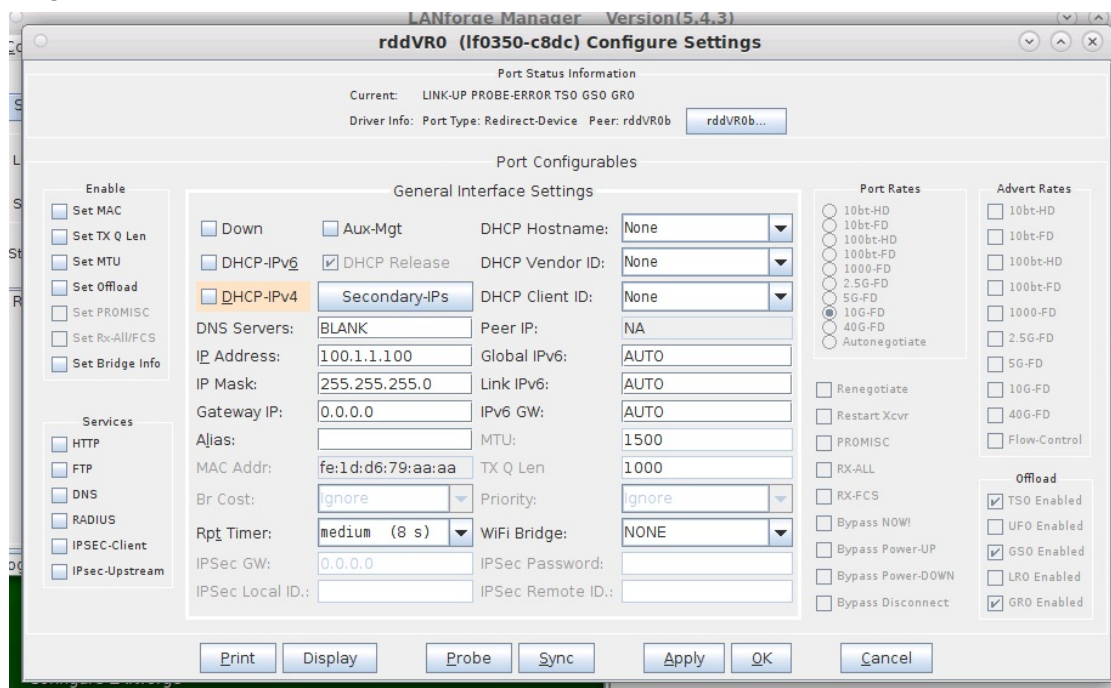


A. This example uses 10.1.1.100 and 255.255.255.0.

C. Right-click port rddVR1 and select **Modify Port**

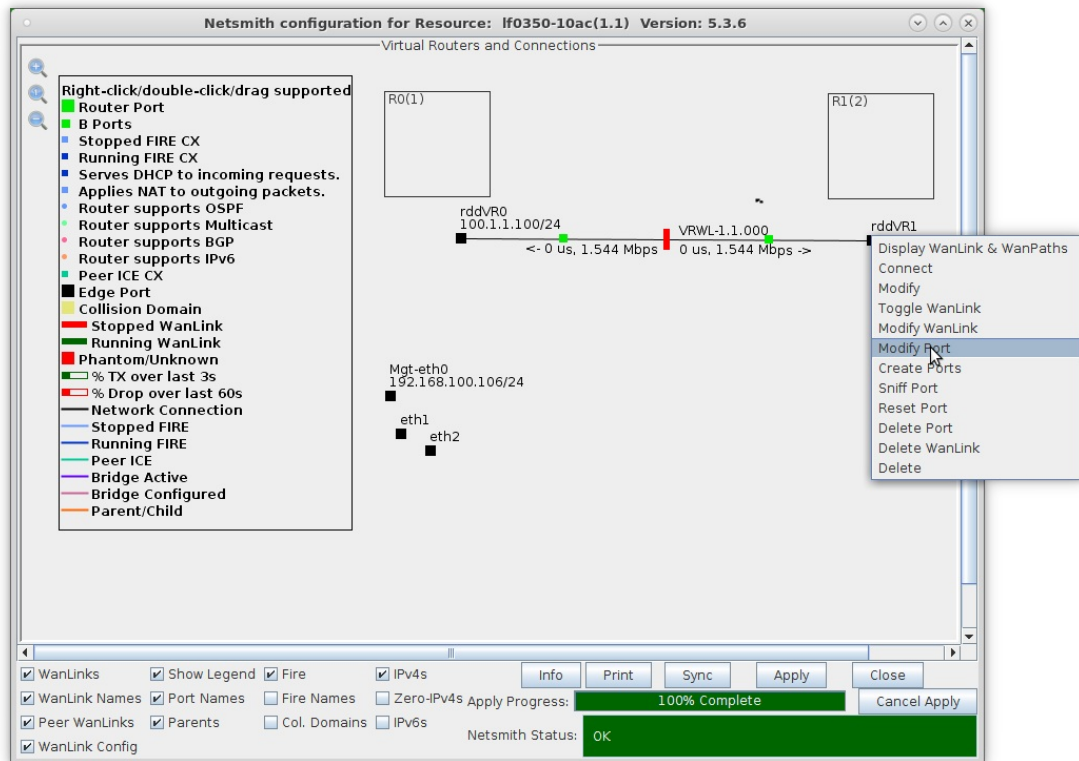

D. Assign an IP address and Network Mask.

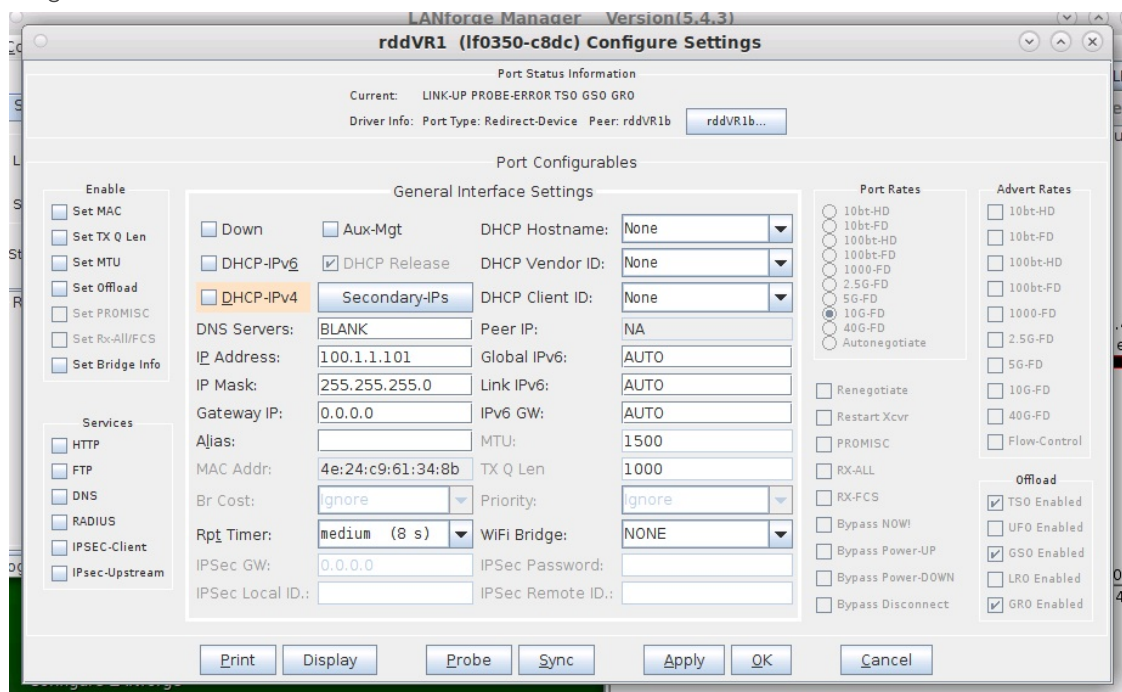


A. This example uses 10.1.1.101 and 255.255.255.0.


For more information see [LANforge-GUI User Guide: Netsmith](#)

4. Drag the ends of the WanLink into the Virtual Routers.


A. Left-click and drag rddVR0 into Router R0(1)

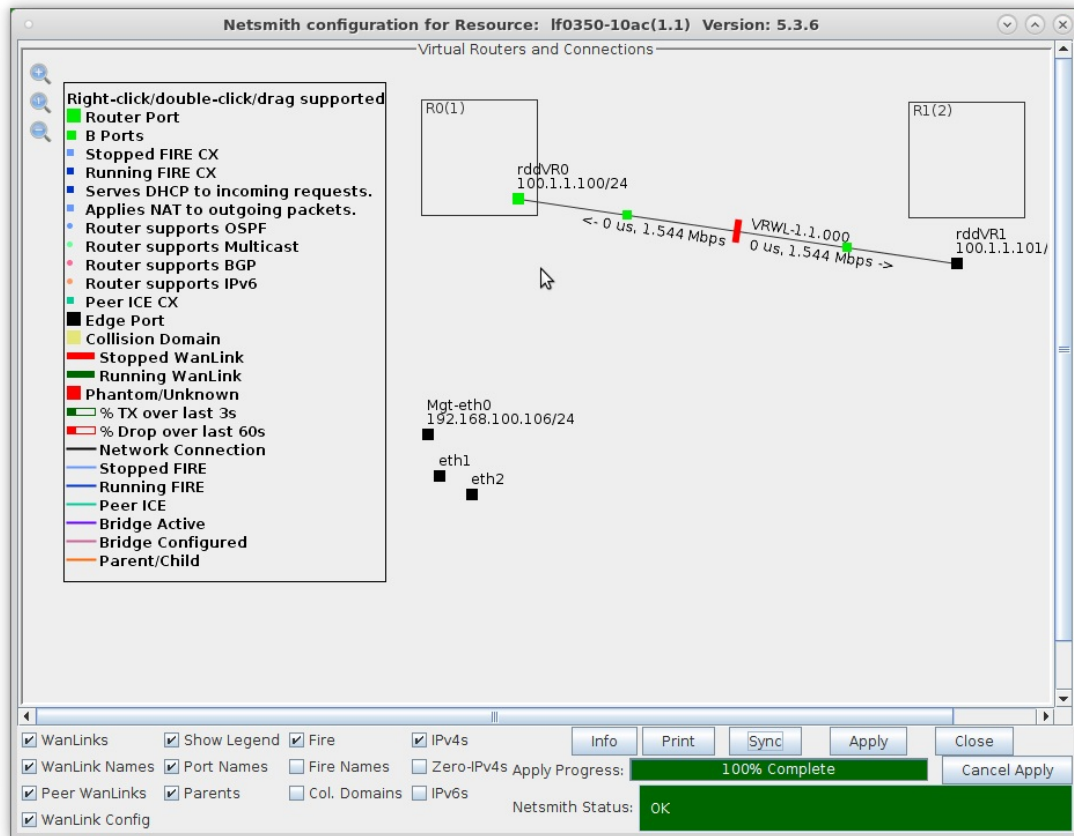

B. Left-click and drag rddVR1 into Router R1(2)

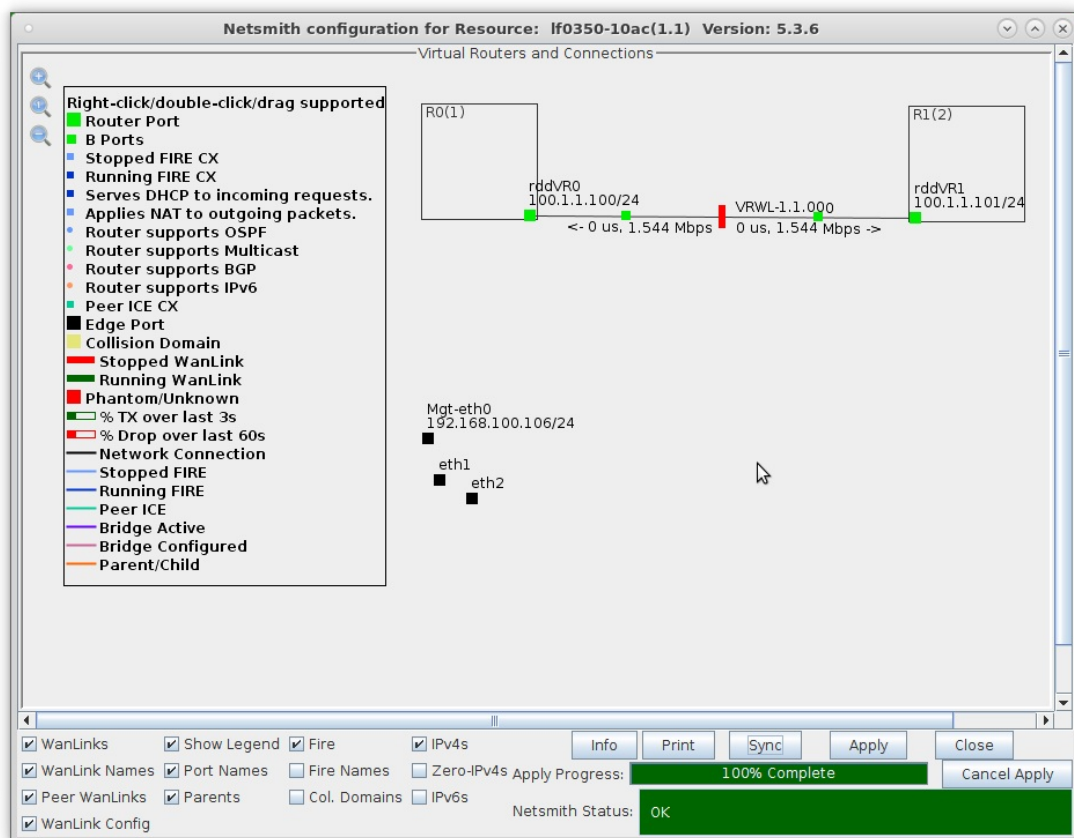


C. Click the **Apply** button at the bottom of the Netsmith window

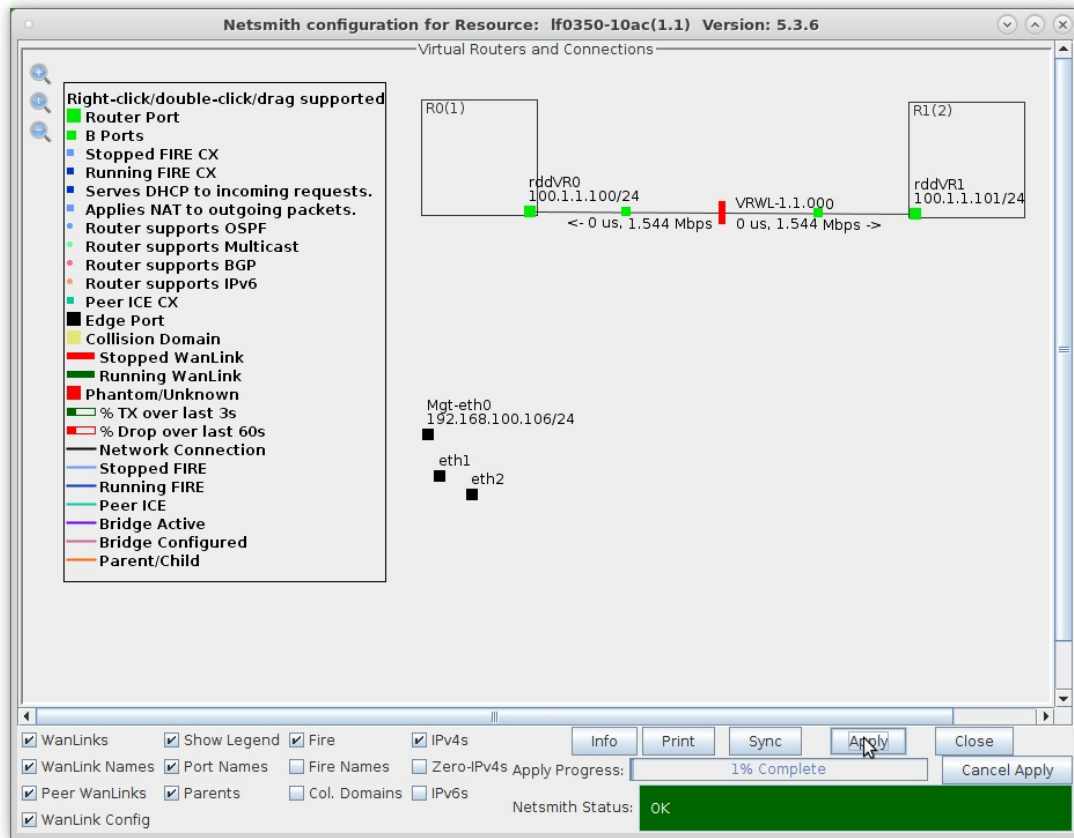


For more information see [LANforge-GUI User Guide: Netsmith](#)

5. Setup the Routed Mode WanLink characteristics.

A. Right-click the WanLink and select **Modify WanLink**

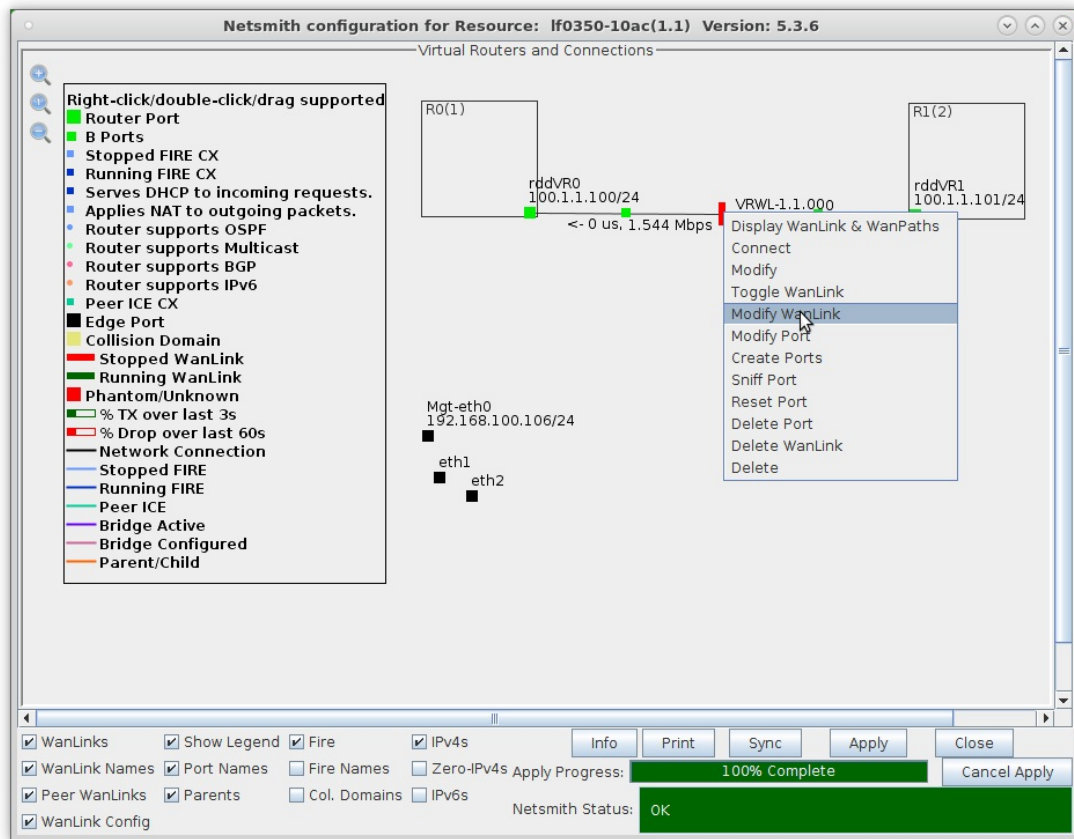


B. Verify that the B-side ports, rddVR0b and rddVR1b are filled in.

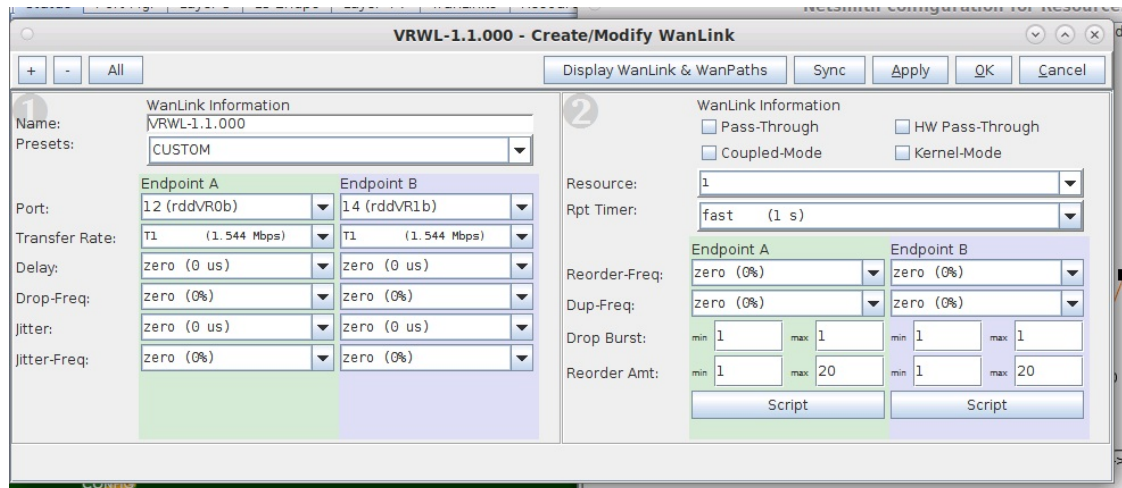

A. **NOTE:** Be sure to set the impairment, if any, and transfer rate.

B. Click **OK** when done


C. Right-click the WanLink and select **Toggle Wanlink** to set its status to Running (green).

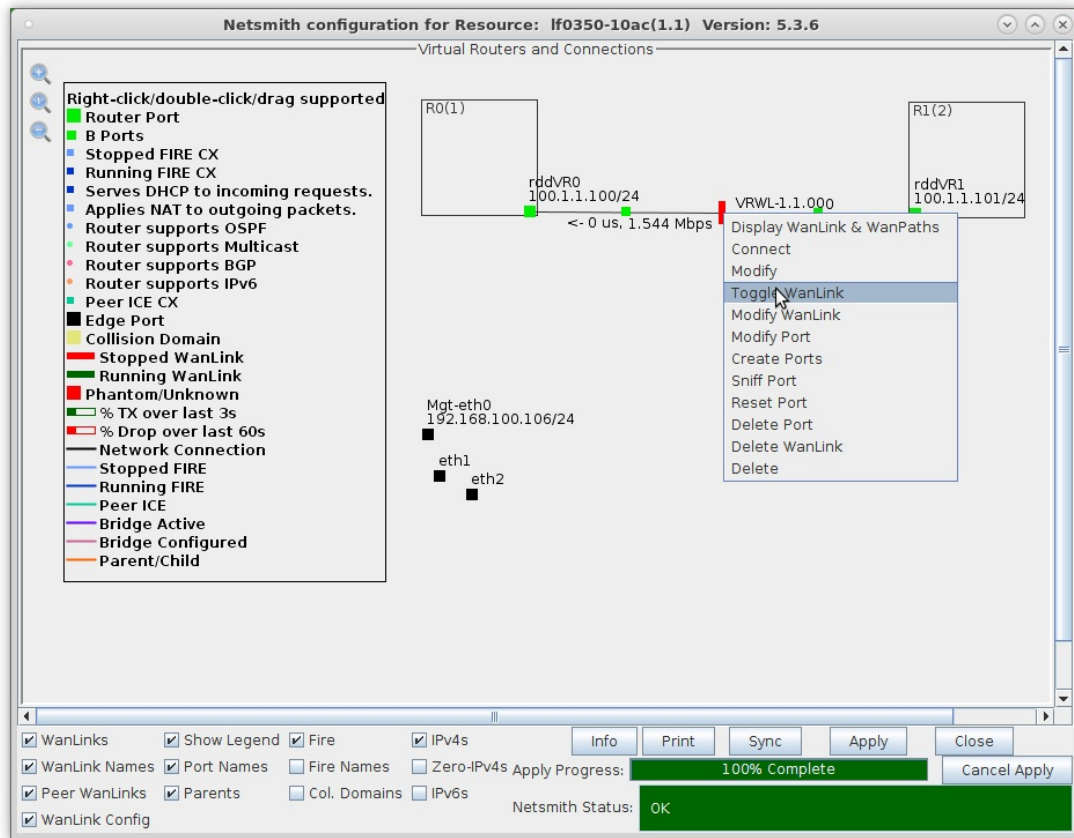


For more information see [LANforge-GUI User Guide: Netsmith](#)

6. Setup the physical ports.

A. Right-click port eth1 and select **Modify Port**

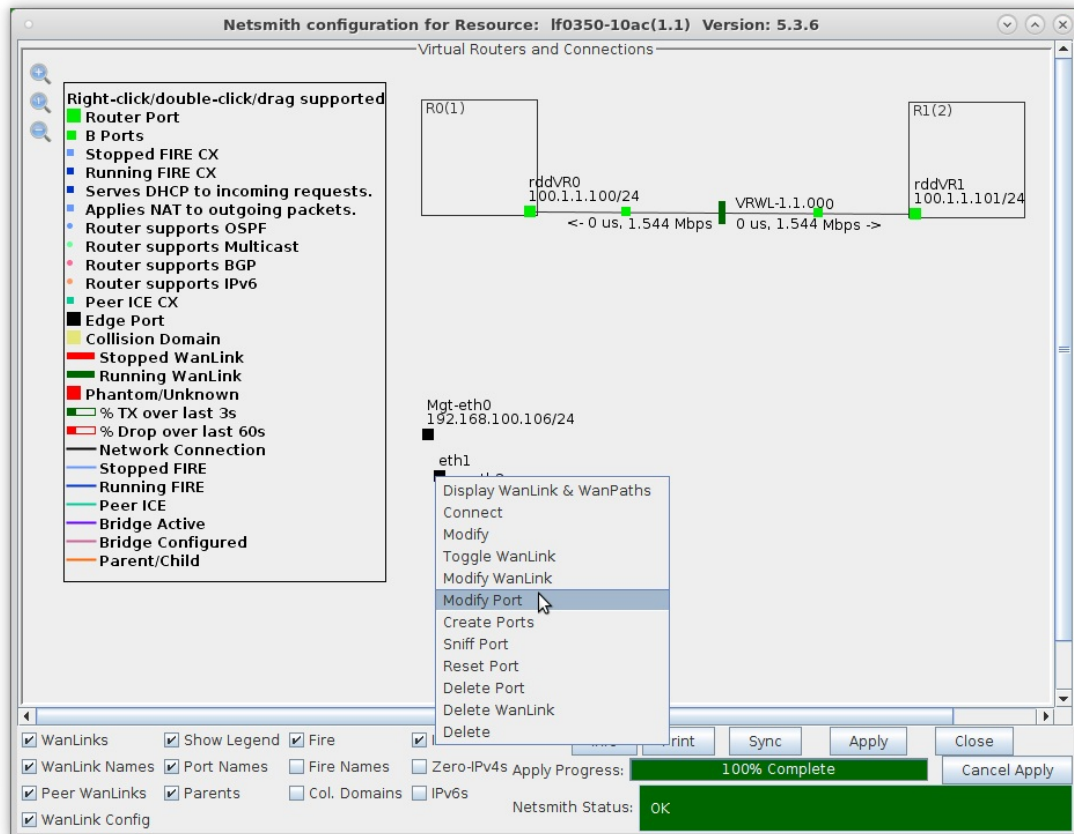


B. Assign port eth1 an IP address and Network Mask

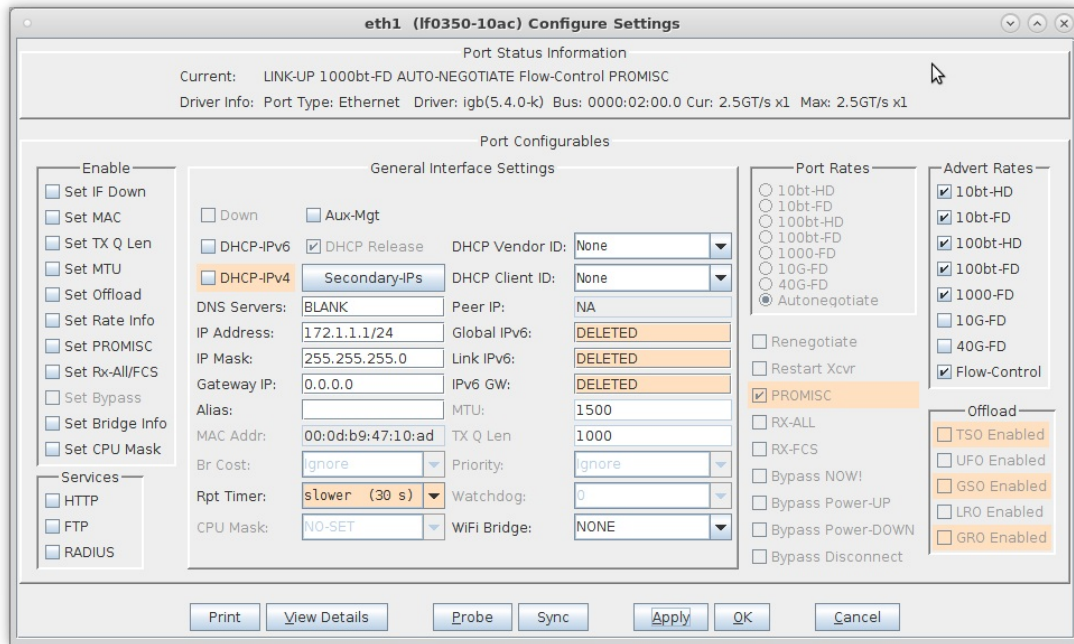


A. **NOTE:** This example uses 172.1.1.1 and 255.255.255.0


C. Drag port eth1 into Router R0(1)

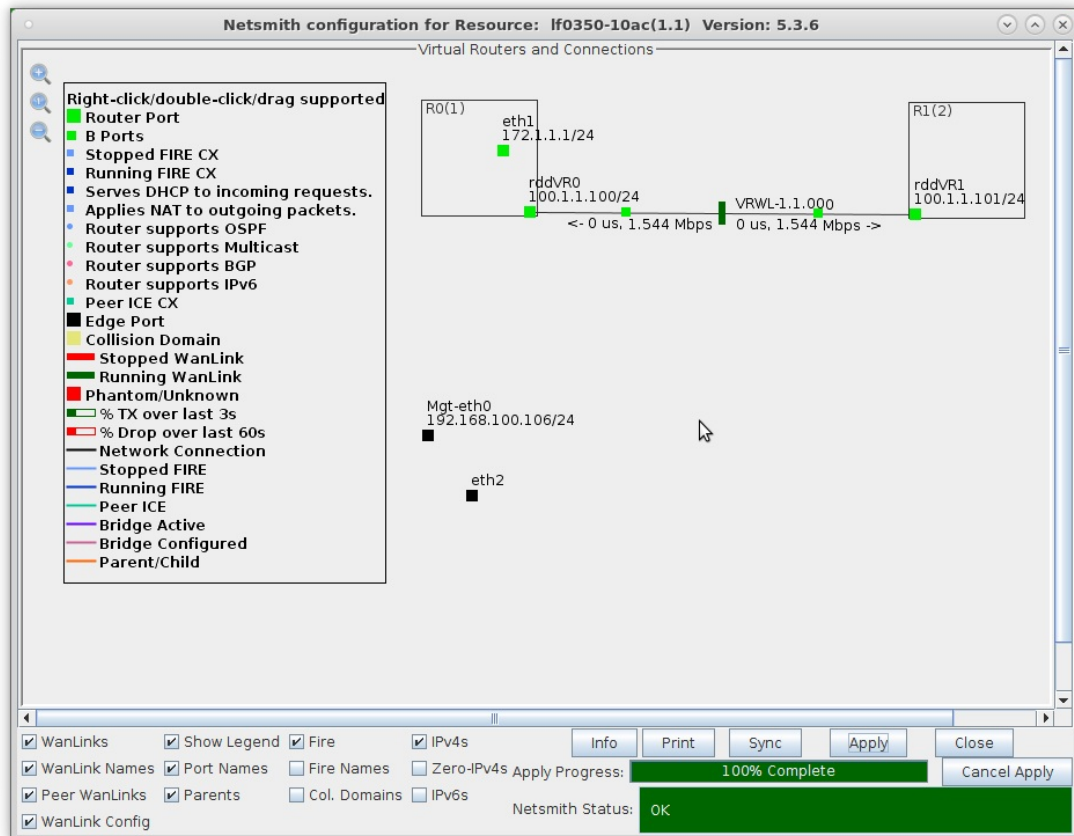

D. Right-click port eth2 and select **Modify Port**

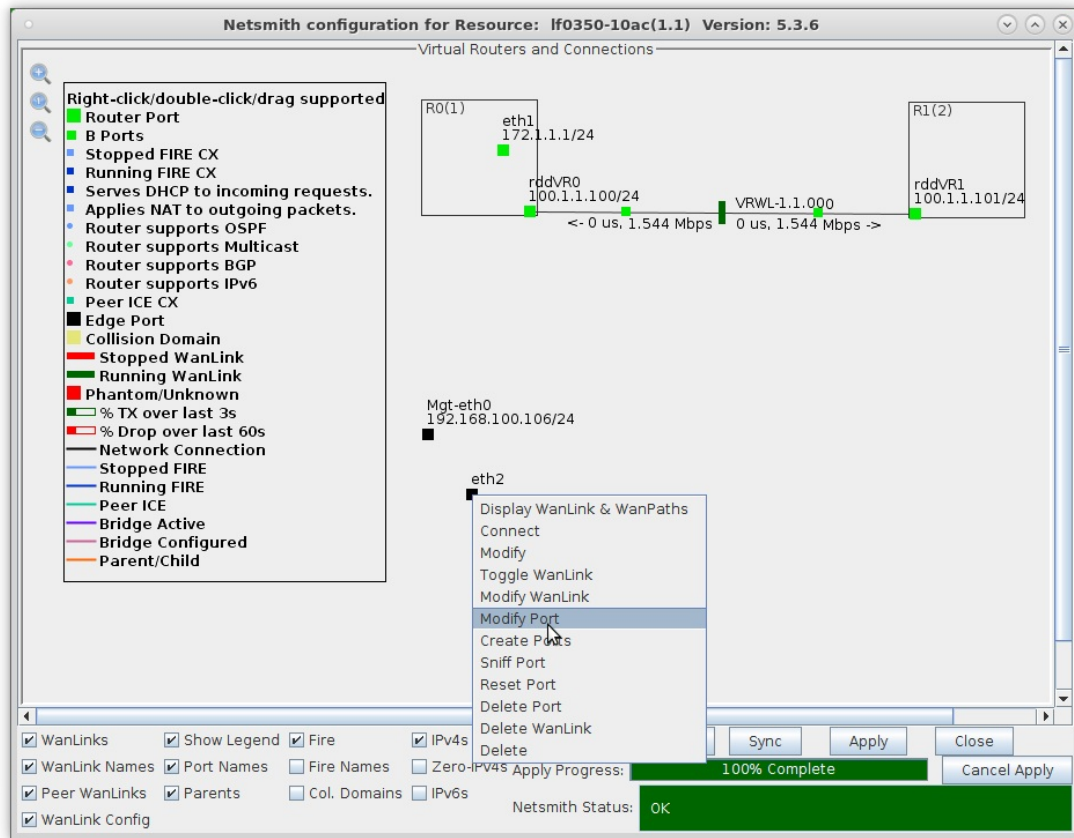

E. Assign port eth2 an IP address and Network Mask.

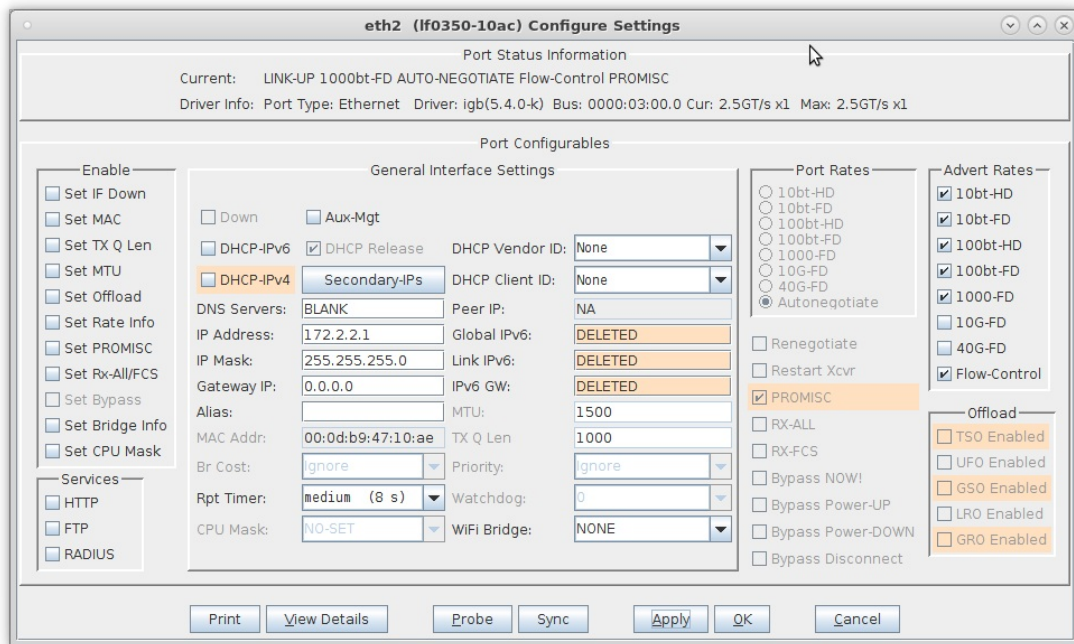


A. **NOTE:** This example uses 172.2.2.1 and 255.255.255.0


- F. If either physical port connects to a larger routed network, right-click the port and select **Modify** and enter values for Next Hop and Subnets as follows:

- A. **NOTE:** Next Hop is the default gateway of your next network hop
- B. Up to 8 different subnets can be configured or 0.0.0.0/0 for any subnet
- C. Click **OK** when done, then click **Apply** in Netsmith to apply your changes

- G. Drag port eth2 into Router R1 (0)

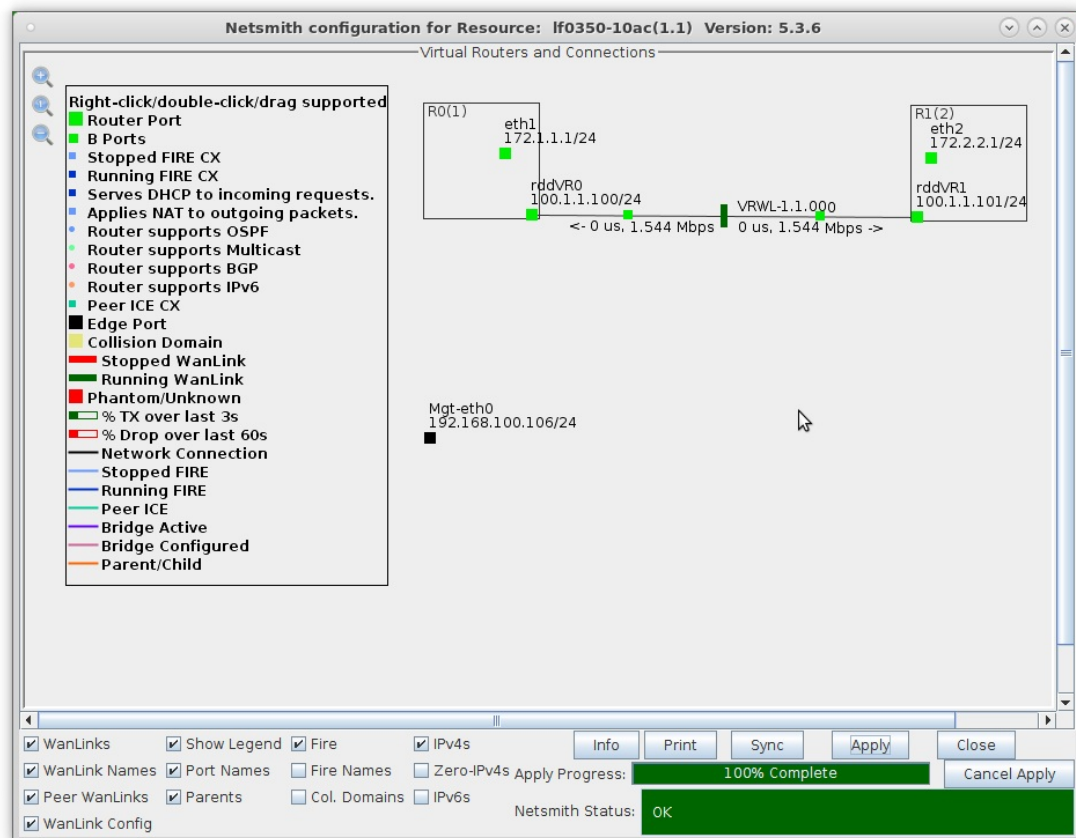


H. Click the **Apply** button at the bottom of the Netsmith window

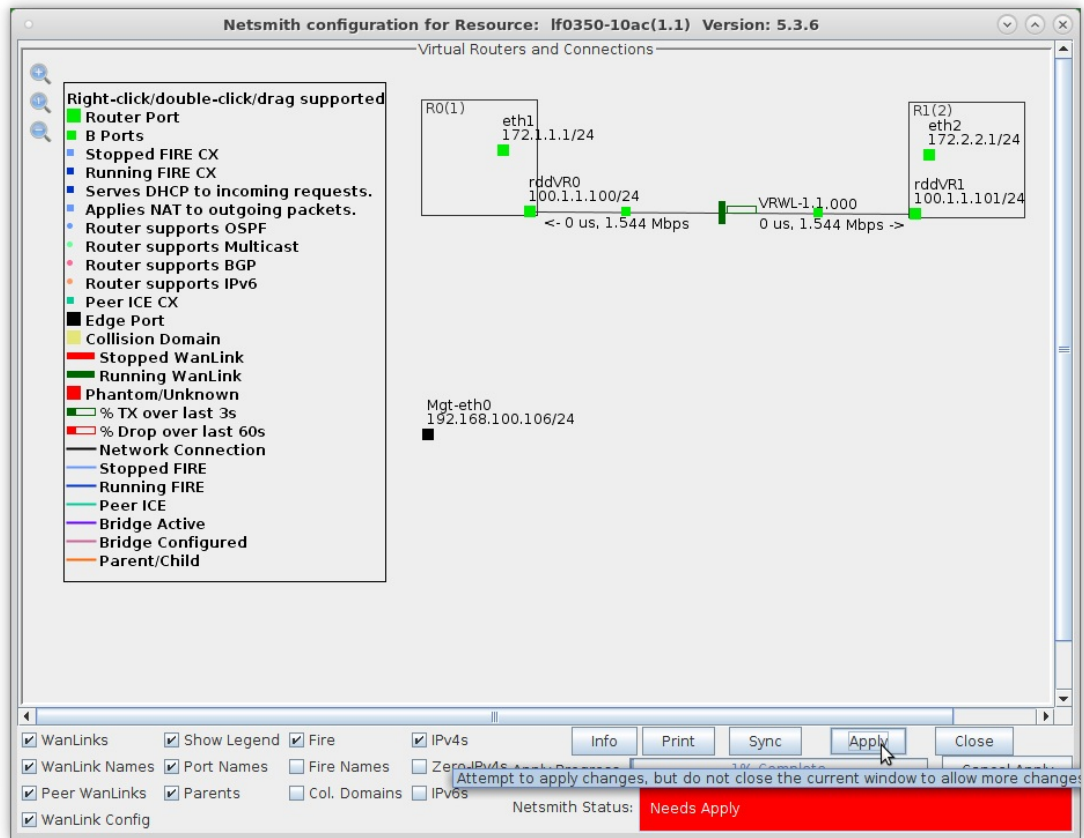

For more information see [LANforge-GUI User Guide: Netsmith](#)


7. Run traffic and verify results. (Refer to LANforge FIRE Cookbook to run traffic)

- A. Verify that the traffic on eth1 is being sent to Default Gateway 172.1.1.1 and that traffic on eth2 is being sent to Default Gateway 172.2.2.1

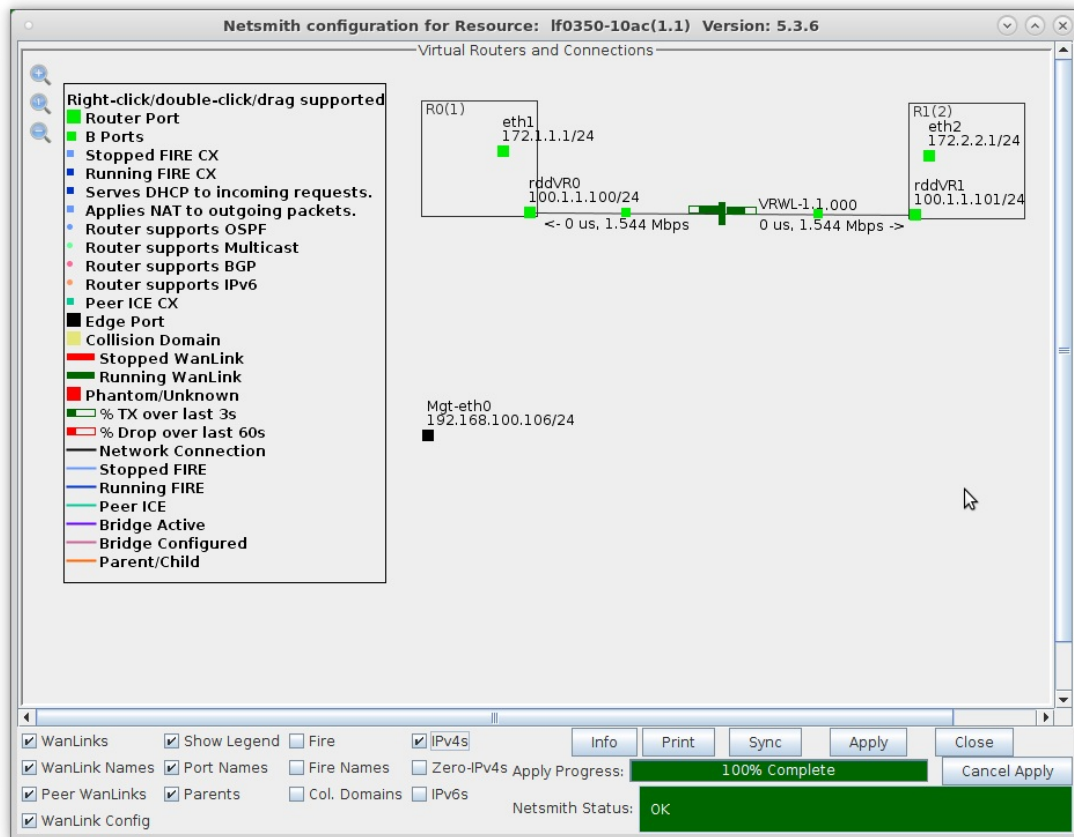


- A. **NOTE:** In this example, traffic to eth1 is from a port configured with IP address 172.1.1.105 Network Mask 255.255.255.0 and Default Gateway 172.1.1.1
- B. Traffic to eth2 is from a port configured with IP address 172.2.2.106 Network Mask 255.255.255.0 and Default Gateway 172.2.2.1
- C. To generate routed network traffic refer to the LANforge FIRE Cookbook [Routed Network Testing](#) section.
- D. If your physical configuration is complete, Netsmith should appear as shown here:

- B. Right-click one of the Virtual Routers and select **Show Routing Table** to view the internal routing table for the Virtual Router

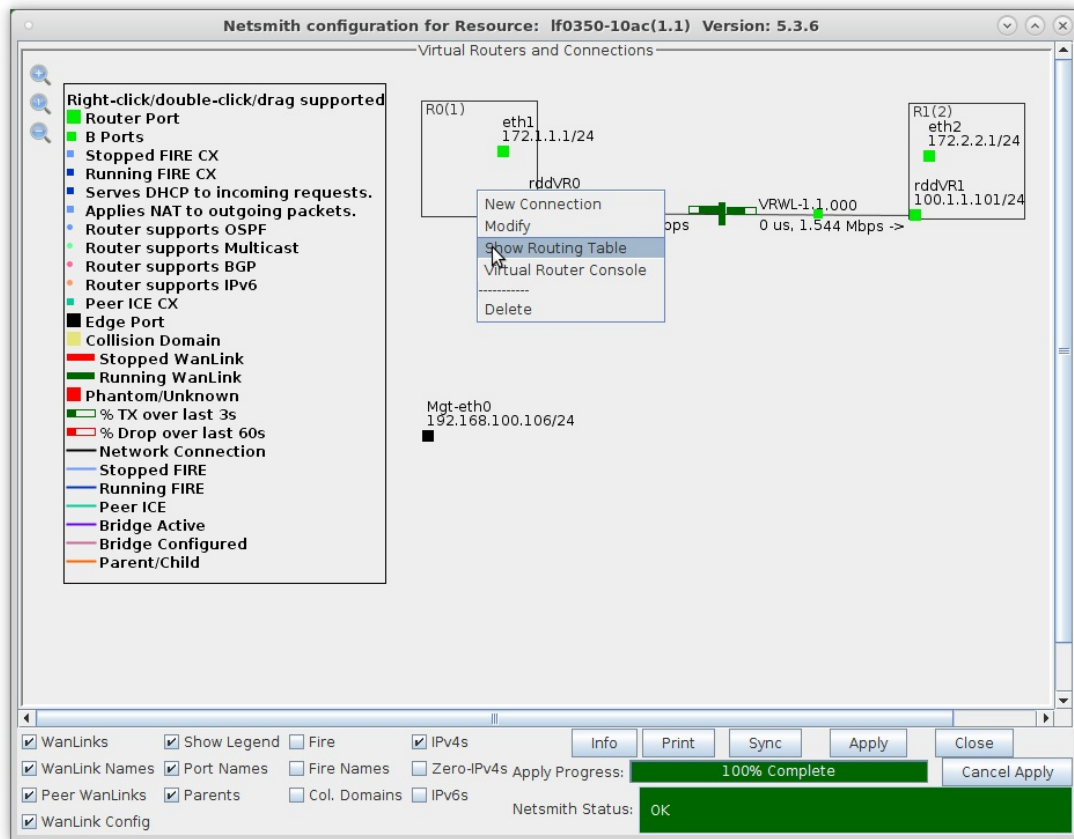

- C. LANforge Virtual Routers by default use simple subnet routing, but can also use OSPF or BGP routing protocols. LANforge can also perform IPv4 multicast routing.

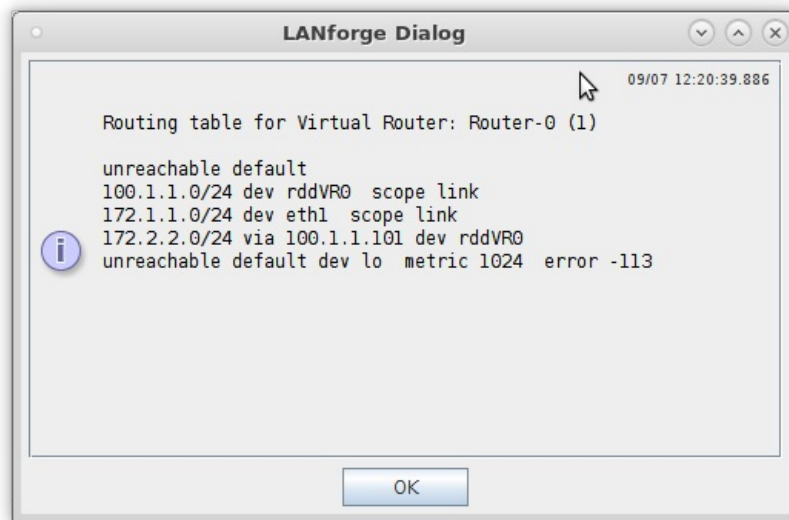

For more information see [LANforge-GUI User Guide: Netsmith](#)


For more information see [LANforge FIRE Cookbook](#)

Routed Mode WanLinks with a Single Physical Port


Goal: Setup a Routed Mode WanLink between two Virtual Routers that only use one physical port.

In this test scenario, LANforge-ICE is used to simulate a routed network where a single physical port is used for incoming and outgoing traffic. The traffic will enter the physical port and will then be sent through two Virtual Routers connected by a WanLink and then back out the same physical port.


1. Setup a Netsmith Connection.
 - A. Go to the **Status** tab and click **Netsmith**

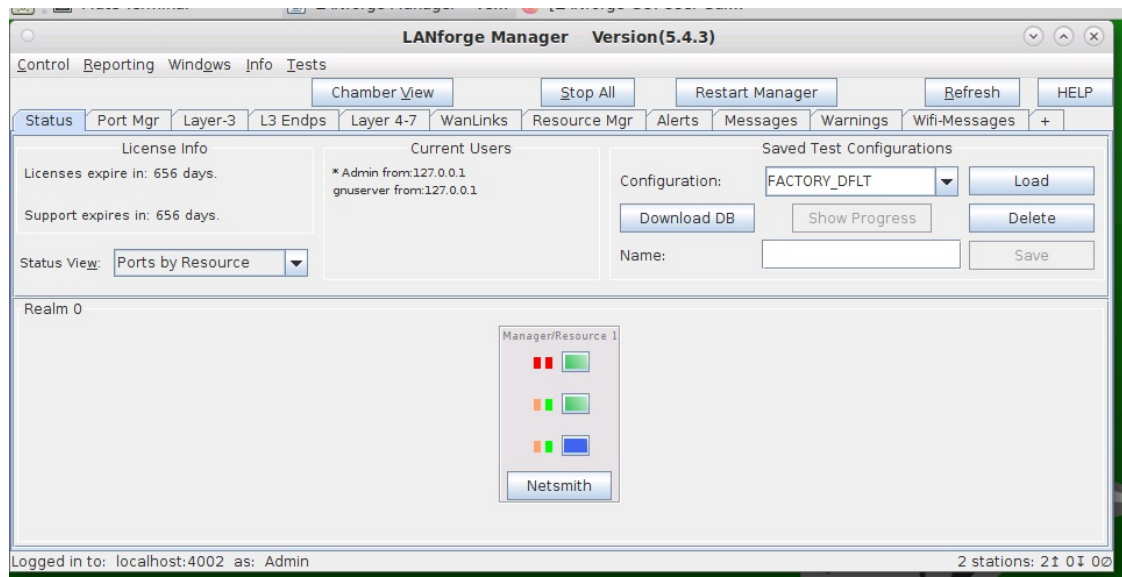


B. Right-click in the Netsmith window and select **New Connection**

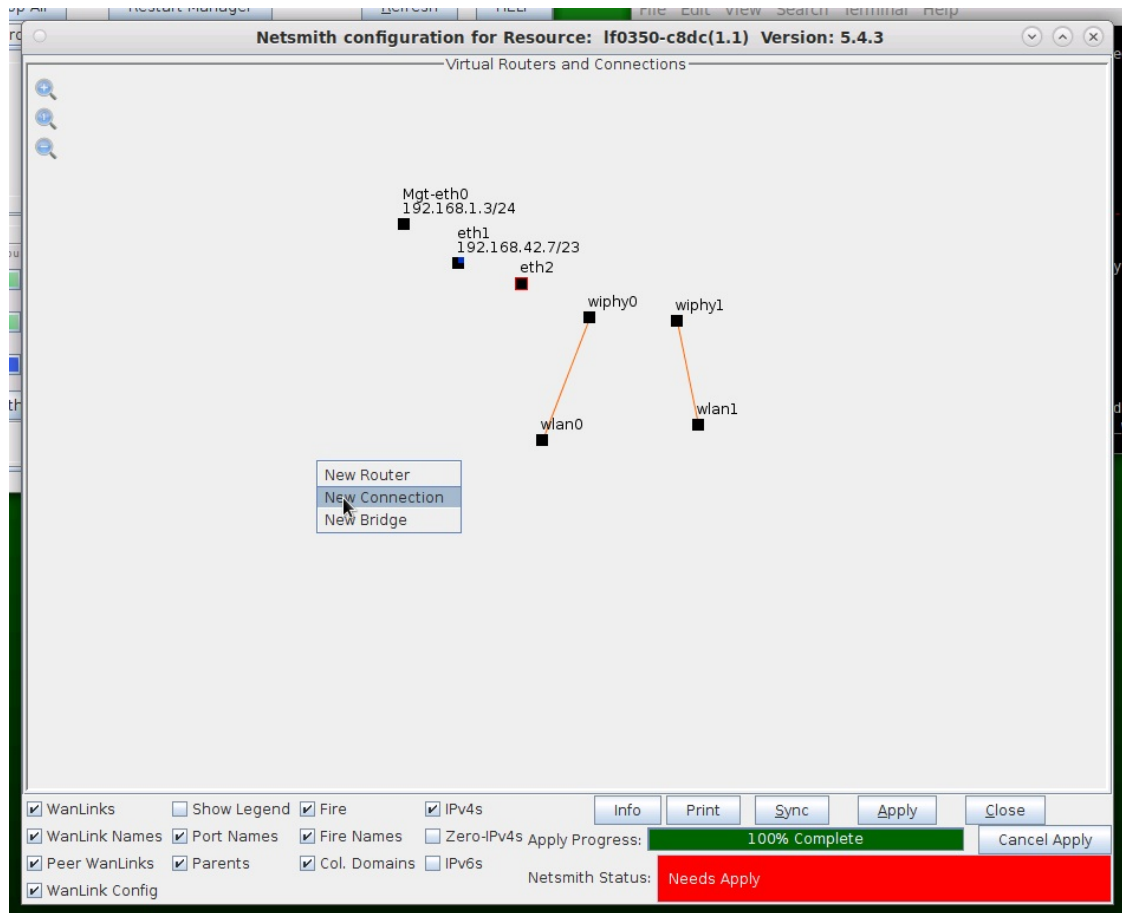

C. Accept defaults, Auto Create everything and click **OK**

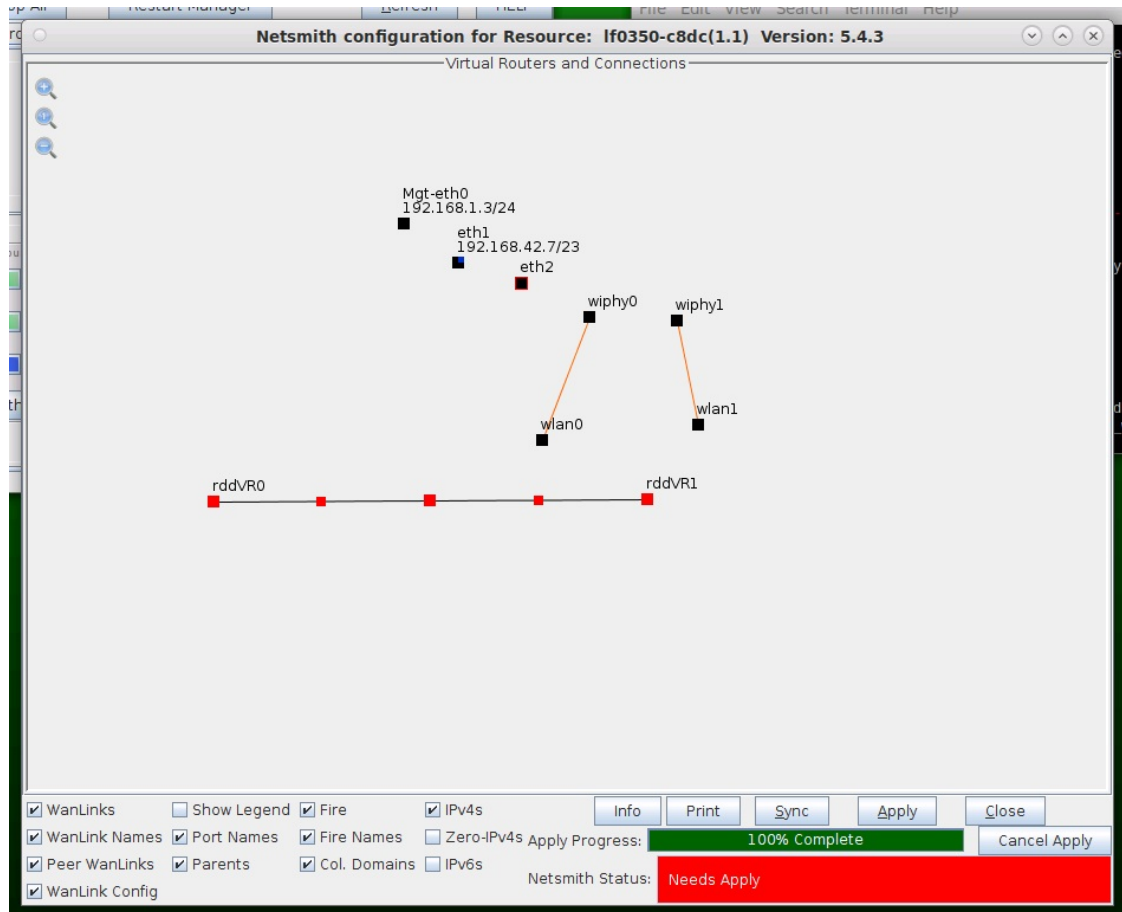


D. Click **Apply** in the Netsmith window to create the connection

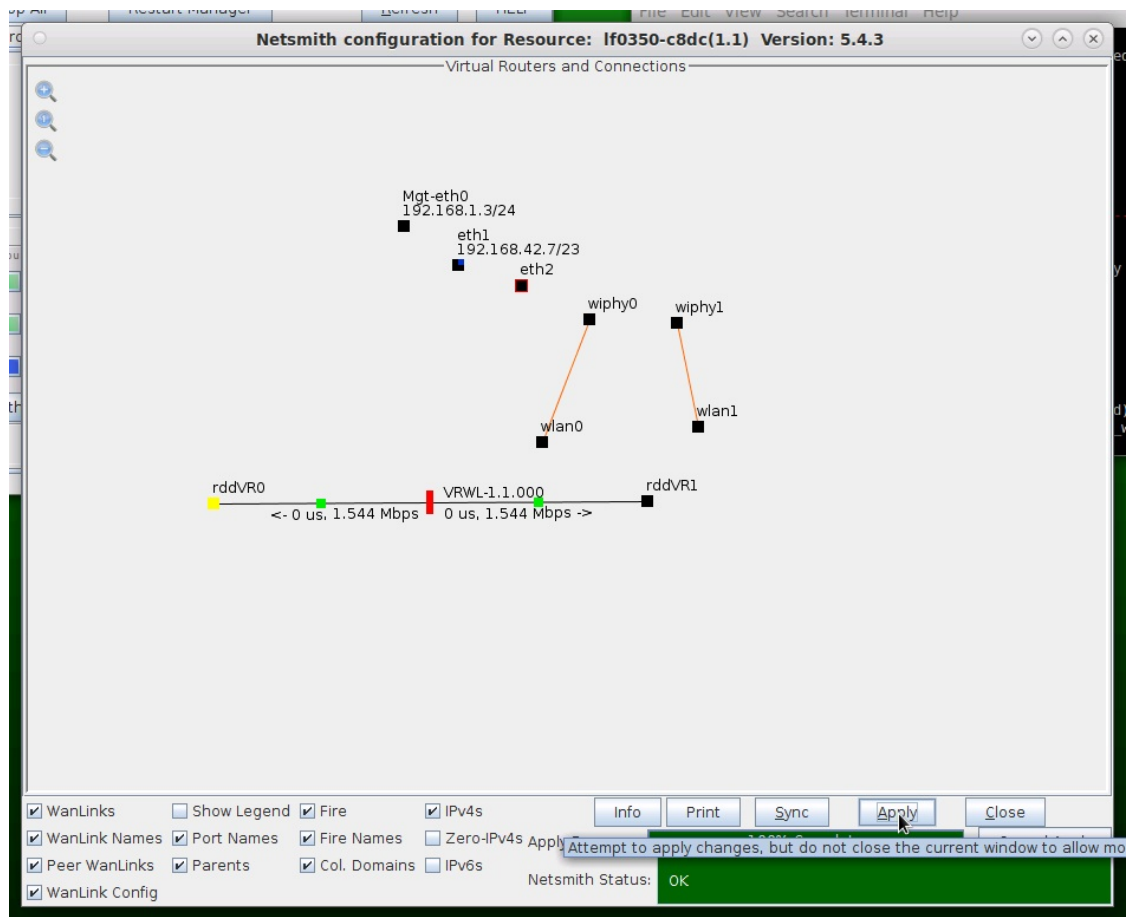


For more information see [LANforge-GUI User Guide: Netsmith](#)

2. Setup two Virtual Routers.

A. Right-click in the Netsmith window and select **New Router**

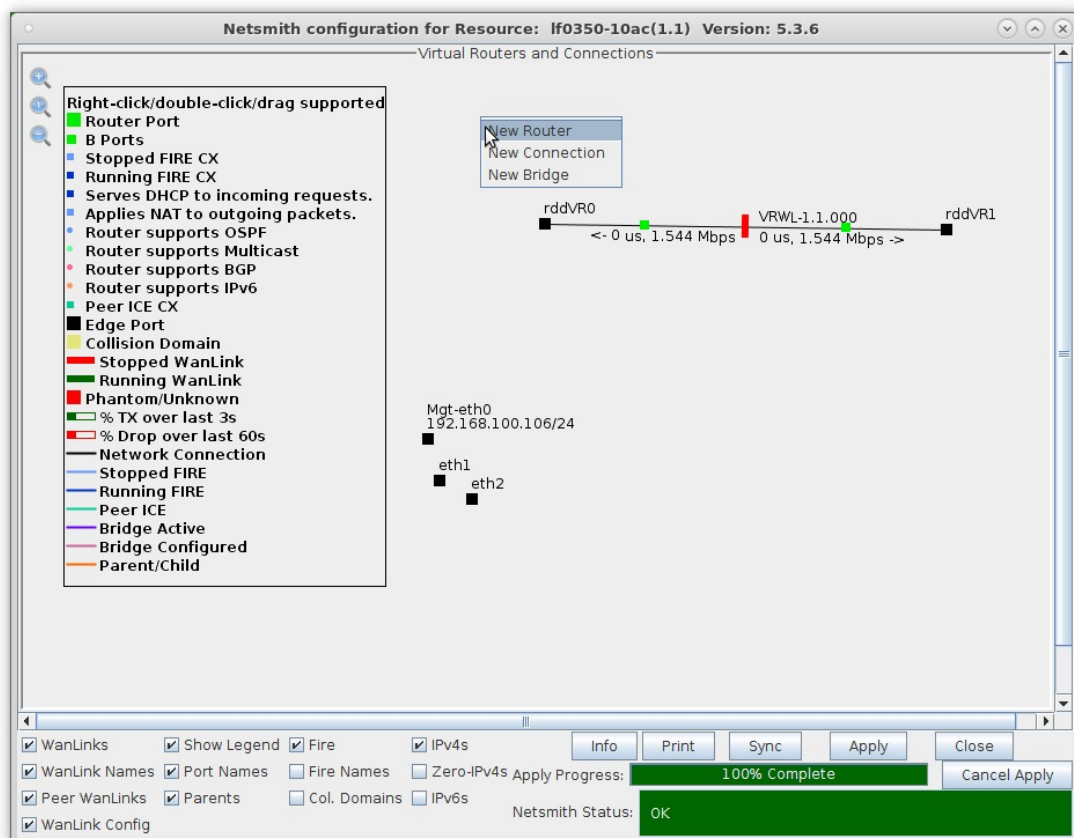


B. Accept defaults, or change the name, graphical size and notes about the Virtual Router

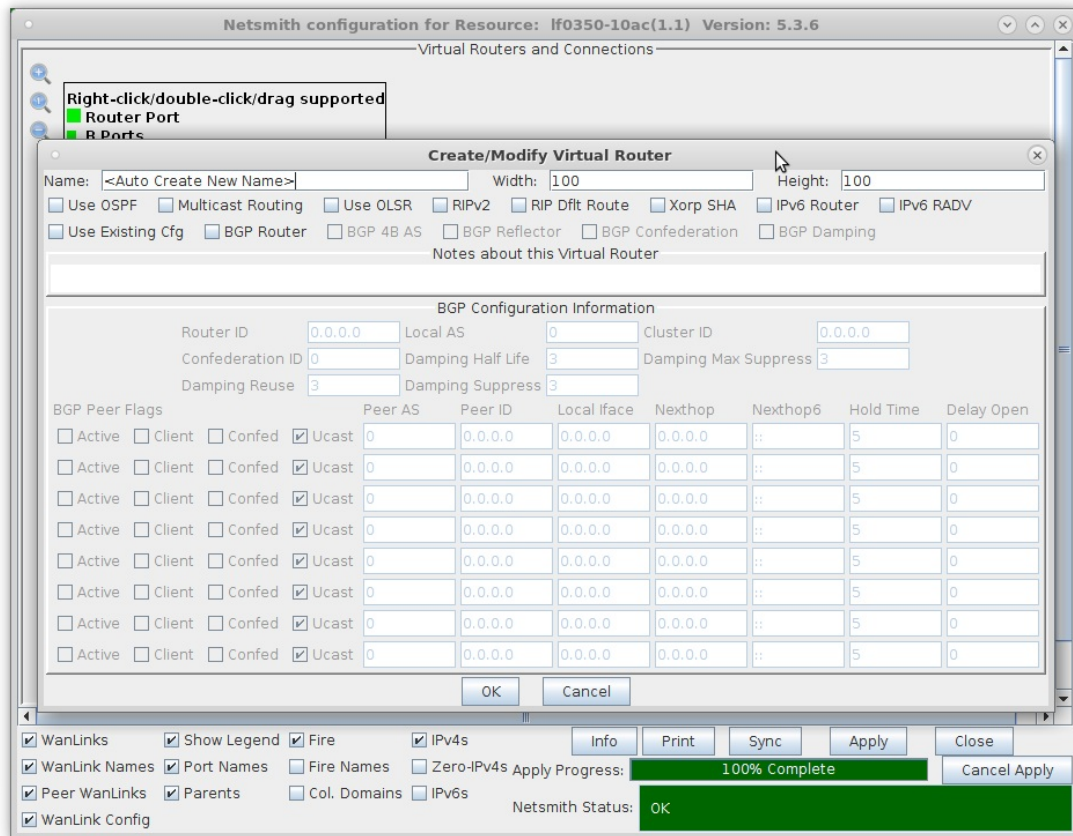


A. Click **OK** when done

C. Click the **Apply** button and repeat for the second Virtual Router

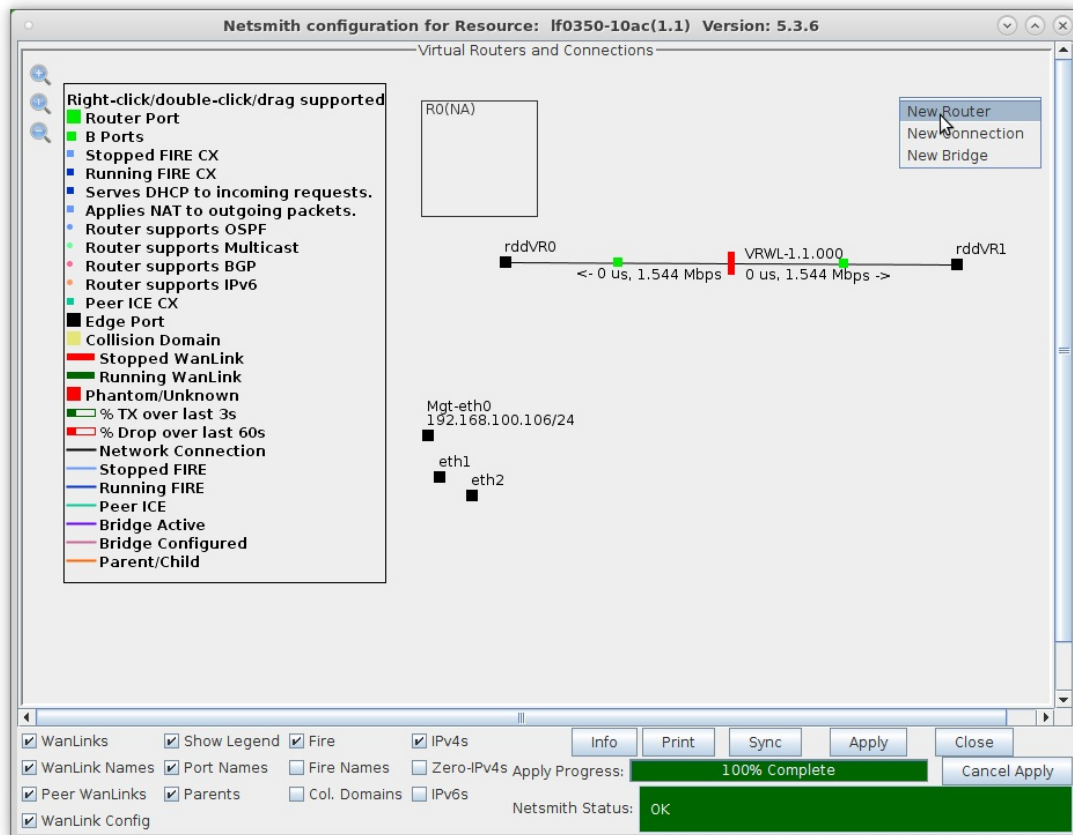

A. **NOTE:** After making any changes to the NetSmith window, you must click **Apply** or your changes will NOT be implemented and could be lost

D. Click the **Apply** button followed by the **Sync** button

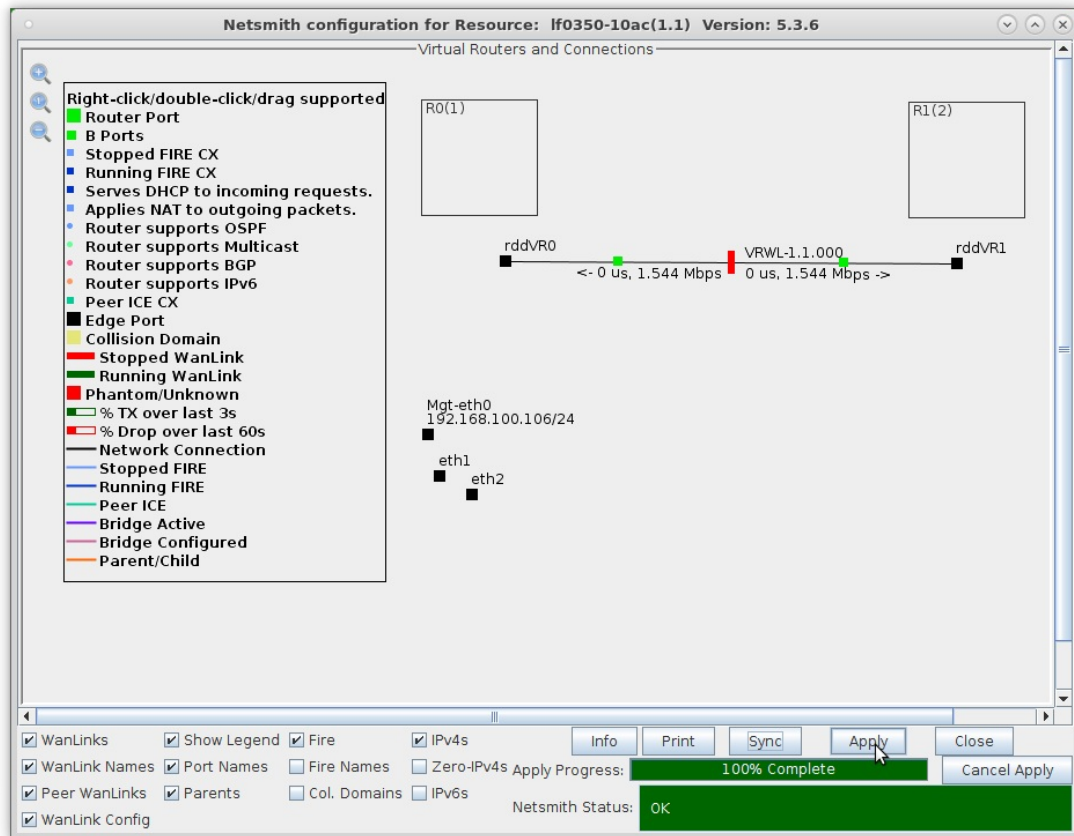


- A. **NOTE:** Clicking **Sync** makes sure any changes are synchronized with the current database
- B. Also, note the Netsmith Apply Progress bar displayed at the bottom of the Netsmith window


For more information see [LANforge-GUI User Guide: Netsmith](#)

3. Configure the ports on the ends of the WanLink.

A. Right-click port rddVR0 and select **Modify Port**

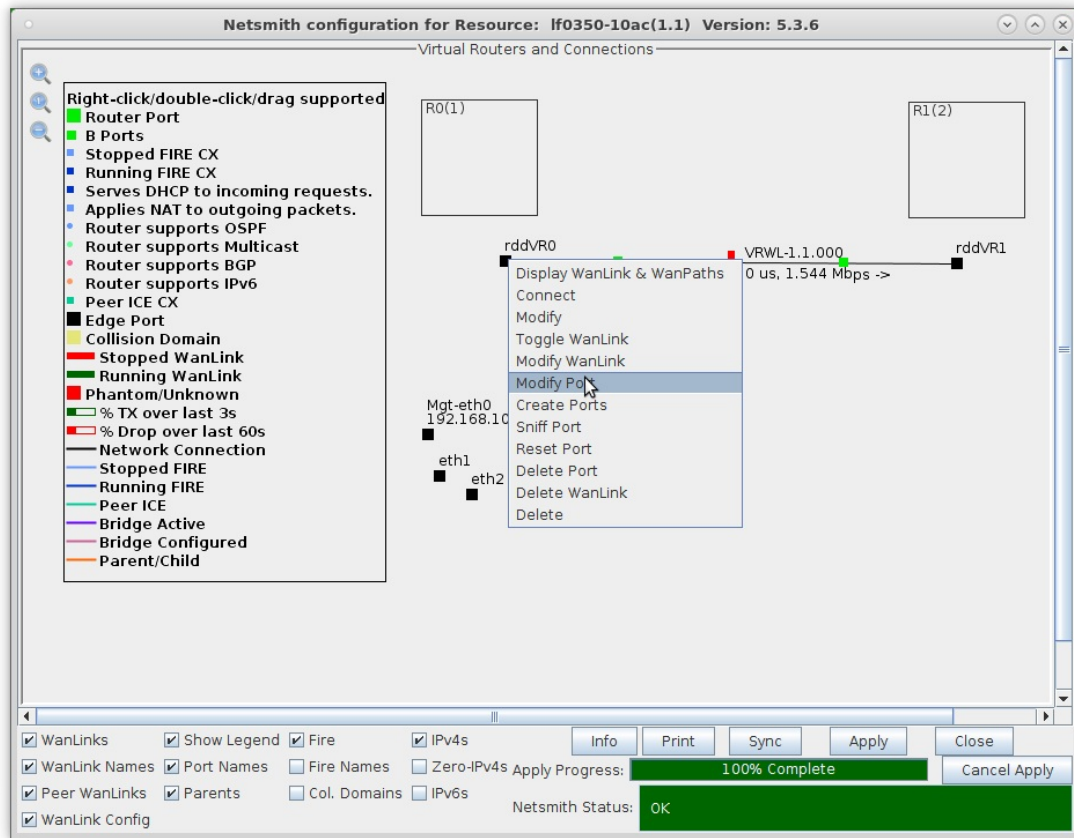


B. Assign an IP address and Network Mask

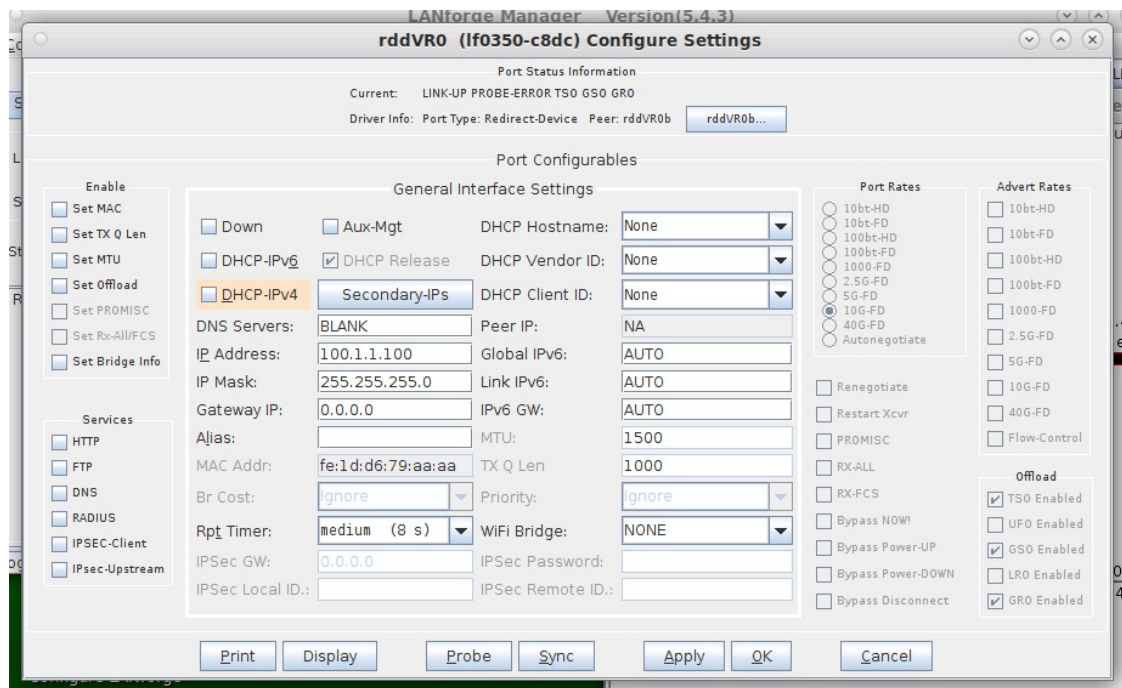


A. This example uses 10.1.1.100 and 255.255.255.0

C. Right-click port rddVR1 and select **Modify Port**

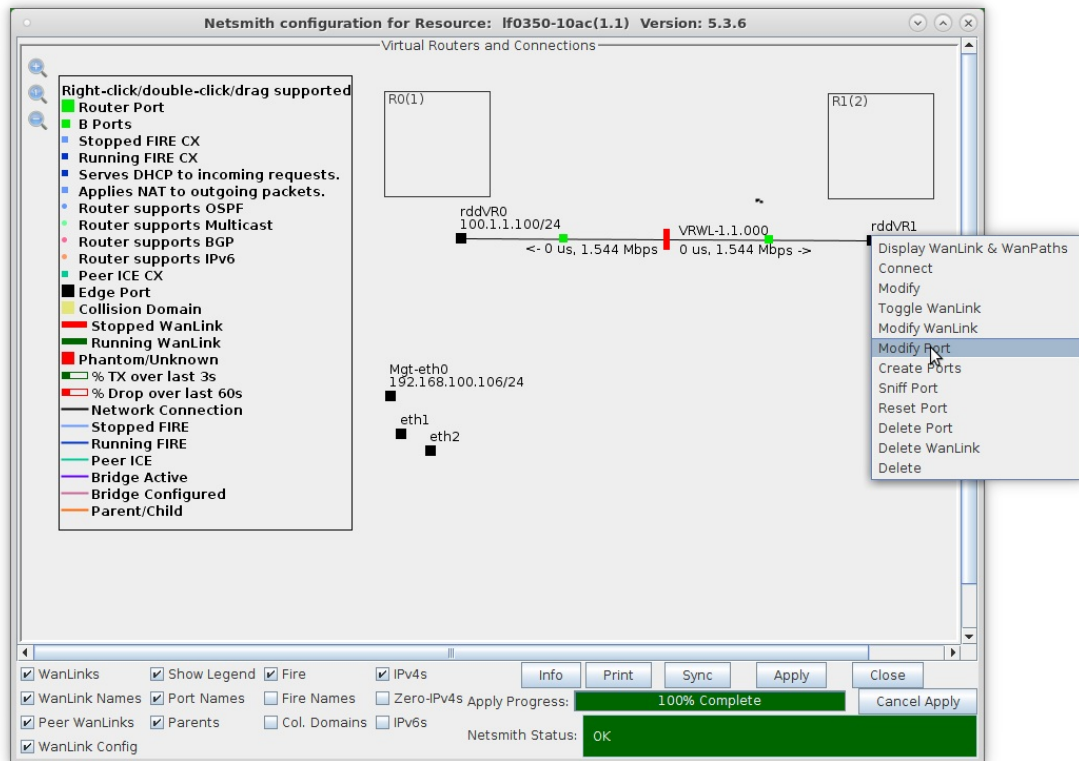

D. Assign an IP address and Network Mask

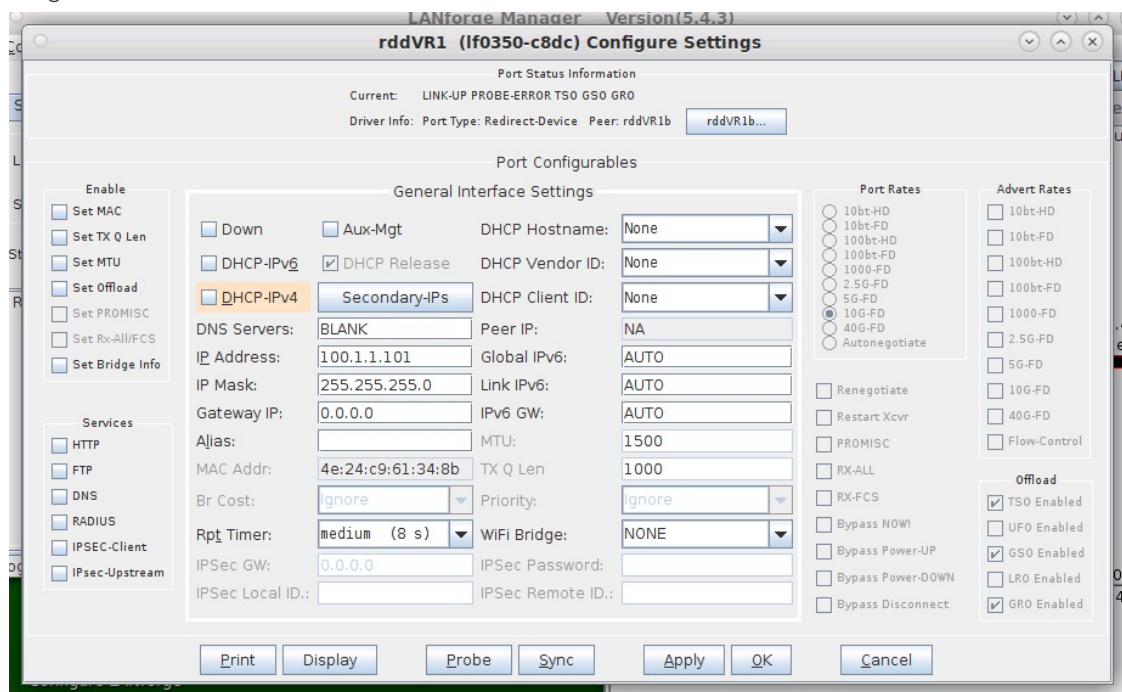


A. This example uses 10.1.1.101 and 255.255.255.0


For more information see [LANforge-GUI User Guide: Netsmith](#)

4. Drag the ends of the WanLink into the Virtual Routers.


A. Left-click and drag rddVR0 into Router R0(1)

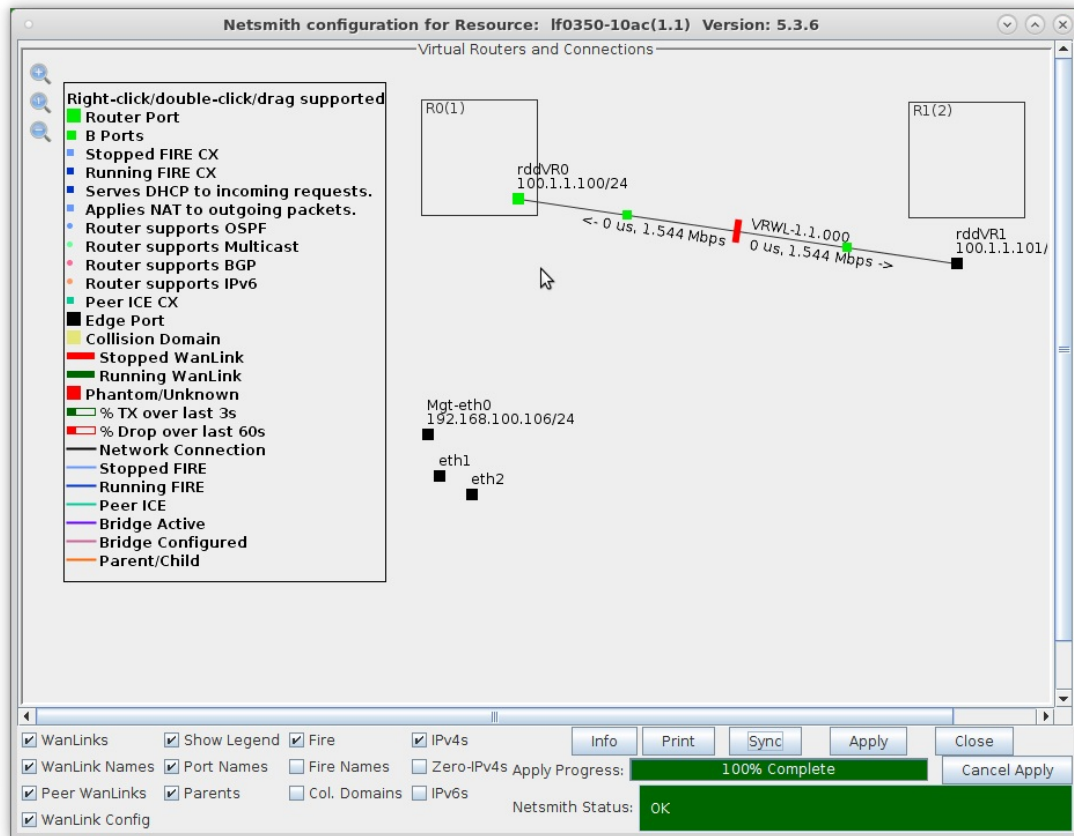

B. Left-click and drag rddVR1 into Router R1(2)

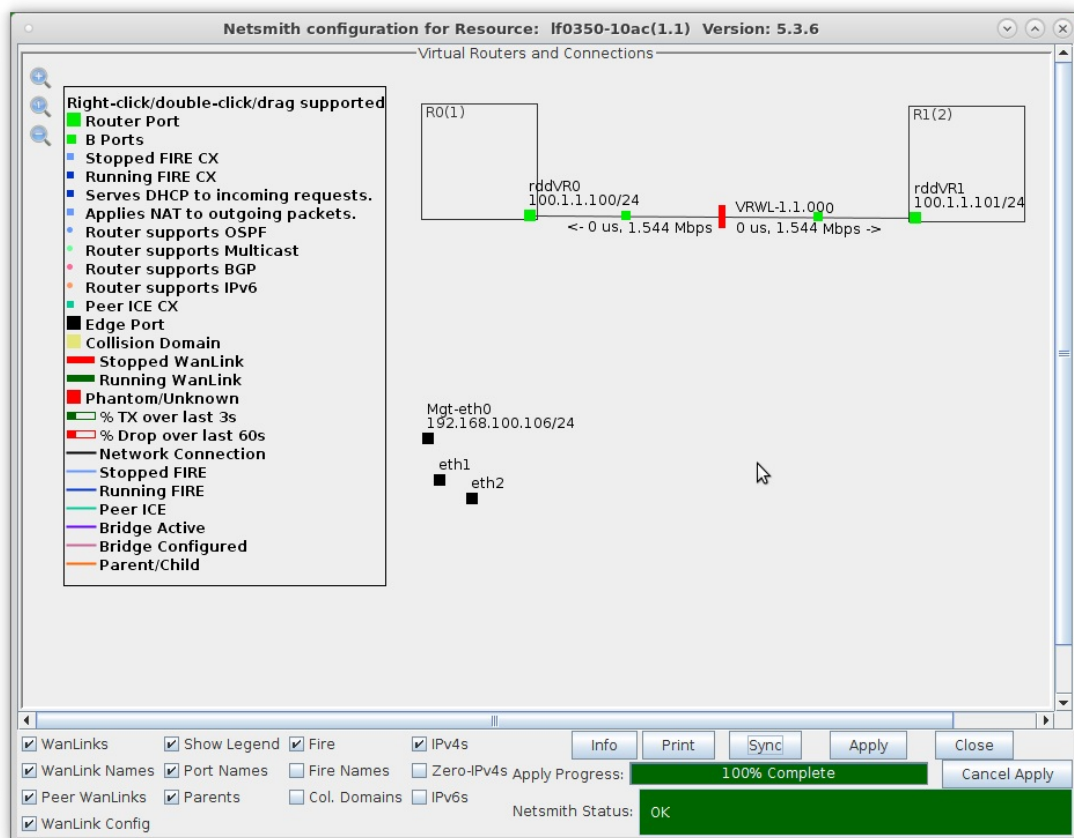


C. Click the **Apply** button at the bottom of the Netsmith window

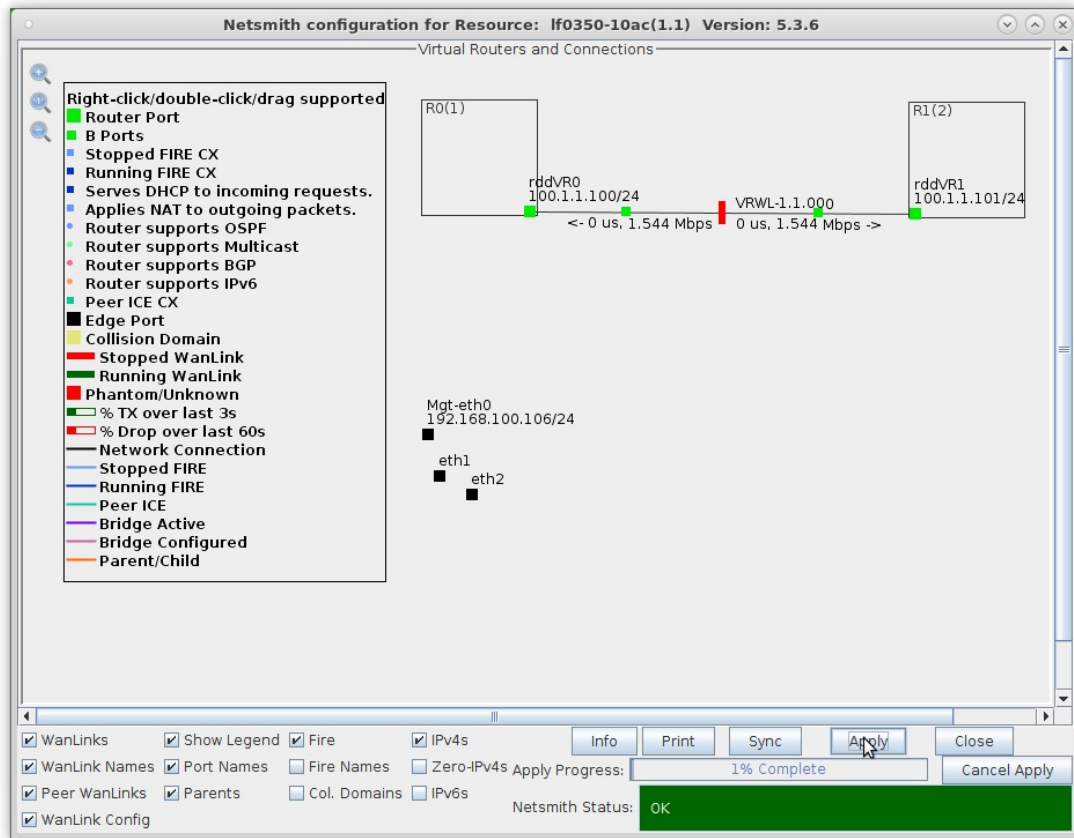


For more information see [LANforge-GUI User Guide: Netsmith](#)

5. Setup the Routed Mode WanLink characteristics.

A. Right-click the WanLink and select **Modify WanLink**

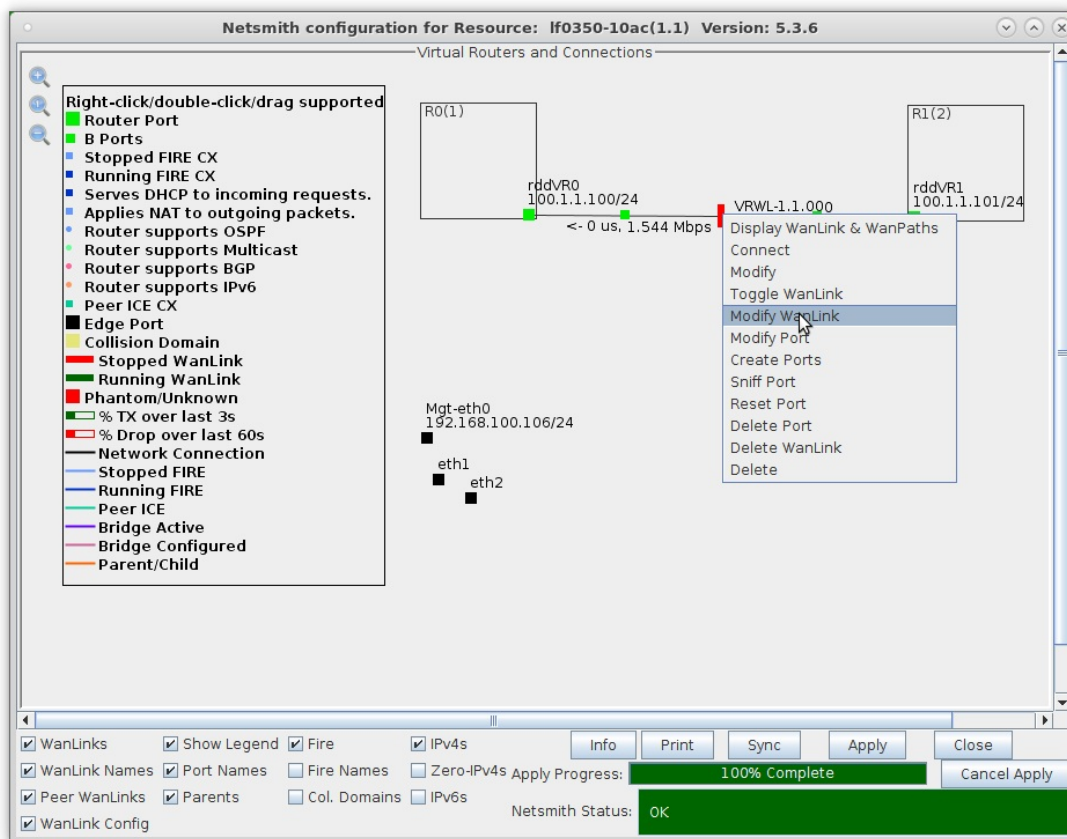


B. Verify that the B-side ports, rddVR0b and rddVR1b, are filled in

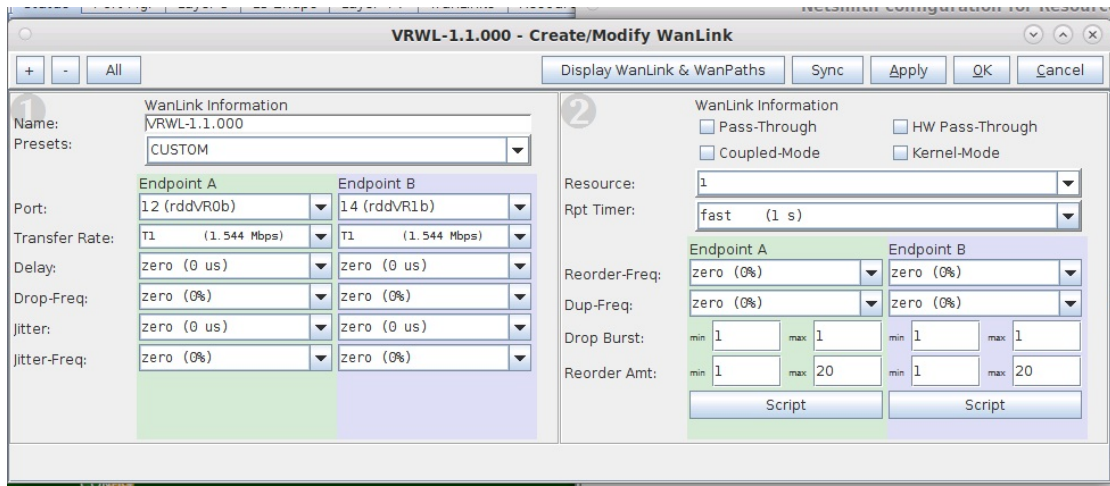

A. **NOTE:** Be sure to set the impairment, if any, and transfer rate

B. Click **OK** when done


C. Right-click the WanLink and select **Toggle Wanlink** to set its status to Running (green)

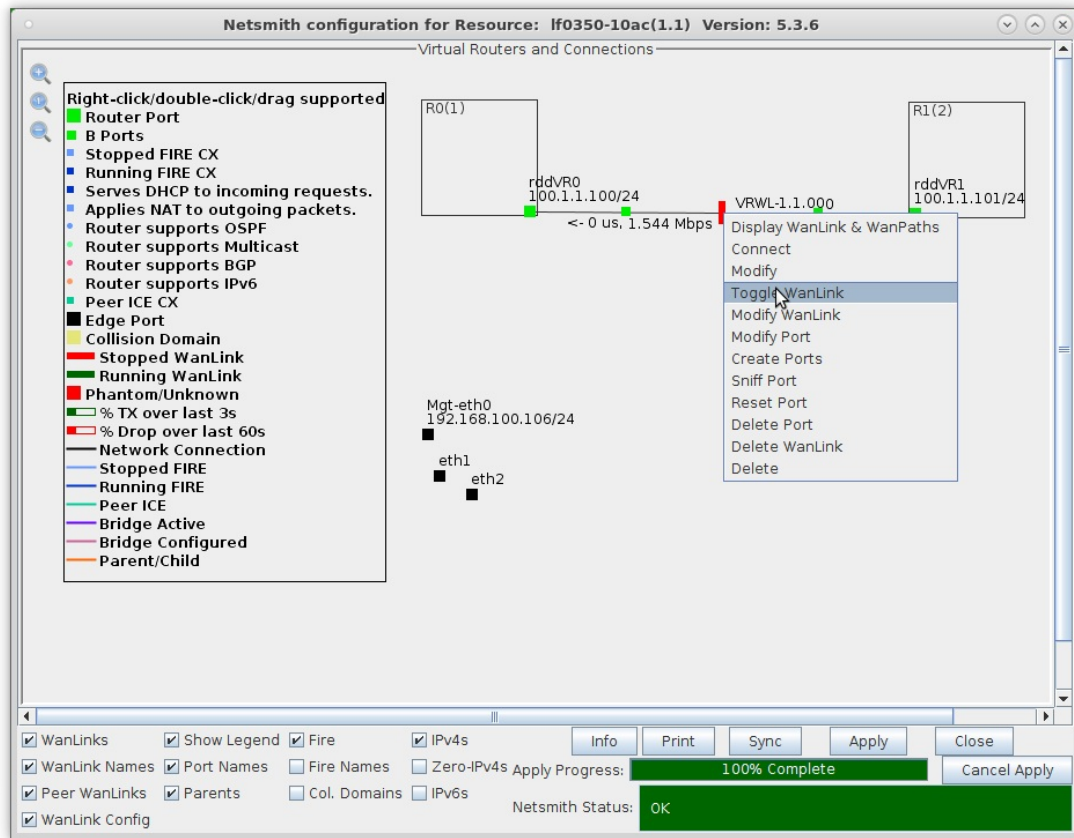

For more information see [LANforge-GUI User Guide: Netsmith](#)

6. Setup MAC VLANs.

A. Go to the **Port Mgr** tab, select eth1 and click **Create**

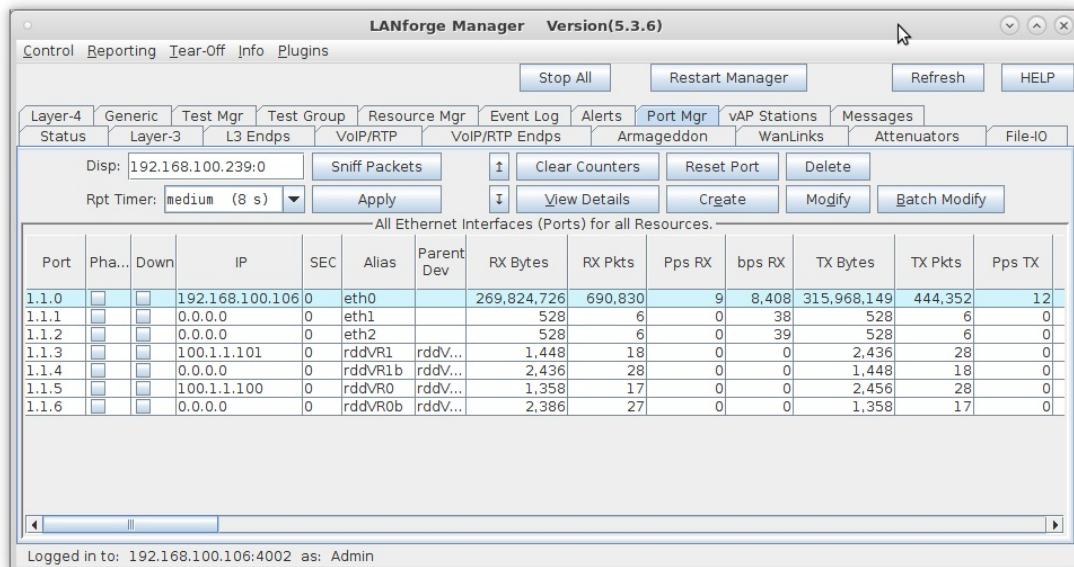

B. Select the **MAC-VLAN** button

Create VLANs on Port: 1.1.1

1 MAC-VLAN 802.1Q-VLAN Redirect Bridge Bond GRE Tunnel
 WiFi STA WiFi VAP WiFi Monitor WiFi Virtual Radio

2 Shelf: 1 Resource: 1 (1f0350-10ac) Port: 1 (eth1)

3 VLAN ID: DHCP-IPv4
 Parent MAC: 00:0d:b9:47:10:ad DHCP Client ID: None
 MAC Addr: xx:xx:xx:*:xx IP Address: 172.1.1.1/24 Global IPv6: AUTO
 Quantity: 2 IP Mask or Bits: Link IPv6: AUTO
 Gateway IP: IPv6 GW: AUTO
 #1 Redir Name: #2 Redir Name:
 STA ID: SSID:
 WiFi AP: Key/Phrase:
 WPA WPA2 WEP

4 Down

- A. Set a MAC address that begins with 00 (Ex: 00:11:33:55:77:01)
- B. Set the Quantity to 2
- C. Set the IP Address to 172.1.1.1 and IP Mask to 255.255.255.0
- D. Leave the Gateway IP field blank
- E. Click **OK** when done

C. Select the MAC VLAN eth1 #1 and click **Modify**

LANforge Manager Version(5.3.6)

Control Reporting Tear-Off Info Plugins

Stop All Restart Manager Refresh HELP

Layer-4 Generic Test Mgr Test Group Resource Mgr Event Log Alerts Port Mgr vAP Stations Messages

Status Layer-3 L3 Endps VoIP/RTP VoIP/RTP Endps Armageddon WanLinks Attenuators File-I/O


Disp: 192.168.100.239:0 Sniff Packets Clear Counters Reset Port Delete
 Rpt Timer: medium (8 s) Apply View Details Create Modify Batch Modify

All Ethernet Interfaces (Ports) for all Resources.


Port	Pha...	Down	IP	SEC	Alias	Parent Dev	RX Bytes	RX Pkts	Pps RX	bps RX	TX Bytes	TX Pkts	Pps TX
1.1.0			192.168.100.106	0	eth0		270,124,382	693,526	9	8,827	319,635,849	447,964	13
1.1.1			0.0.0.0	0	eth1		528	6	0	0	6,166	75	0
1.1.2			0.0.0.0	0	eth2		6,166	75	0	36	528	6	0
1.1.3			100.1.1.101	0	rddVR1	rddV...	1,518	19	0	0	2,506	29	0
1.1.4			0.0.0.0	0	rddVR1b	rddV...	2,506	29	0	0	1,518	19	0
1.1.5			100.1.1.100	0	rddVR0	rddV...	1,428	18	0	0	2,456	28	0
1.1.6			0.0.0.0	0	rddVR0b	rddV...	2,456	28	0	0	1,428	18	0
1.1.7			172.1.1.1	0	eth1 #0	eth1	0	0	0	0	1,038	13	0
1.1.8			172.1.1.2	0	eth1 #1	eth1	0	0	0	0	1,128	14	0

Logged in to: 192.168.100.106:4002 as: Admin

D. Set eth1#1 IP address to 172.2.2.1 and IP Mask to 255.255.255.0

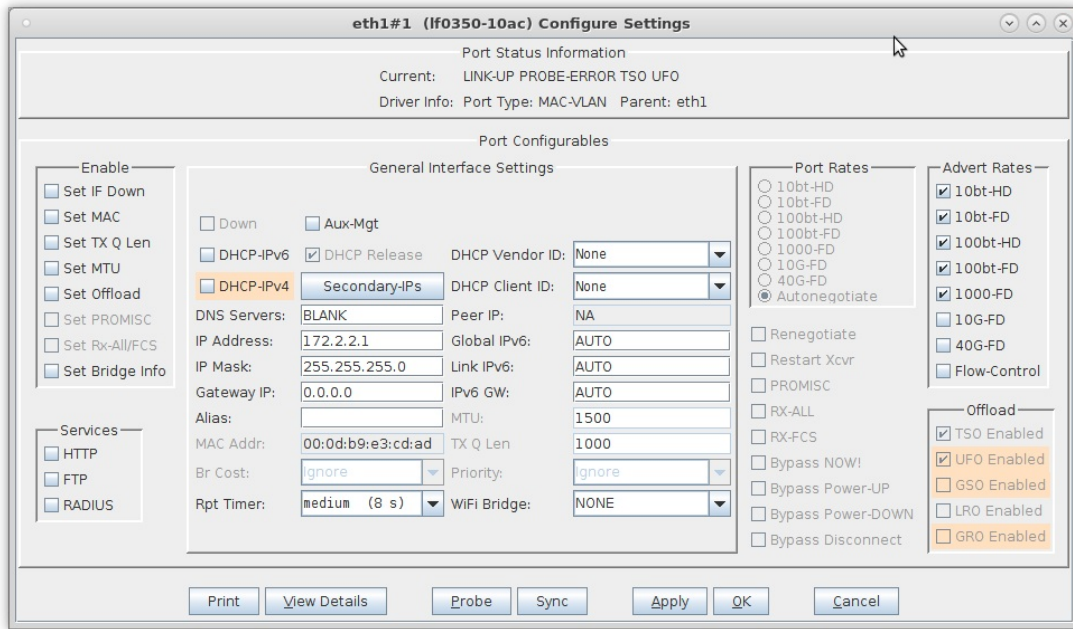

E. Select eth2 and click **Create**

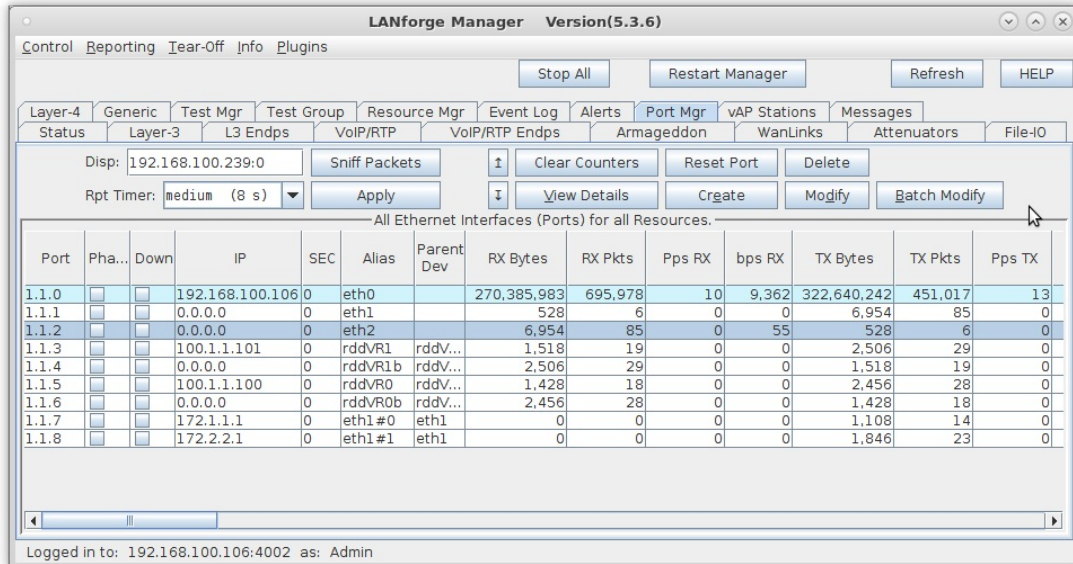


F. Select the **MAC-VLAN** button

- A. Set a MAC address that begins with 00 (Ex: 00:22:44:66:88:01)
- B. Set the Quantity to 2
- C. Set the IP Address to 172.1.1.100 and IP Mask to 255.255.255.0
- D. Set the Gateway IP to 172.1.1.1
- E. Click **OK** when done

G. Select the MAC VLAN eth2#1 and click **Modify**

Port	Pha...	Down	IP	SEC	Alias	Parent Dev	RX Bytes	RX Pkts	Pps RX	bps RX	TX Bytes	TX Pkts	Pps TX
1.1.00			192.168.100.106	0	eth0		270,635,535	698,242	9	8,893	325,639,014	453,975	13
1.1.01			0.0.0.0	0	eth1		2,644	32	0	23	7,234	89	0
1.1.02			0.0.0.0	0	eth2		7,234	89	0	4	2,644	32	0
1.1.03			100.1.1.101	0	rddVR1	rddV...	1,588	20	0	0	2,576	30	0
1.1.04			0.0.0.0	0	rddVR1b	rddV...	2,576	30	0	4	1,588	20	0
1.1.05			100.1.1.100	0	rddVR0	rddV...	1,498	19	0	4	2,526	29	0
1.1.06			0.0.0.0	0	rddVR0b	rddV...	2,526	29	0	0	1,498	19	0
1.1.07			172.1.1.1	0	eth1#0	eth1	0	0	0	0	1,178	15	0
1.1.08			172.2.2.1	0	eth1#1	eth1	0	0	0	0	2,056	26	0
1.1.09			172.1.1.100	0	eth2#0	eth2	0	0	0	0	1,058	13	0
1.1.10			172.1.1.101	0	eth2#1	eth2	0	0	0	0	1,058	13	0


H. Set eth2#1 IP address to 172.2.2.100, IP Mask to 255.255.255.0 and Gateway IP to 172.2.2.1

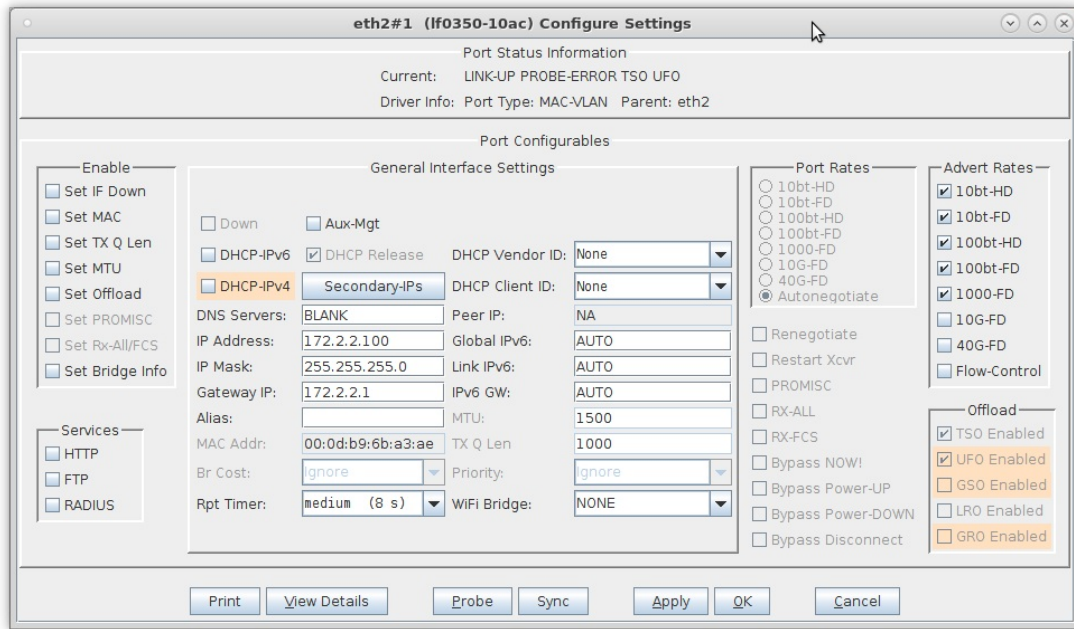

For more information see [LANforge-GUI User Guide: Virtual Interfaces](#)


7. Configure Netsmith.

- A. After clicking on the sync button, move the ports on the Netsmith window to be more clearly visible. **Eth1 and eth2 are connected via a loopback cabel**

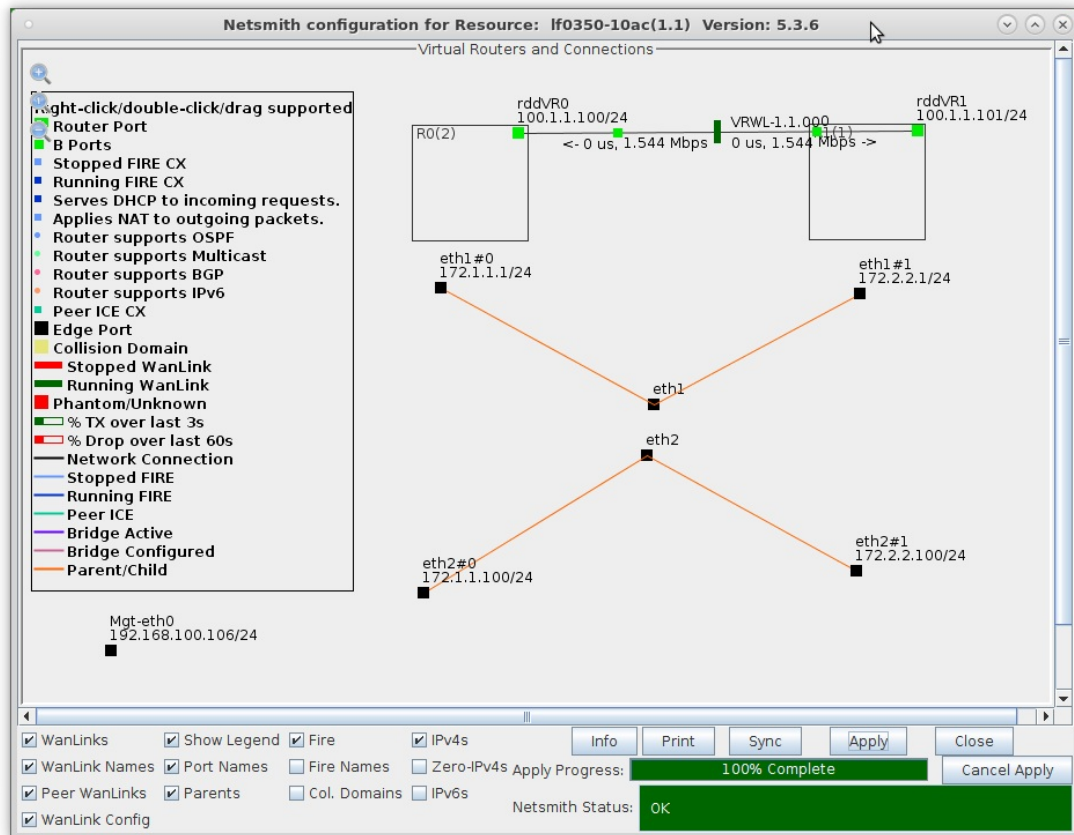


- A. **NOTE:** Be sure to click **Apply** after moving objects so that their new positions are saved to the database


B. Drag eth1#0 into Router R0(1)

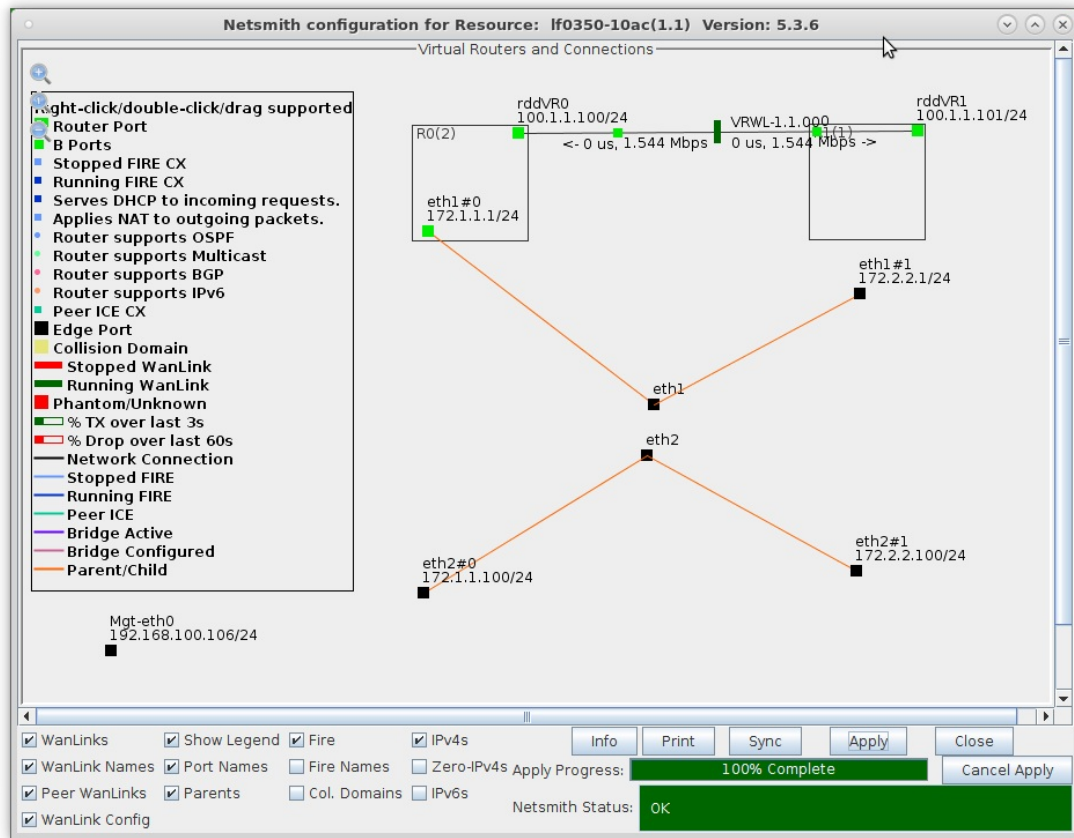

C. Drag eth1#1 into Router R1(2)

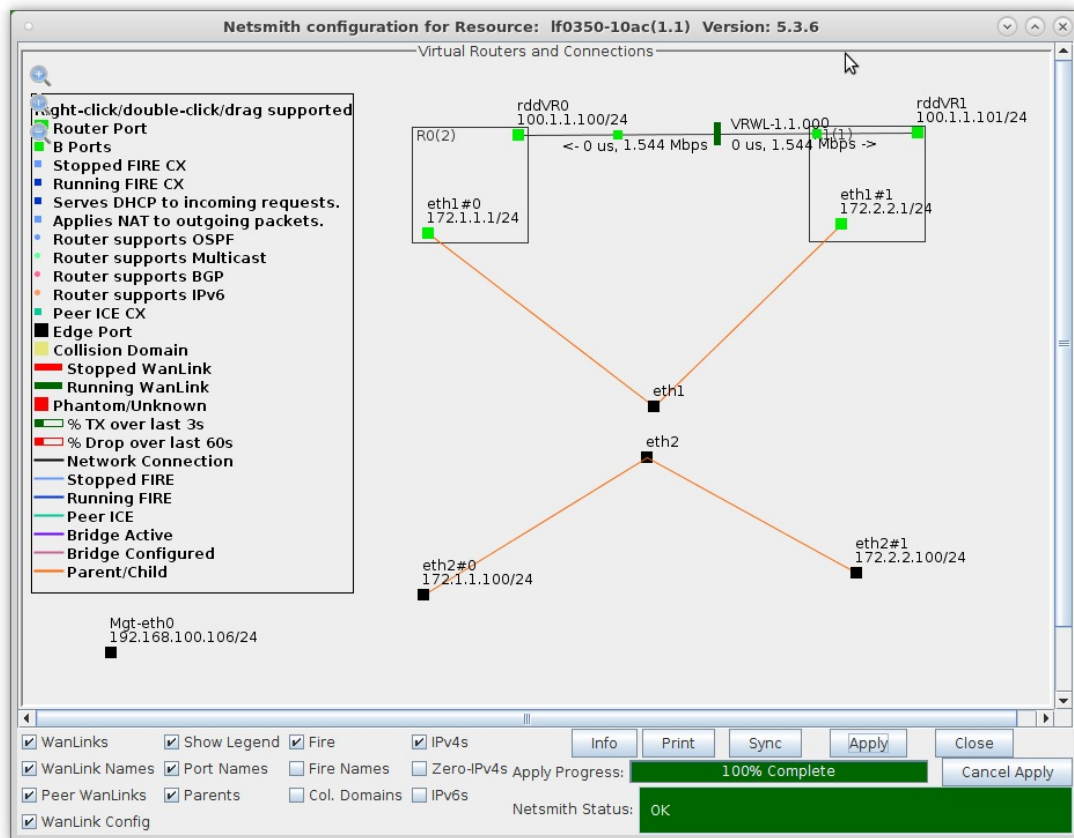

D. Click **Apply** in the Netsmith window

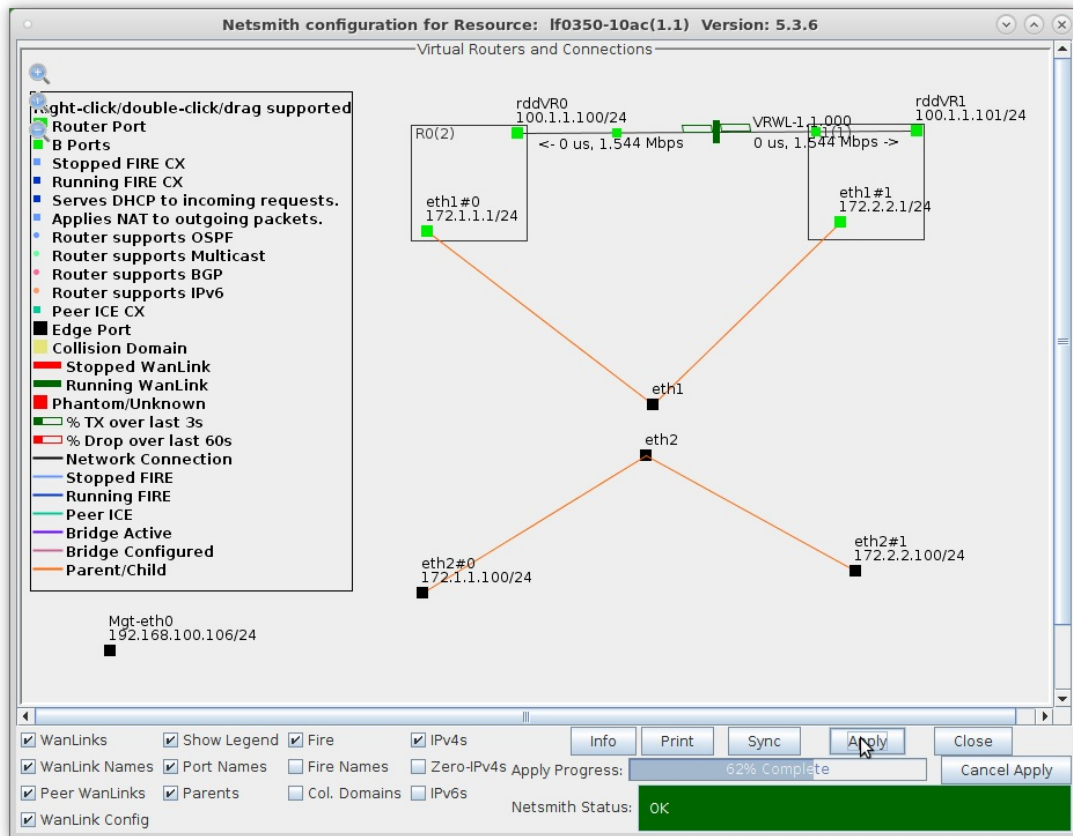


- LANforge is now ready to accept incoming traffic on eth0, the single physical port that is connected to a Routed Mode WanLink
- Ports eth0 and eth1 are physically connected via a loopback cable in this example. MAC VLANs on eth1 are configured to generate test traffic to the Routed Mode WanLink


For more information see [LANforge-GUI User Guide: Netsmith](#)

8. Setup a Layer-3 UDP connection between MAC VLANs eth2#0 and eth2#1.

- Go to the **Layer-3** tab and click **Create**

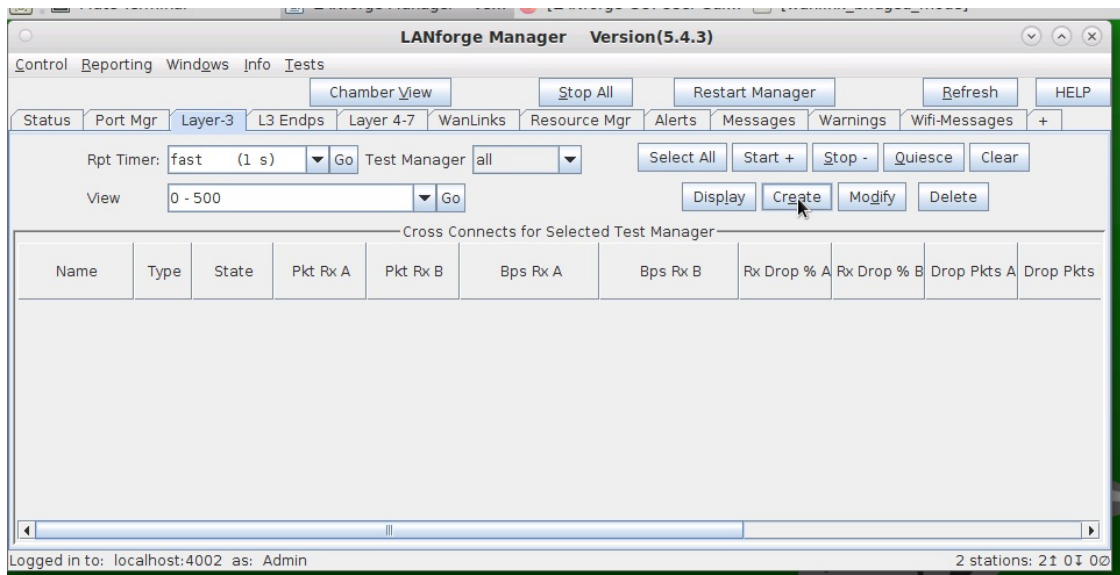


B. Set Endpoint A to be eth2#0 and Endpoint B to be eth2#1

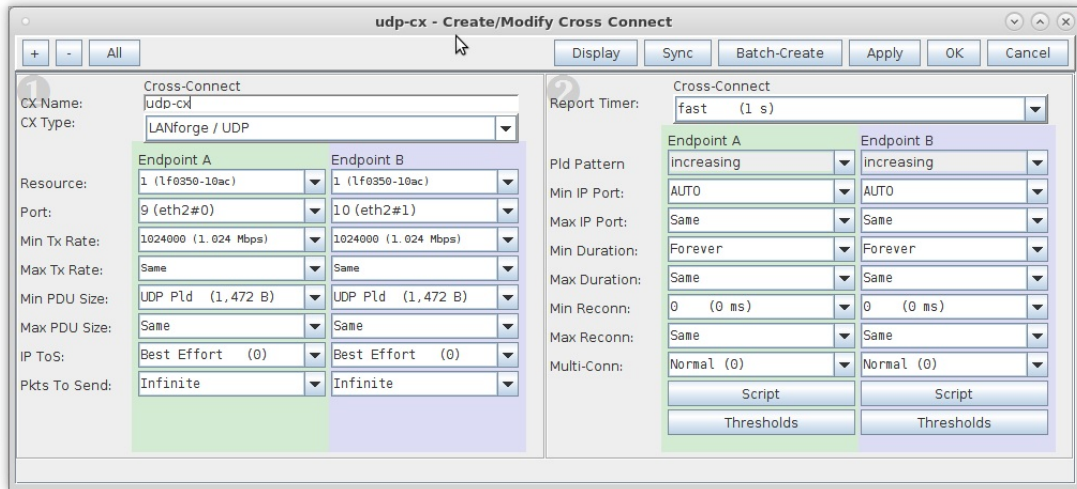


A. Enter the CX name then set the CX Type to LANforge UDP and the Report Timer to 1000

B. Set the Min/Max Tx Rate to 1024000 and the Min/Max Pkt Size to 1472


C. Select the new connection and click **Start**

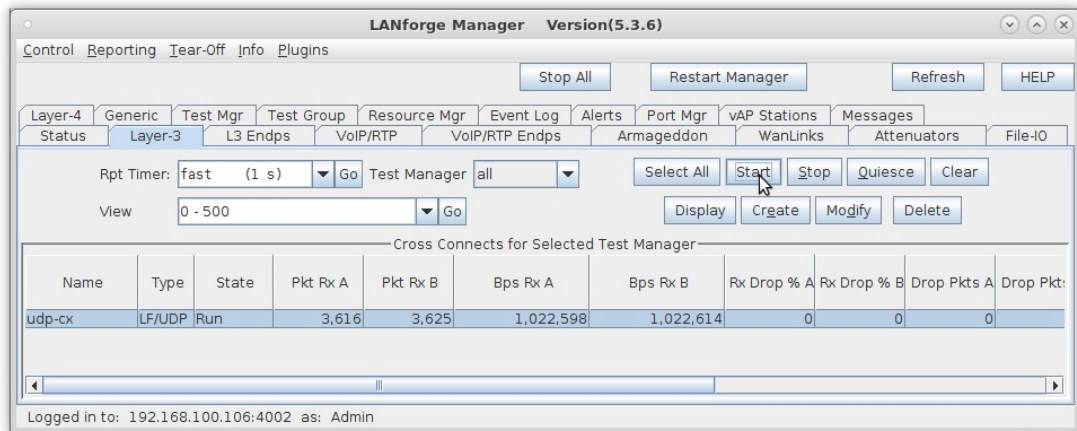


A. Go to the **Status** tab and click **Netsmith**

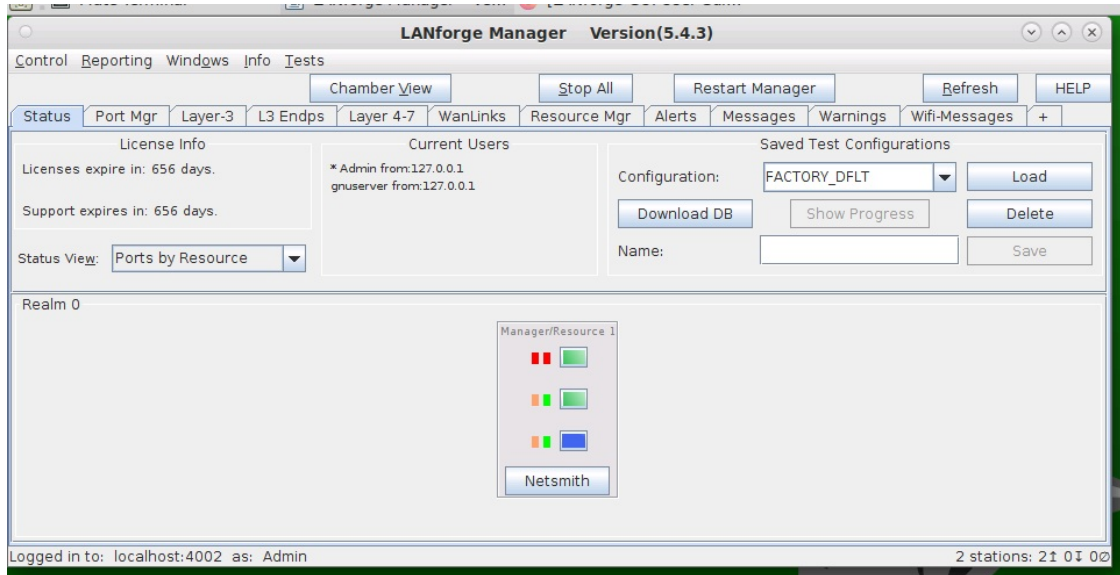


B. Right-click in the Netsmith window and select **New Connection**

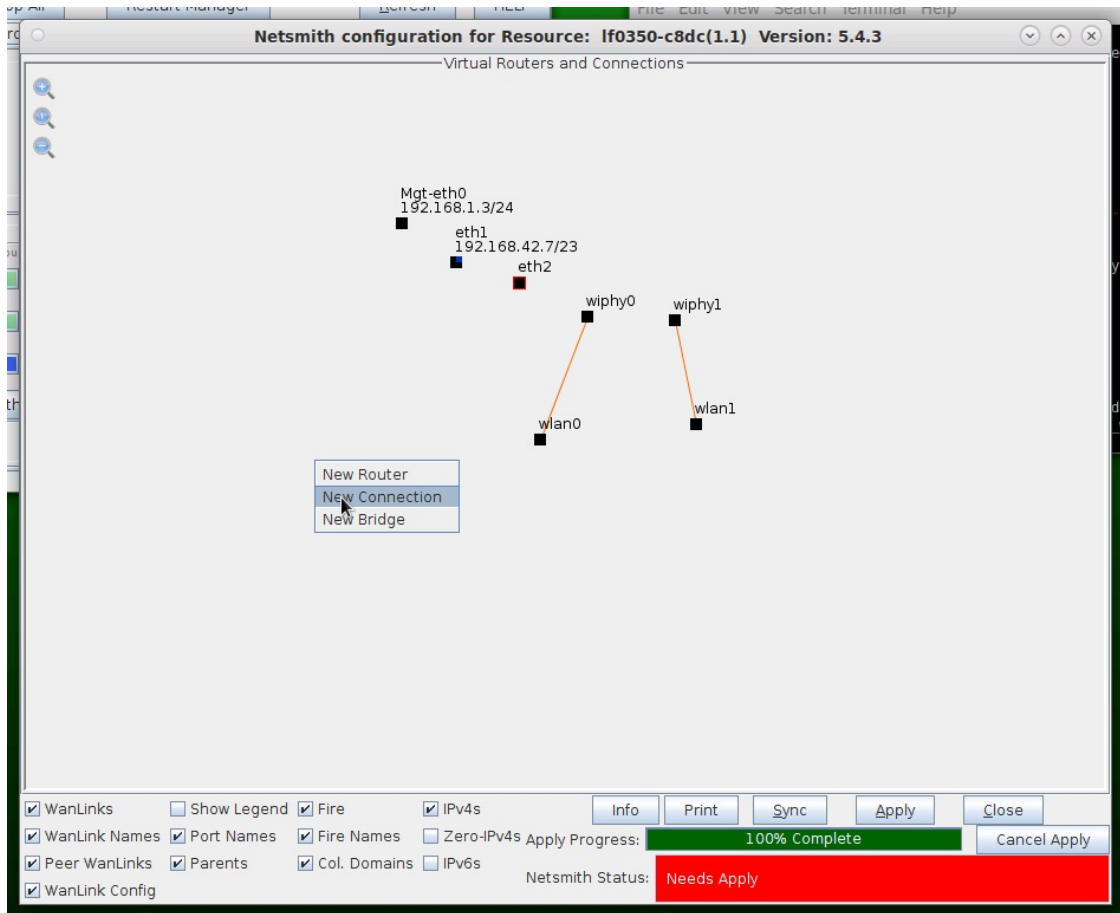


C. Accept defaults, **Auto Create** everything and click **OK**

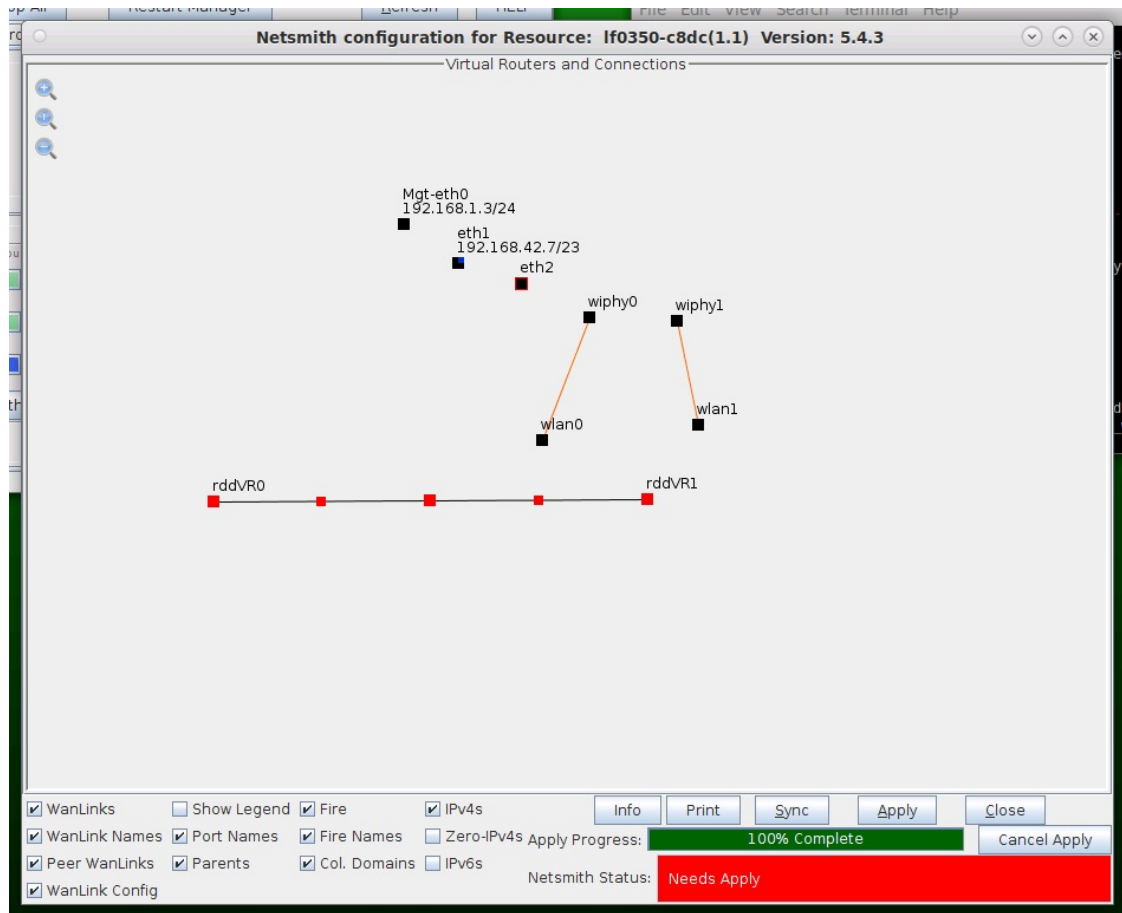

D. Click **Apply** in the Netsmith window to create the connection

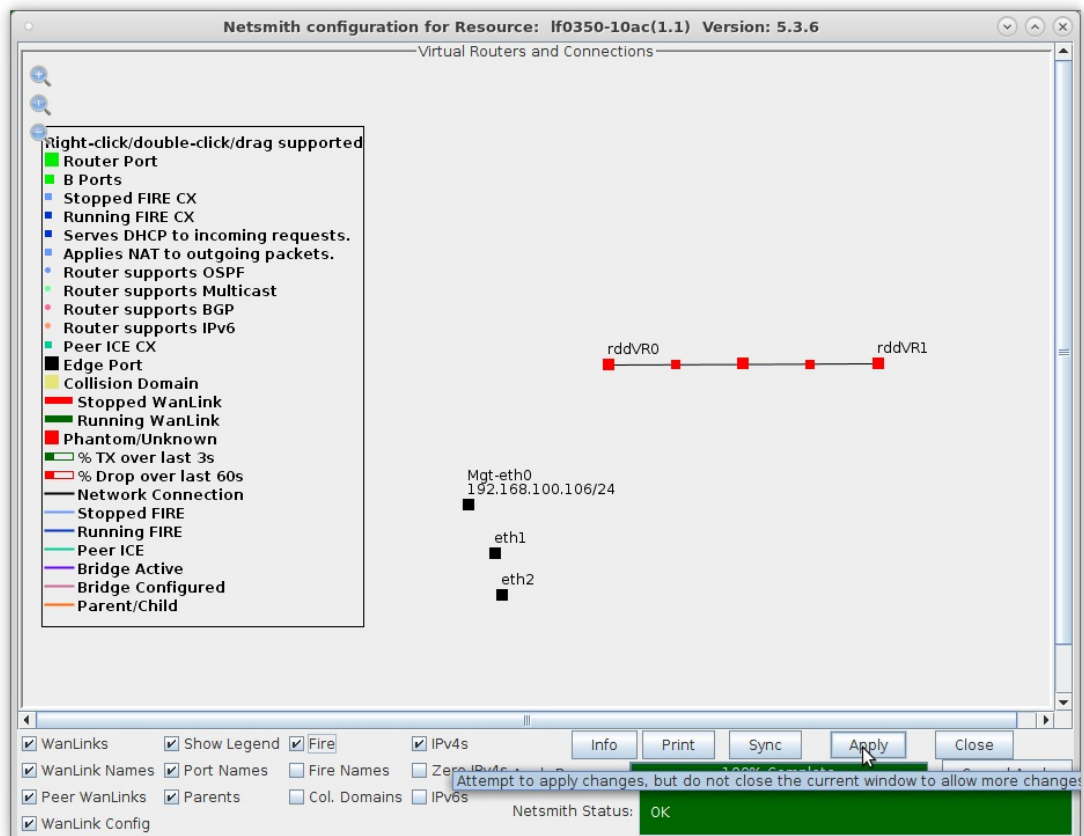


E. The Netsmith window after applying changes

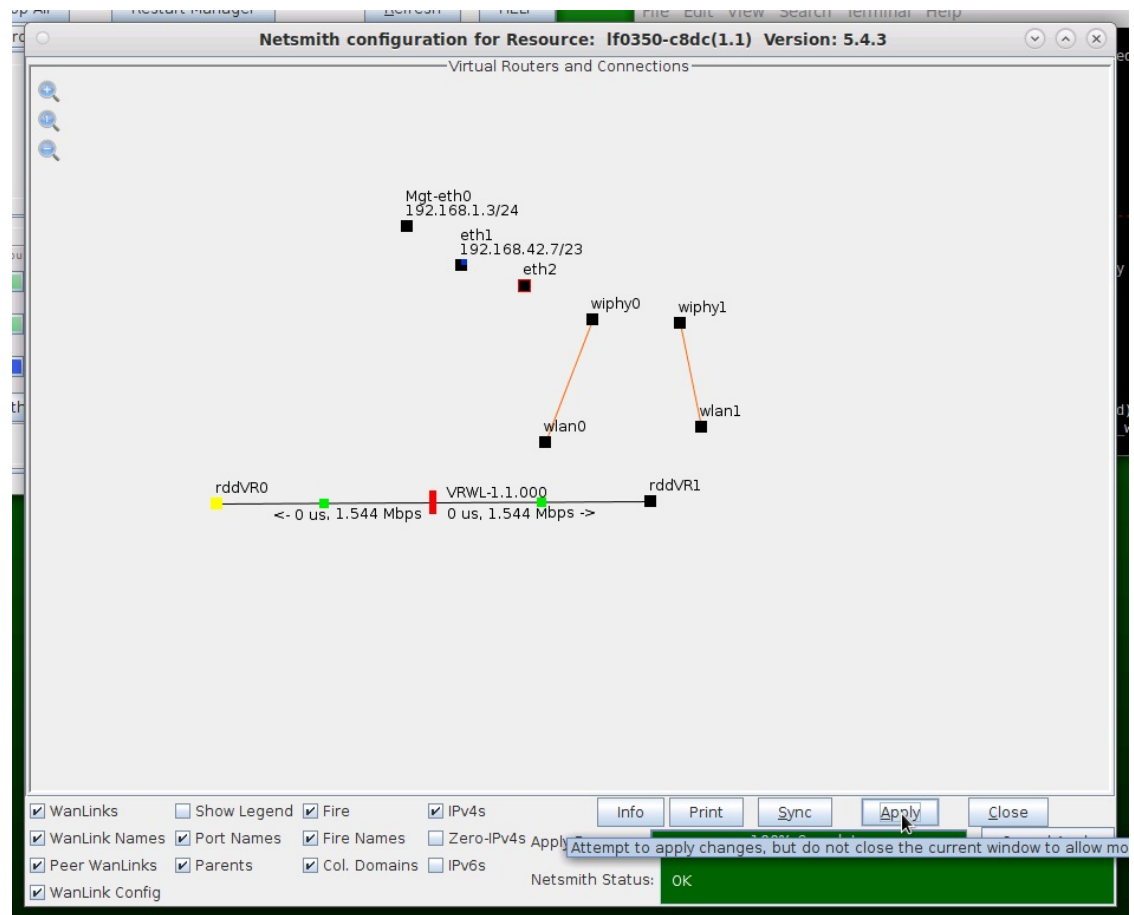


For more information see [LANforge-GUI User Guide: Netsmith](#)

2. Setup the WanLink.

A. Right-click the WanLink and select **Modify WanLink**

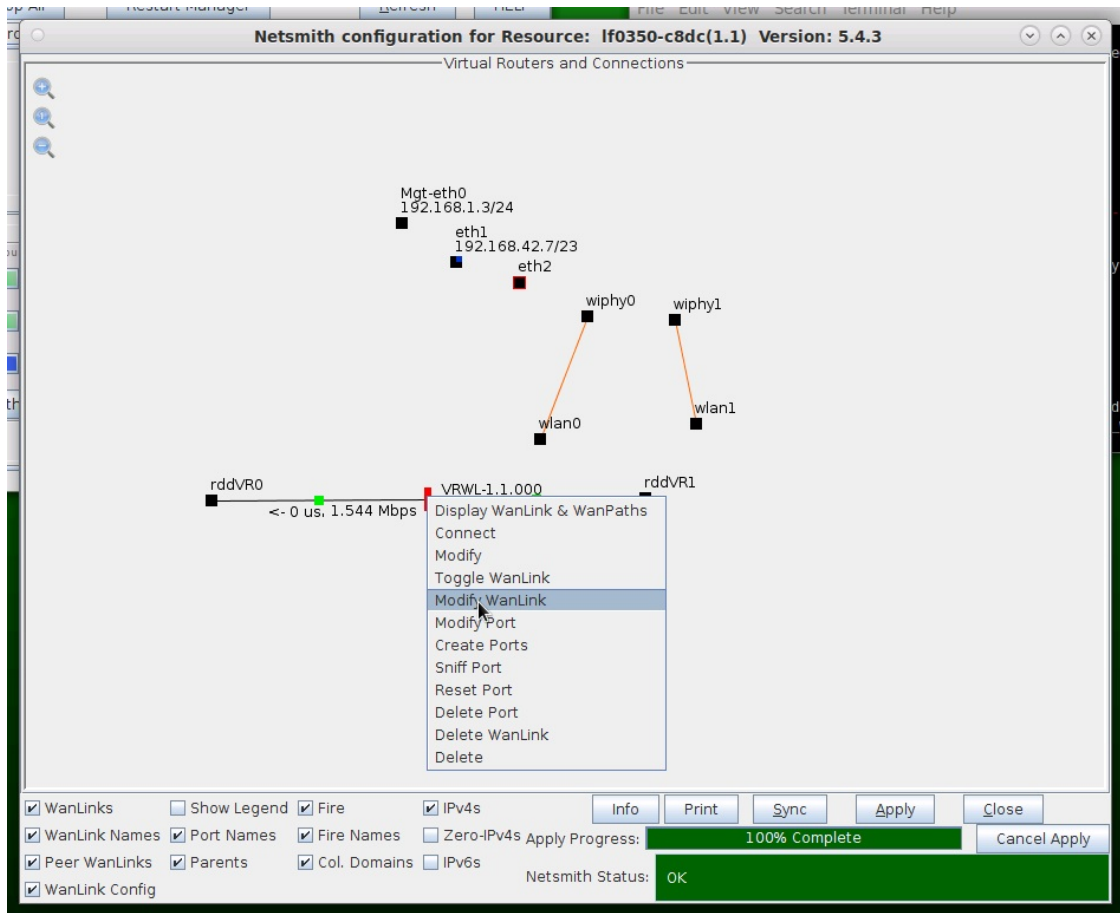

B. Setup the WanLink with values larger than what each of the WanPaths will use

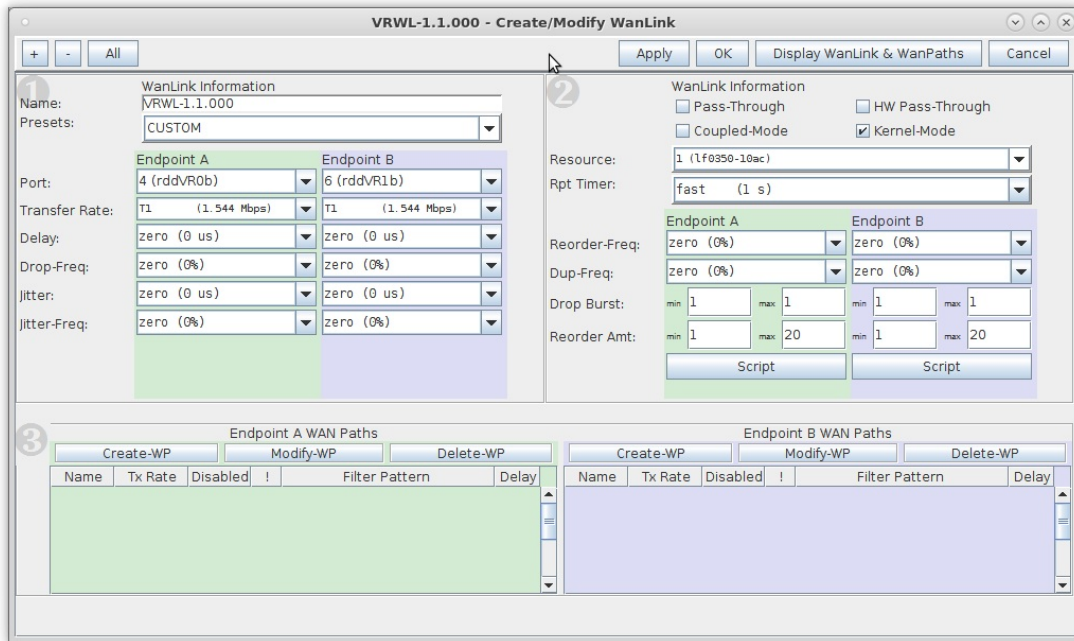

A. WanPaths are subordinate to WanLinks. WanLinks, therefore, should be configured with sufficient bandwidth and buffering required by all of its WanPaths

B. Click **Apply** and leave the Create/Modify WanLink window open

3. Setup the WanPaths.

- A. Click **Create-WP** on Entry Point A to create a new WanPath on this WanLink

- A. **NOTE:** In order to filter by specific IP address, use a Source and Dest Mask of 32 to exactly match the IP coming in on the Entry Point
- B. Click **OK** to create the WanPath

B. Click **Create-WP** on Entry Point B to create a new WanPath on this WanLink

Create/Modify WanPath for Endpoint: VRWL-1.1.000-B

Name: ep-2 Backlog Buffer: AUTO

PCAP Filter:

Source IP/MAC: 172.2.2.100 Source Mask: 32

Dest IP/MAC: 172.1.1.100 Dest Mask: 32

Transfer Rate: 64 Kbps (64 Kbps) Delay: zero (0 us)

Jitter: zero (0 us) Drop-Freq: zero (0%)

Min Drop Burst: 1 Max Drop Burst: 1

Min Reorder Amount: 1 Max Reorder Amount: 20

Reorder-Freq: zero (0%) Dup-Freq: zero (0%)

Jitter-Freq: zero (0%) Test Manager:

ICEcap Replay Replay File: Dir

Disabled Loop Replay Replay Latency Replay Loss

Same As WanLink Replay Dup Replay Bandwidth Use Pcap Filter

Inverse Match Drop-Xth Duplicate-Xth Reorder-Xth

Corruption #0

Rate: 0

Corruption: Random Write

Byte-to-Write: 0

Min Offset: 0

Max Offset: 0

Chain-to-Next Do Checksum

Corruption #1

Rate: 0

Corruption: Random Write

Byte-to-Write: 0

Min Offset: 0

Max Offset: 0

Chain-to-Next Do Checksum

Corruption #2

Rate: 0

Corruption: Random Write

Byte-to-Write: 0

Min Offset: 0

Max Offset: 0

Chain-to-Next Do Checksum

Corruption #3

Rate: 0

Corruption: Random Write

Byte-to-Write: 0

Min Offset: 0

Max Offset: 0

Chain-to-Next Do Checksum

Corruption #4

Rate: 0

Corruption: Random Write

Byte-to-Write: 0

Min Offset: 0

Max Offset: 0

Chain-to-Next Do Checksum

Corruption #5

Rate: 0

Corruption: Random Write

Byte-to-Write: 0

Min Offset: 0

Max Offset: 0

Chain-to-Next Do Checksum

A. **NOTE:** The Source and Destination IPs for this WanPath are the reverse of those for Entry Point A

B. Click **OK** to create the WanPath

C. Create a second WanPath for this WanLink using the next set of IP addresses

Create/Modify WanPath for Endpoint: VRWL-1.1.000-A

Name: ep-3 Backlog Buffer: AUTO

PCAP Filter:

Source IP/MAC: 172.1.1.101 Source Mask: 255.255.255.0

Dest IP/MAC: 172.2.2.101 Dest Mask: 255.255.255.0

Transfer Rate: 64 Kbps Delay: zero (0 us)

Jitter: zero (0 us) Drop-Freq: zero (0%)

Min Drop Burst: 1 Max Drop Burst: 1

Min Reorder Amount: 1 Max Reorder Amount: 20

Reorder-Freq: zero (0%) Dup-Freq: zero (0%)

Jitter-Freq: zero (0%) Test Manager:

ICEcap Replay Replay File: Dir

Disabled Loop Replay Replay Latency Replay Loss

Same As WanLink Replay Dup Replay Bandwidth Use Pcap Filter

Inverse Match Drop-Xth Duplicate-Xth Reorder-Xth

Corruption #0

Rate: 0 Corruption: Random Write

Byte-to-Write: 0 Min Offset: 0 Max Offset: 0

Chain-to-Next Do Checksum

Corruption #1

Rate: 0 Corruption: Random Write

Byte-to-Write: 0 Min Offset: 0 Max Offset: 0

Chain-to-Next Do Checksum

Corruption #2

Rate: 0 Corruption: Random Write

Byte-to-Write: 0 Min Offset: 0 Max Offset: 0

Chain-to-Next Do Checksum

Corruption #3

Rate: 0 Corruption: Random Write

Byte-to-Write: 0 Min Offset: 0 Max Offset: 0

Chain-to-Next Do Checksum

Corruption #4

Rate: 0 Corruption: Random Write

Byte-to-Write: 0 Min Offset: 0 Max Offset: 0

Chain-to-Next Do Checksum

Corruption #5

Rate: 0 Corruption: Random Write

Byte-to-Write: 0 Min Offset: 0 Max Offset: 0

Chain-to-Next Do Checksum

D. Reverse the Source and Destination IPs for this corresponding WanPath

Create/Modify WanPath for Endpoint: VRWL-1.1.000-B

Name: ep-4 Backlog Buffer: AUTO

PCAP Filter:

Source IP/MAC: 172.2.2.101 Source Mask: 255.255.255.255

Dest IP/MAC: 172.1.1.101 Dest Mask: 255.255.255.255

Transfer Rate: 64 Kbps Delay: zero (0 us)

Jitter: zero (0 us) Drop-Freq: zero (0%)

Min Drop Burst: 1 Max Drop Burst: 1

Min Reorder Amount: 1 Max Reorder Amount: 20

Reorder-Freq: zero (0%) Dup-Freq: zero (0%)

Jitter-Freq: zero (0%) Test Manager:

ICEcap Replay Replay File: Dir

Disabled Loop Replay Replay Latency Replay Loss

Same As WanLink Replay Dup Replay Bandwidth Use Pcap Filter

Inverse Match Drop-Xth Duplicate-Xth Reorder-Xth

Corruption #0 Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

Corruption #1 Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

Corruption #2 Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

Corruption #3 Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

Corruption #4 Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

Corruption #5 Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

E. Verify that the WanPaths on this WanLink are setup correctly, then click **OK** on the Create/Modify WanLink window shown here

VRWL-1.1.000 - Create/Modify WanLink

Apply OK Display WanLink & WanPaths Cancel

1 WanLink Information Name: VRWL-1.1.000 Presets: CUSTOM

Port: Endpoint A: 4 (rddVR0b) Endpoint B: 6 (rddVR1b)

Transfer Rate: T1 (1.544 Mbps) T1 (1.544 Mbps)

Delay: zero (0 us) zero (0 us)

Drop-Freq: zero (0%) zero (0%)

Jitter: zero (0 us) zero (0 us)

Jitter-Freq: zero (0%) zero (0%)

2 WanLink Information Pass-Through HW Pass-Through Coupled-Mode Kernel-Mode

Resource: 1 (1f0950-10ac) Rpt Timer: fast (1 s)

Reorder-Freq: Endpoint A: zero (0%) Endpoint B: zero (0%)

Dup-Freq: zero (0%) zero (0%)

Drop Burst: min 1 max 1 min 1 max 1

Reorder Amt: min 1 max 20 min 1 max 20

Script Script

3 Endpoint A WAN Paths

Name	Tx Rate	Disabled	!	Filter Pattern	Delay
ep-1	64 K	<input type="checkbox"/>	<input type="checkbox"/>	Src: 172.1.1.100/32 Dest: 1...	0
ep-3	64 K	<input type="checkbox"/>	<input type="checkbox"/>	Src: 172.1.1.101/24 Dest: 1...	0


Endpoint B WAN Paths

Name	Tx Rate	Disabled	!	Filter Pattern	Delay
ep-2	64 K	<input type="checkbox"/>	<input type="checkbox"/>	Src: 172.2.2.100/32 Dest: 1...	0
ep-4	64 K	<input type="checkbox"/>	<input type="checkbox"/>	Src: 172.2.2.101/32 Dest: 1...	0


For more information see [LANforge-GUI User Guide: WanLinks](#)

4. Setup the ports with IP addresses.


A. Right-click on the WanLink and select **Toggle Wanlink**

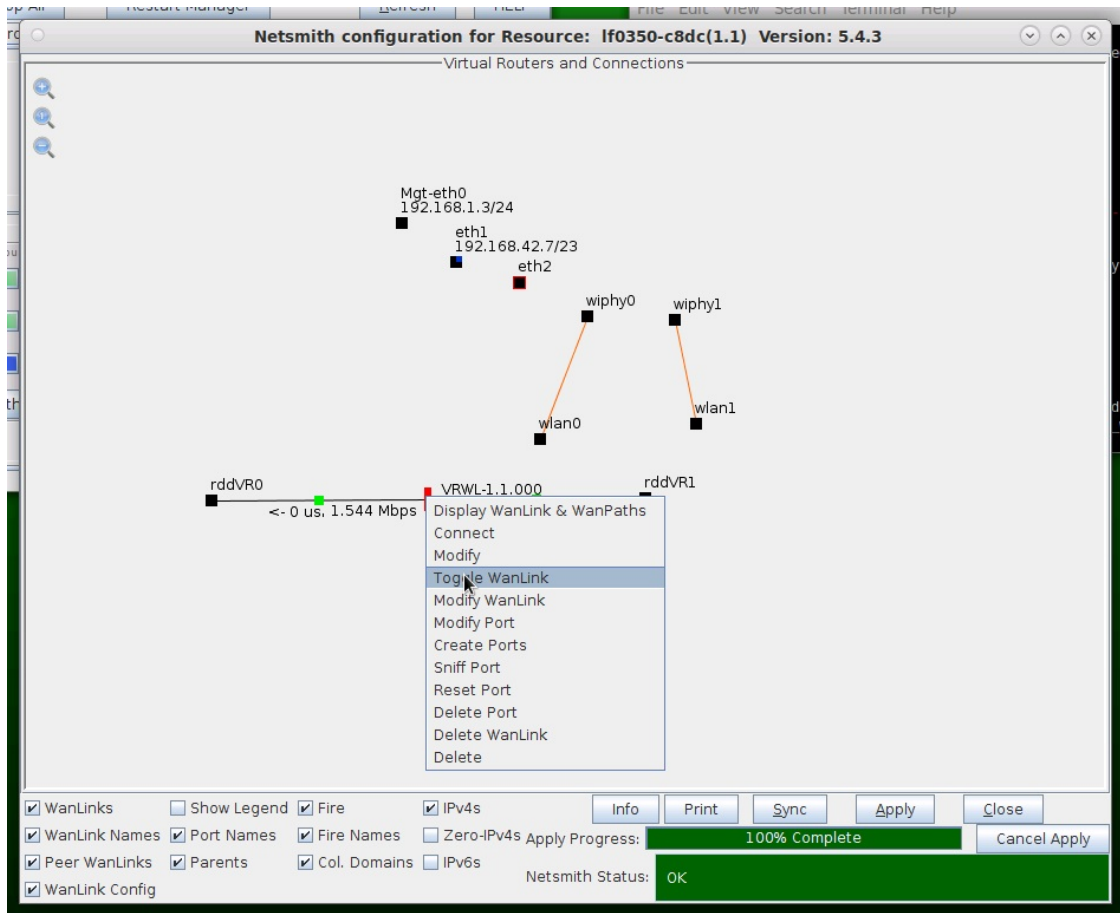


B. Right-click port **rddvR0** and select **Modify Port**

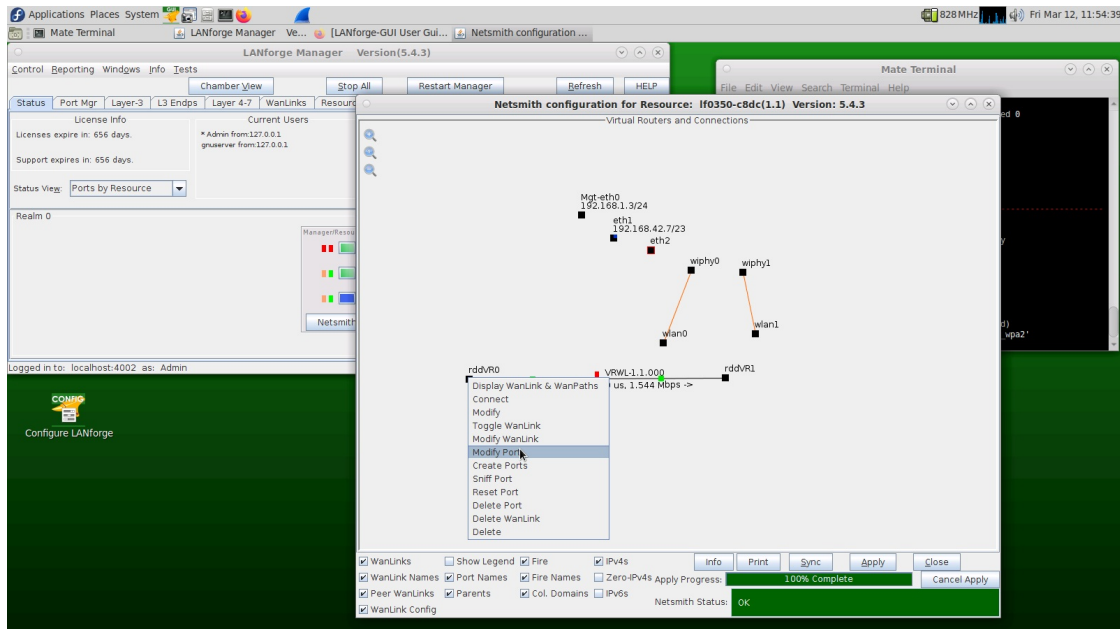

C. Setup an IP address that is on a different network than the WanPath entry points

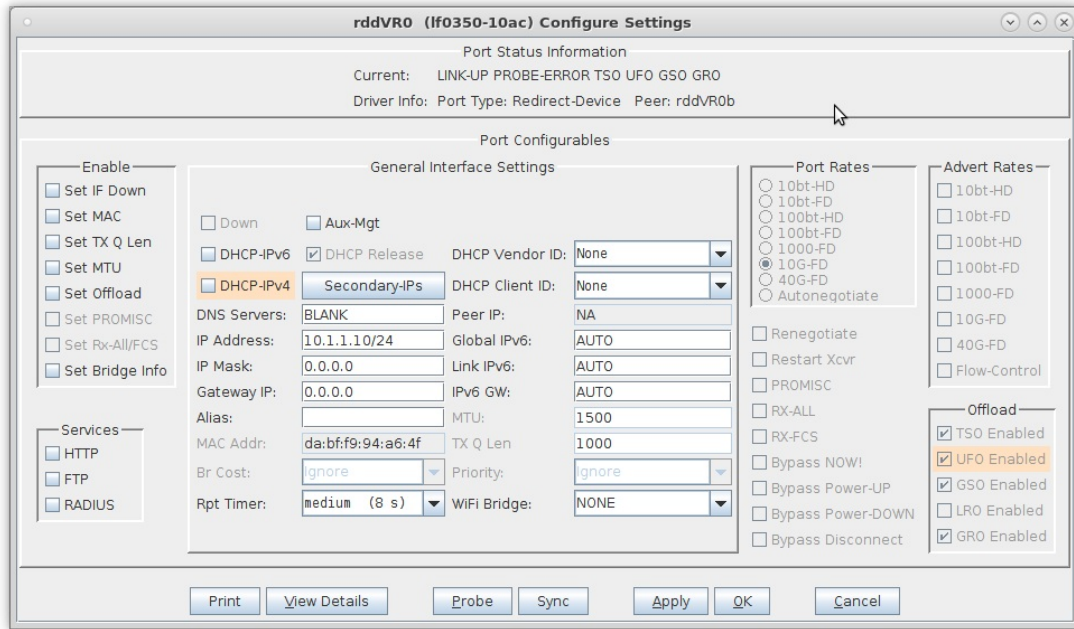


D. Setup an IP address on port rddVR1 that is on the same network as rddVR0

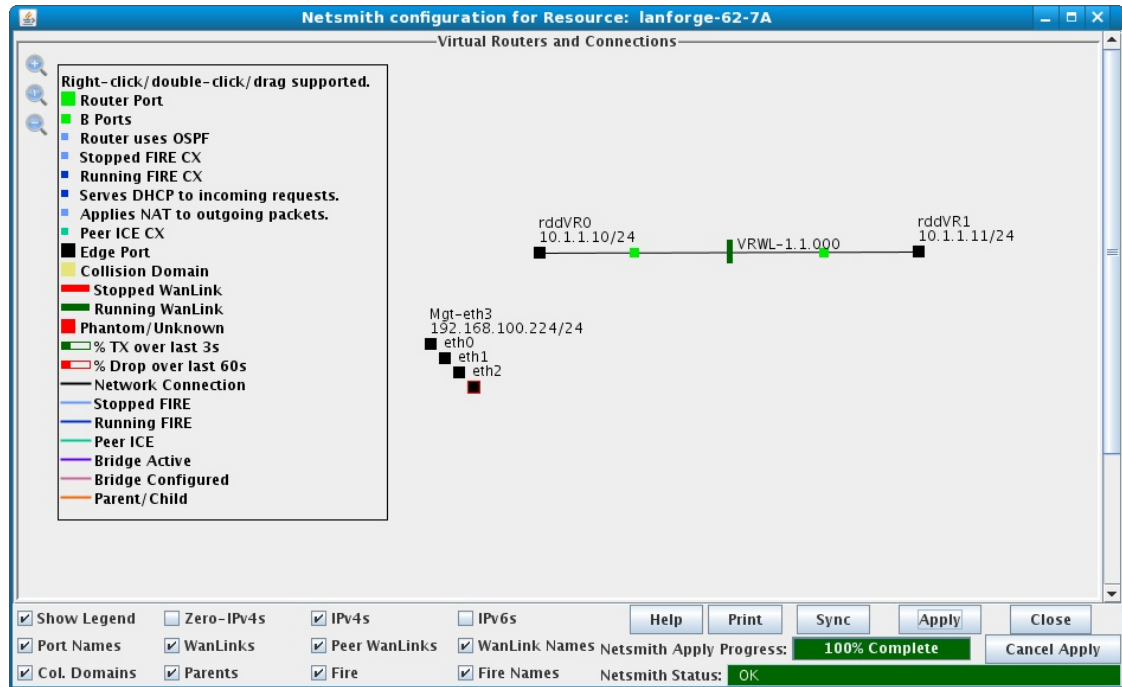


For more information see [LANforge-GUI User Guide: WanLinks](#)

5. Add the Virtual Routers.


A. Right-click in the Netsmith window and select **New Router**

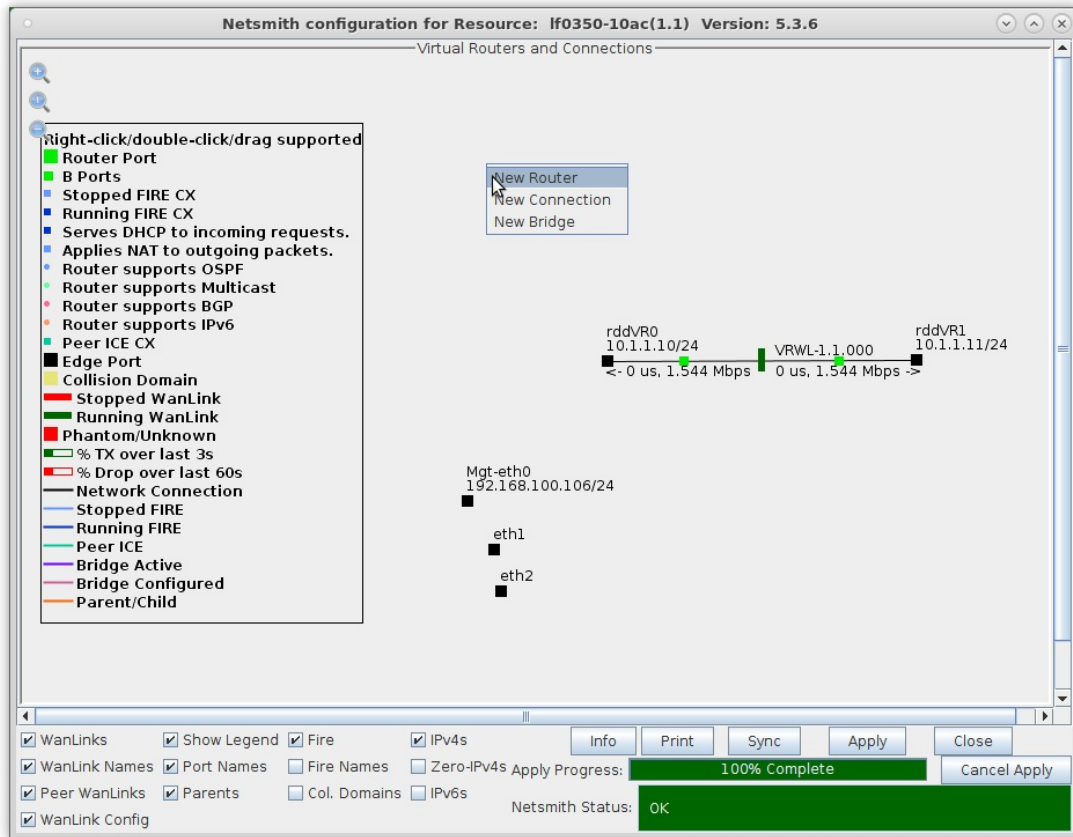

B. Accept the defaults or change the Virtual Router name and graphical size

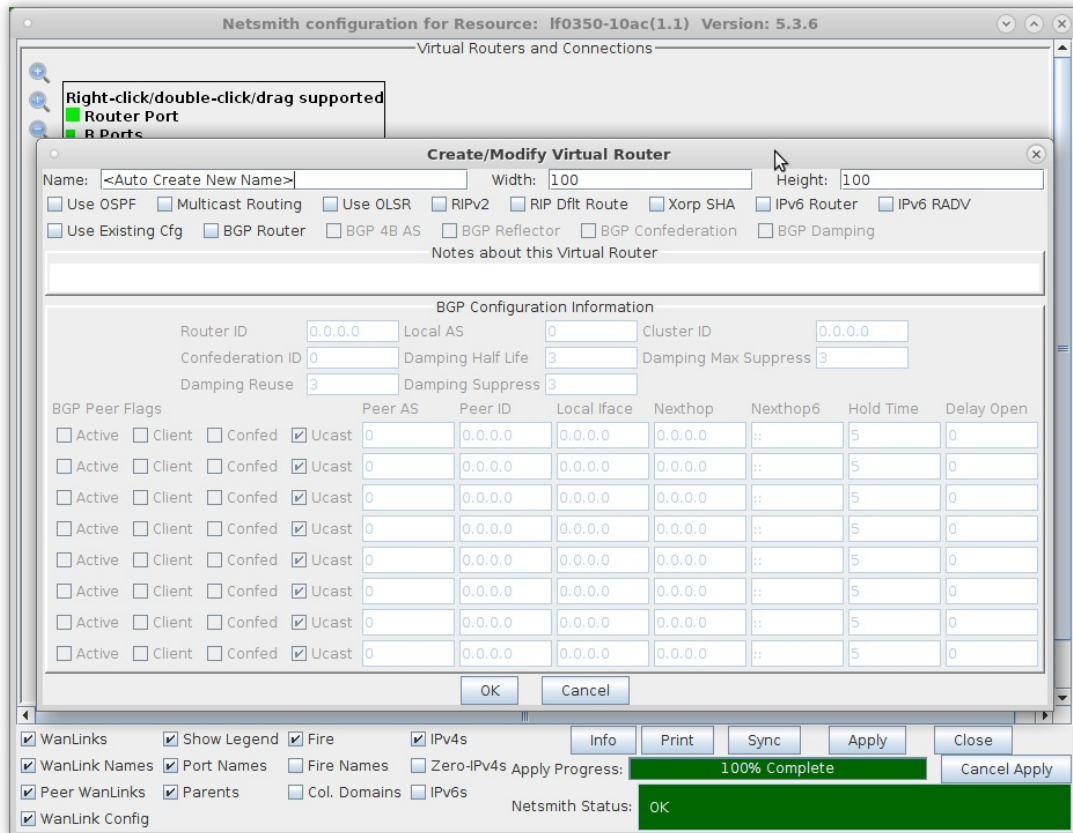


C. Click the **Apply** button and repeat for the second Virtual Router

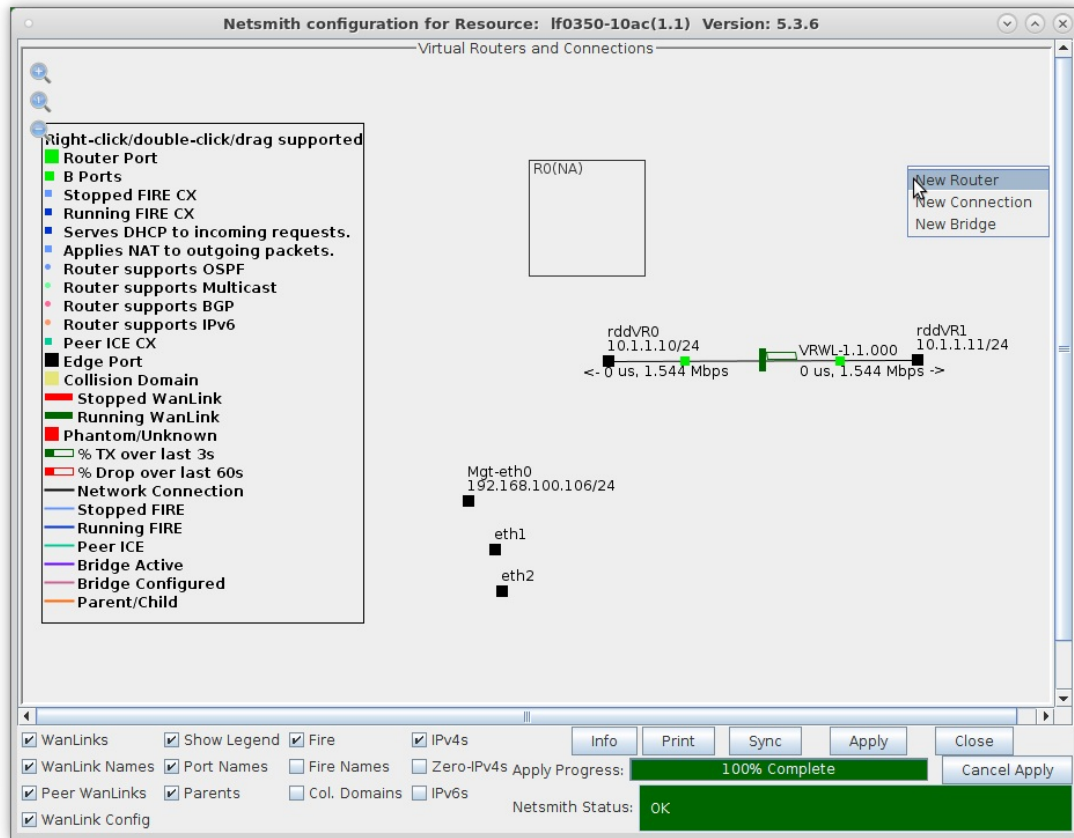


- A. **NOTE:** After making any changes to the Netsmith window, you must click **Apply** or your changes will NOT be implemented and could be lost
- B. **NOTE:** Clicking **Sync** makes sure any changes are synchronized with the current database


D. Left-click **rddvR0** and drag it inside **Router R0(1)**

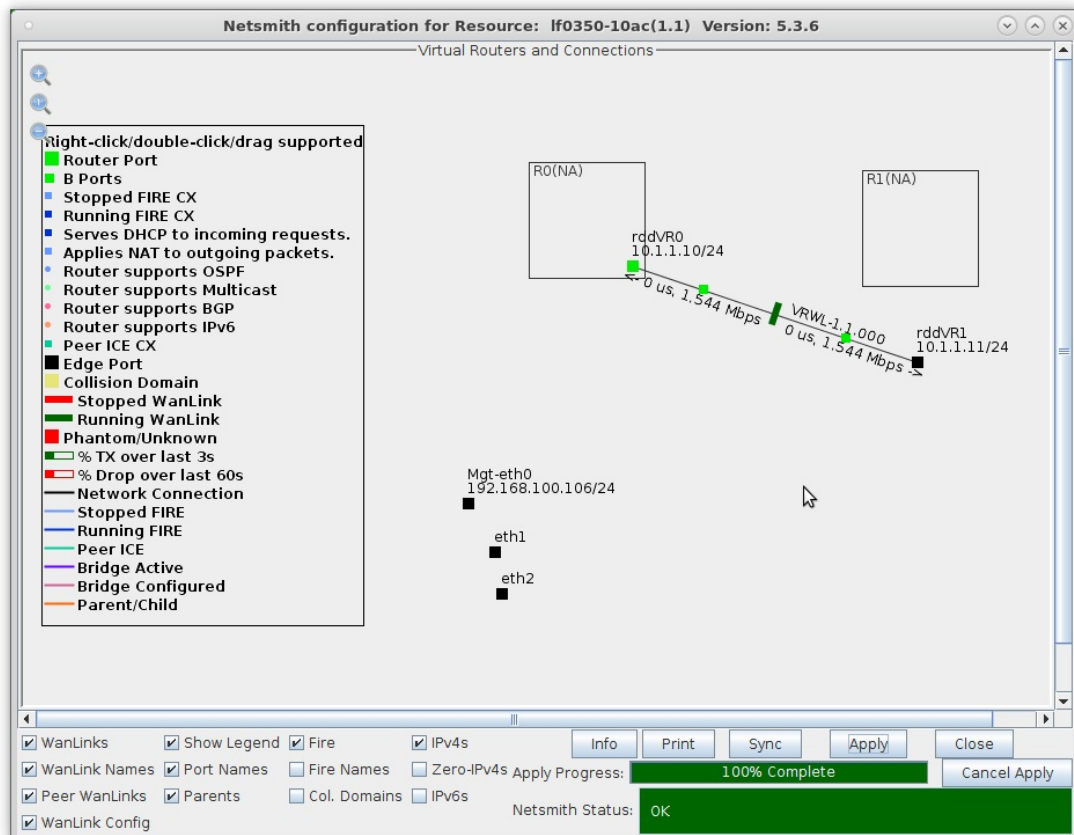

E. Left-click `rddvR1` and drag it inside `Router R1(2)`

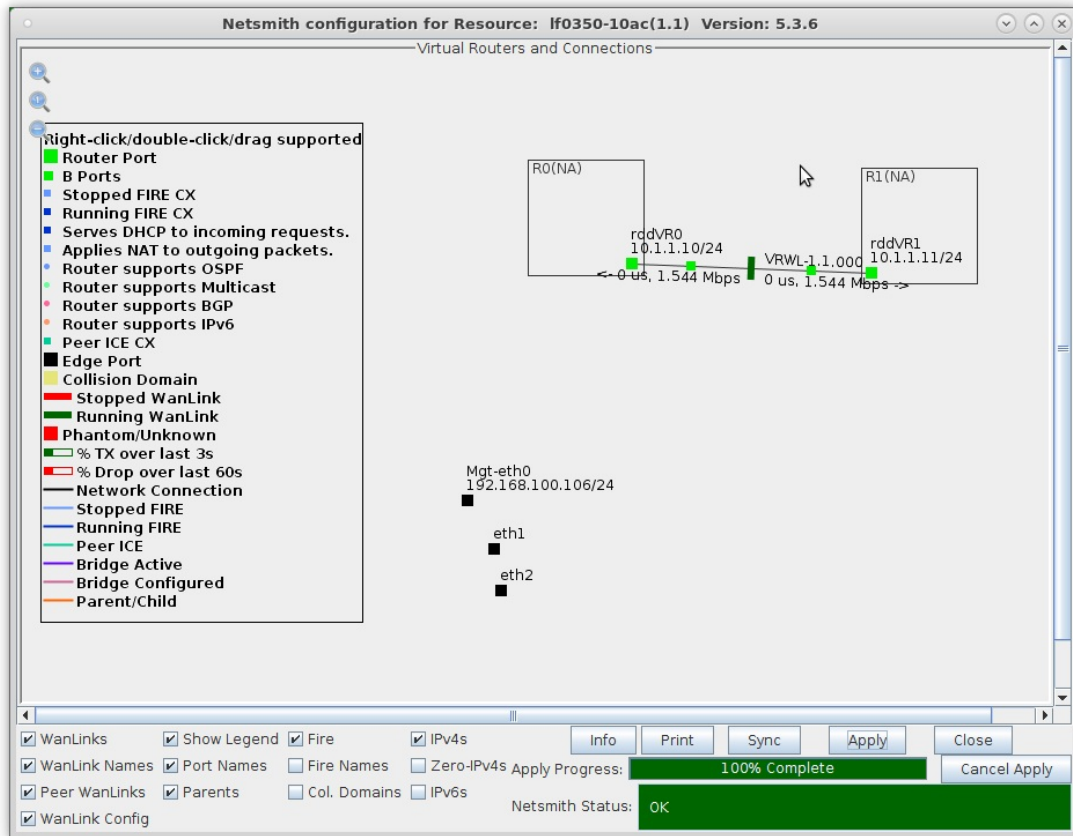


F. Apply your changes in Netsmith

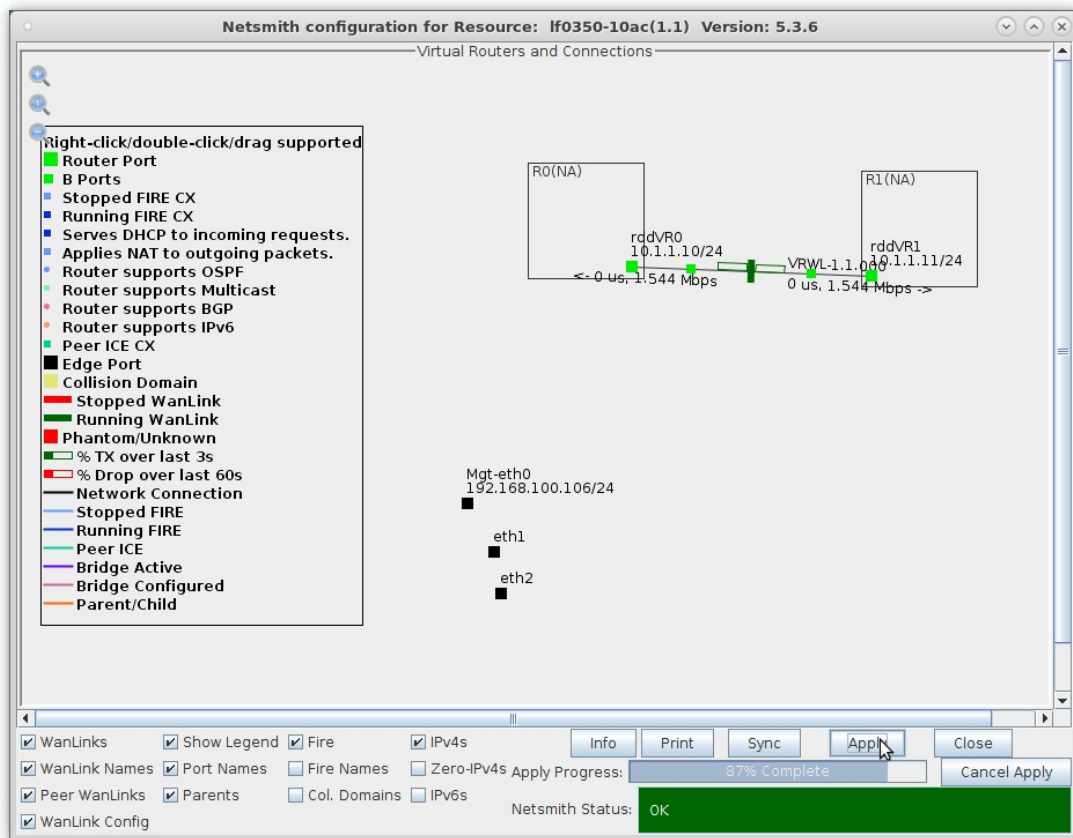


For more information see [LANforge-GUI User Guide: WanLinks](#)

6. Setup the external interfaces.


A. Right-click port `eth1` and select **Modify Port**

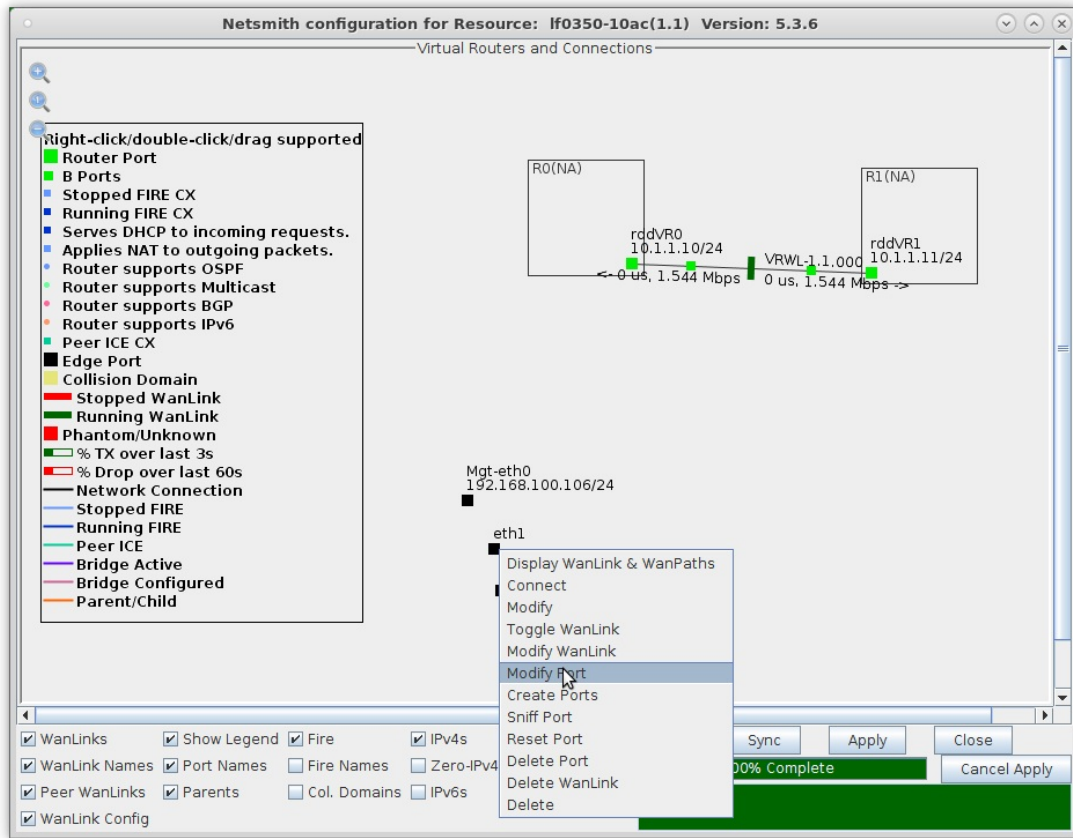


B. Setup `eth1` with a valid IP address and IP mask that is on the same network as the WanPath entry points `ep-1` and `ep-3`

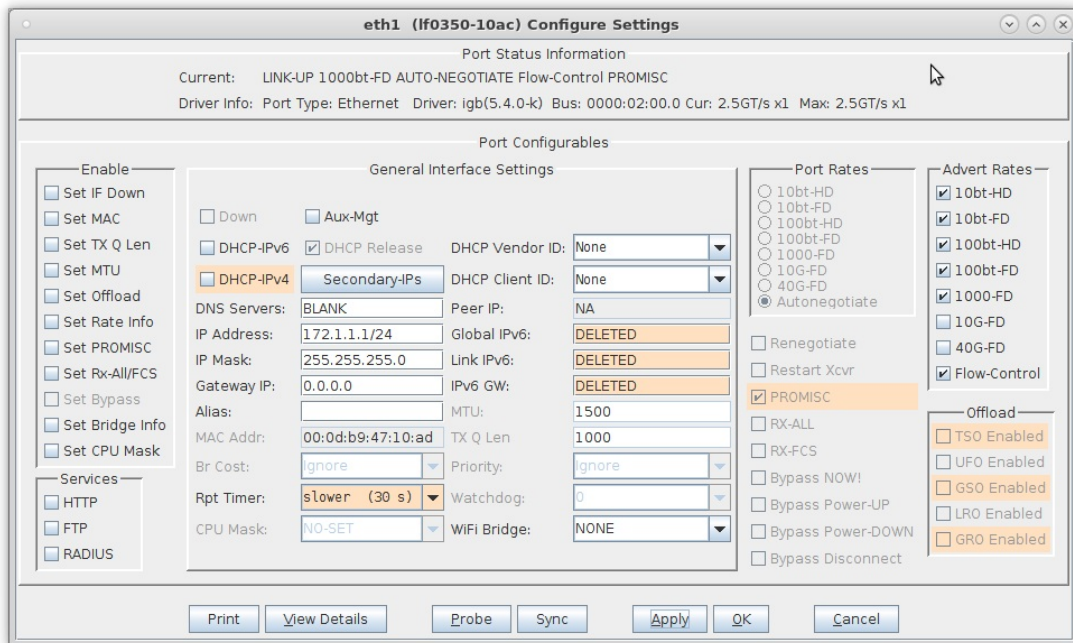


C. Left-click port `eth1` and drag it inside `Router R0(1)`

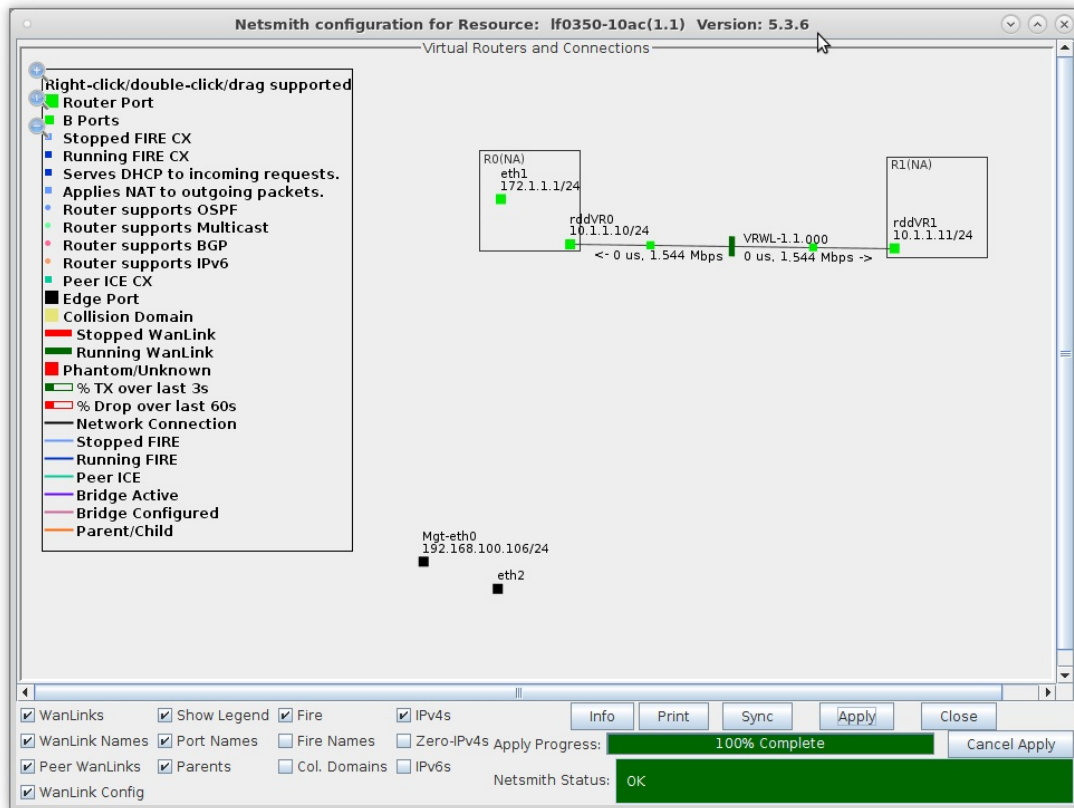

D. Setup `eth2` with a valid IP address and IP mask that is on the same network as the WanPath entry points `ep-2` and `ep-4`

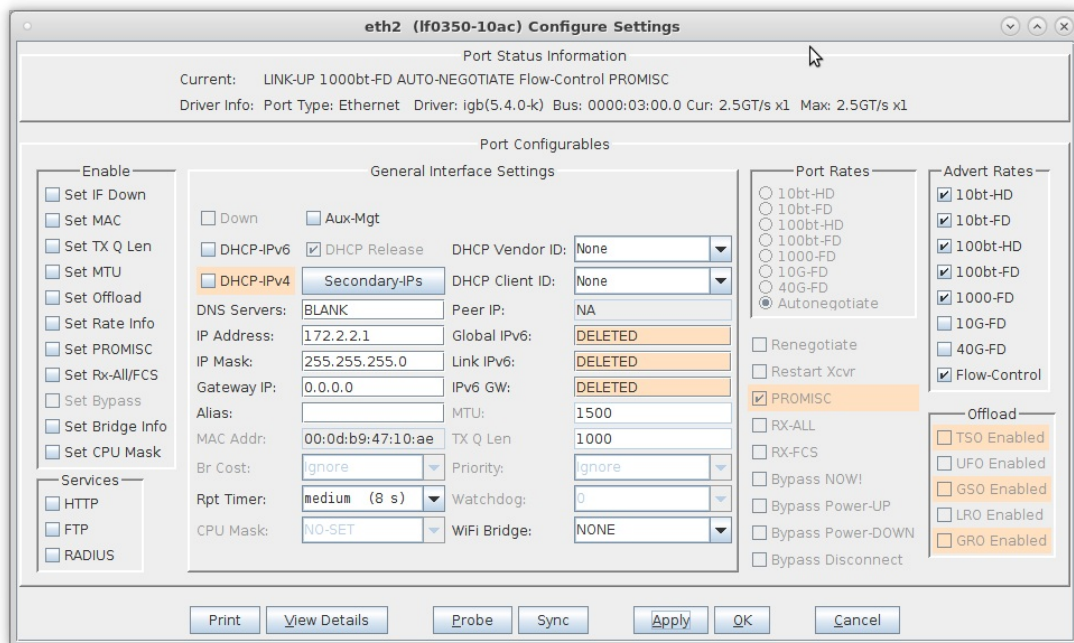


E. Drag **eth2** inside **Router R1(2)** and Apply changes in Netsmith

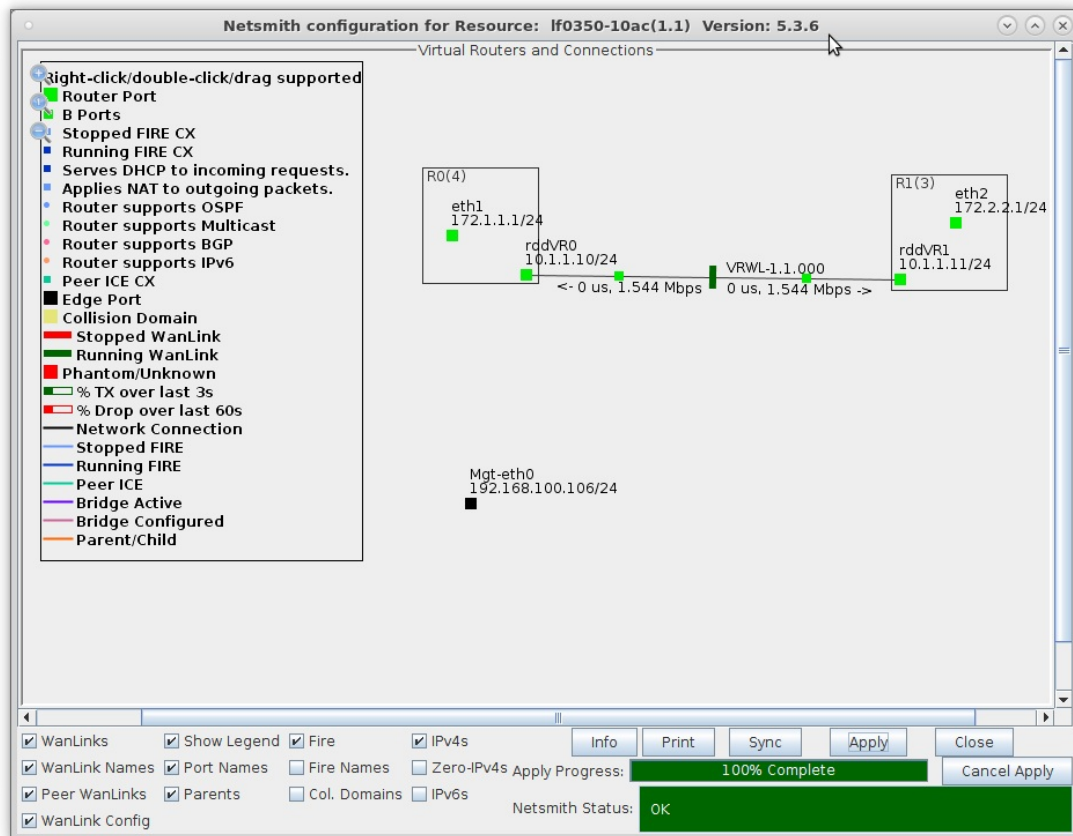


For more information see [LANforge-GUI User Guide: WanLinks](#)

7. Run traffic to LANforge-ICE ports **eth1** and **eth2**, then display results. Refer to the [LANforge FIRE Cookbook](#) to run traffic.


A. Right-click the WanLink and select **Display Wanlink & WanPaths**

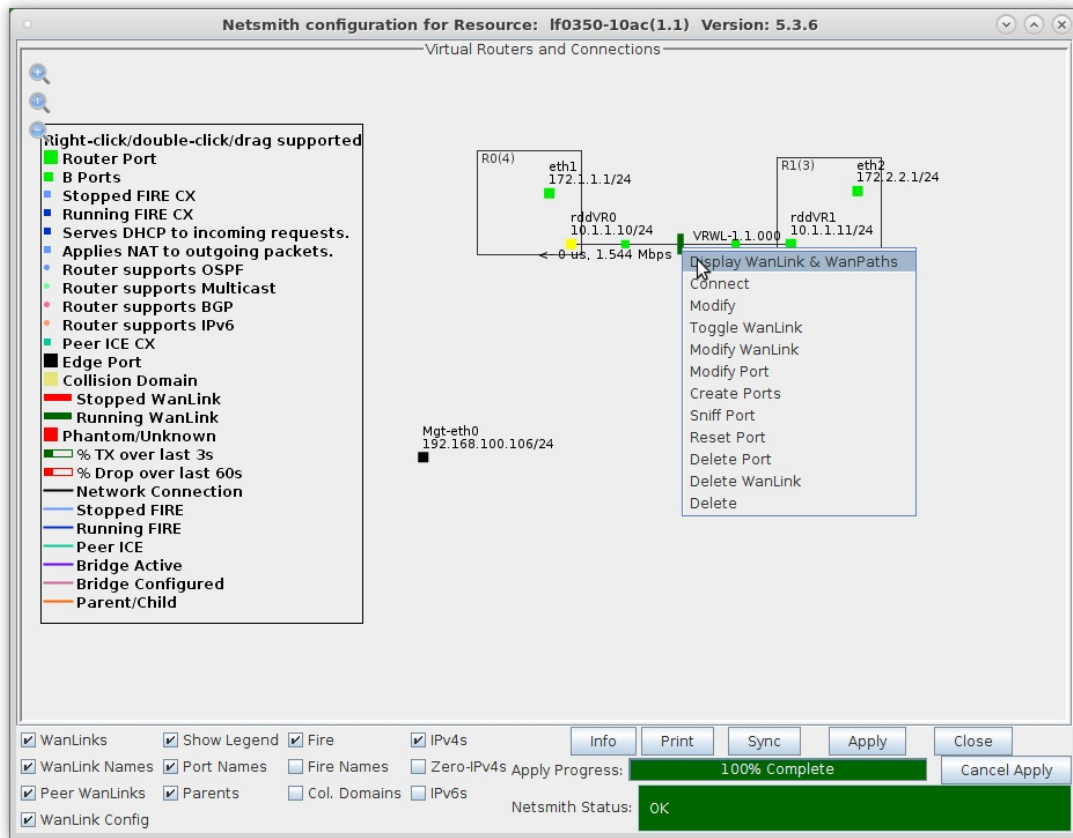

B. The lower half of the WanLink display shows traffic passing on WanPath entry points **ep-3** and **ep-4** and other IP address are excluded from passing on the WanLink

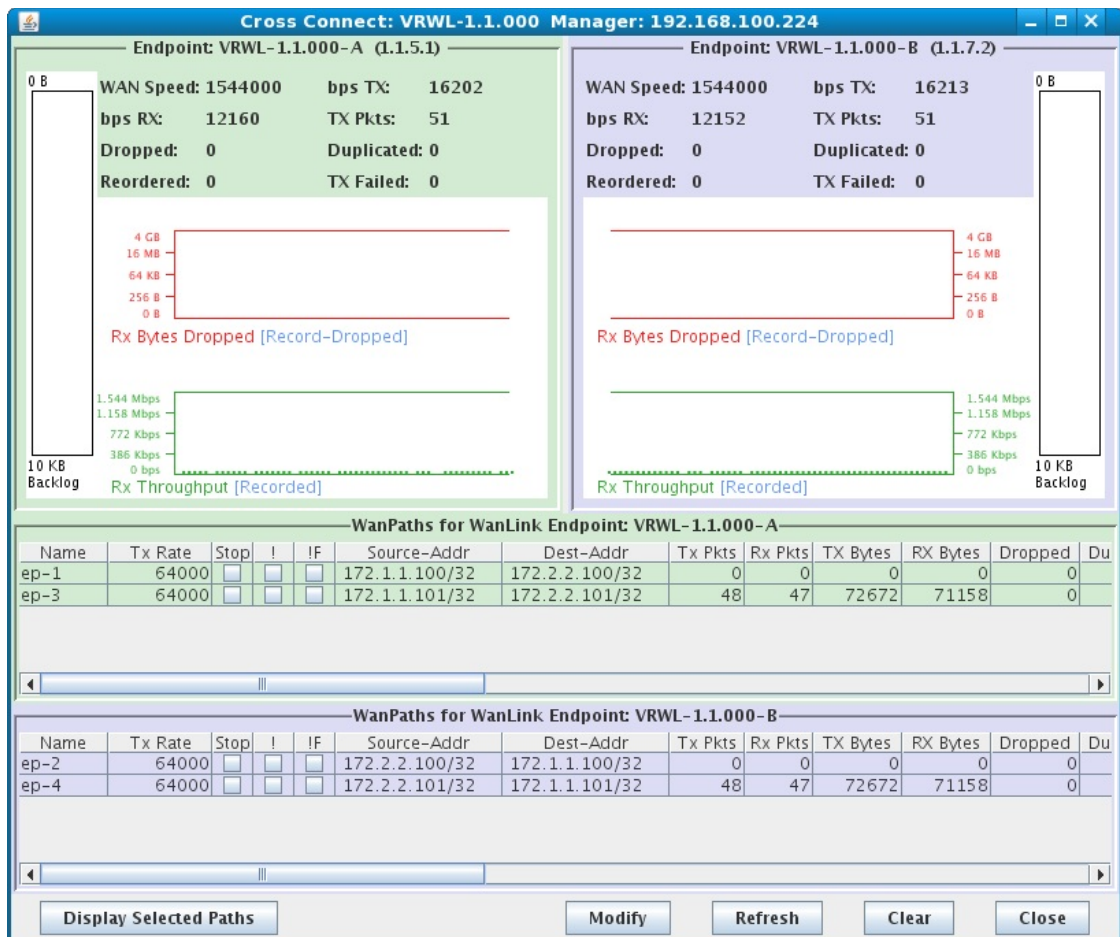

- C. Select a WanPath and click **Display Selected Paths** in the lower left corner of the WanLink display window

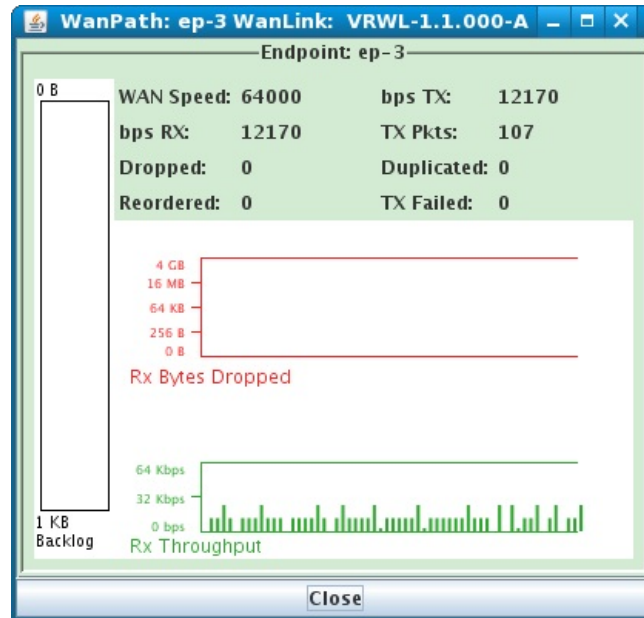

For more information see [LANforge-GUI User Guide: WanLinks](#)


Virtual Router with DHCP Service

Goal: Setup a Virtual Router with one interface serving DHCP.


In this test scenario, a LANforge Virtual Router is created with one interface setup to serve DHCP to two remote redirect interfaces that are setup to be DHCP clients.

-
1. Setup a Virtual Router and two Netsmith Connections.

A. Go to the **Status** tab and click the **Netsmith** button

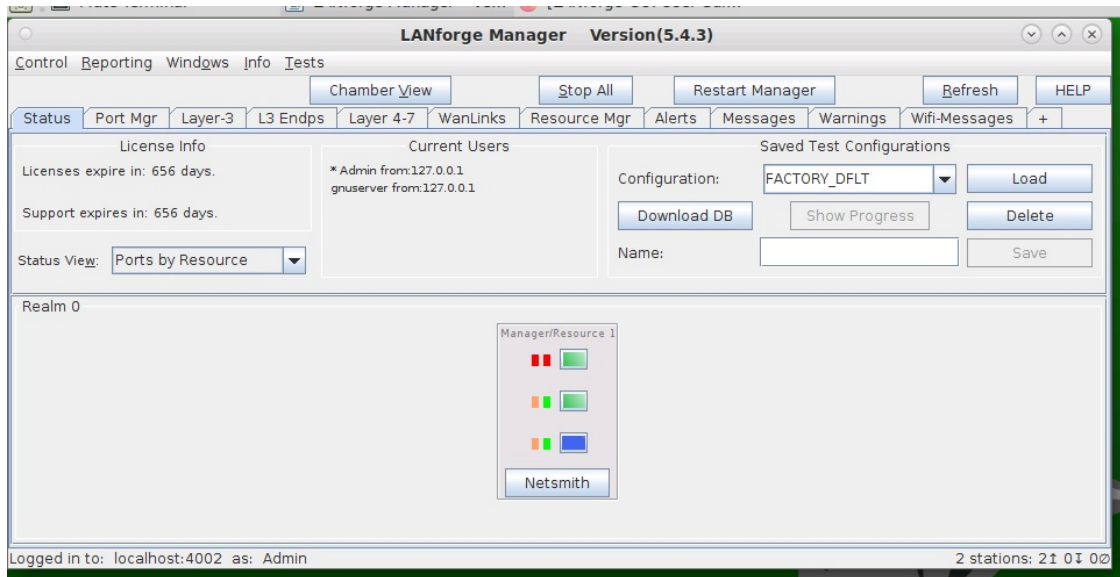


B. Right-click in the Netsmith window and select **New Router**

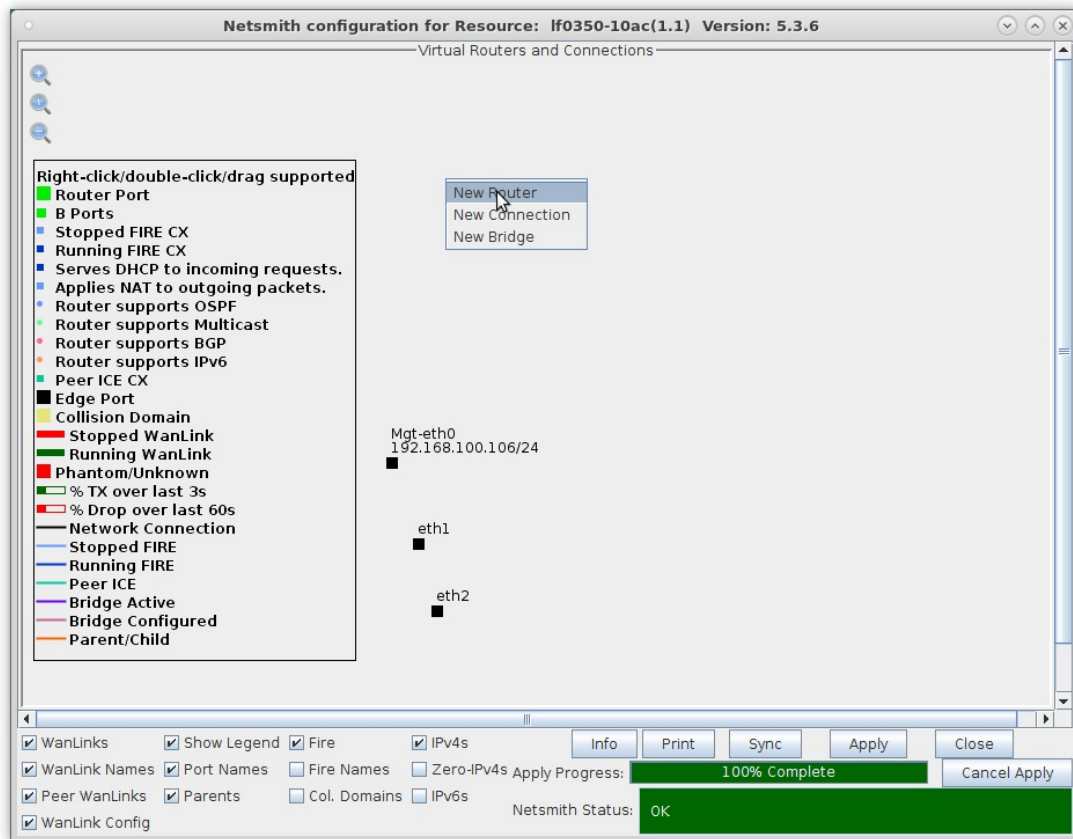


A. Follow steps discussed above for configuring the router


C. Right-click in the Netsmith window and select **New Connection**

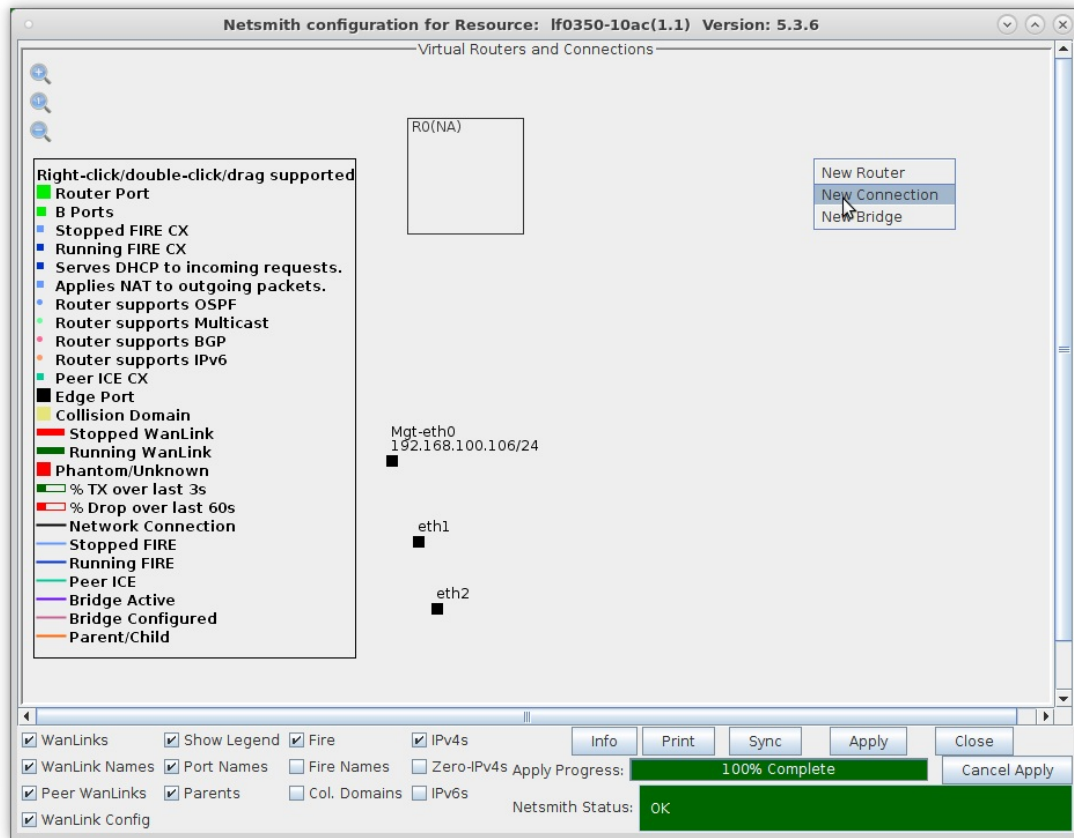


D. Accept defaults, Auto Create everything and click **OK**

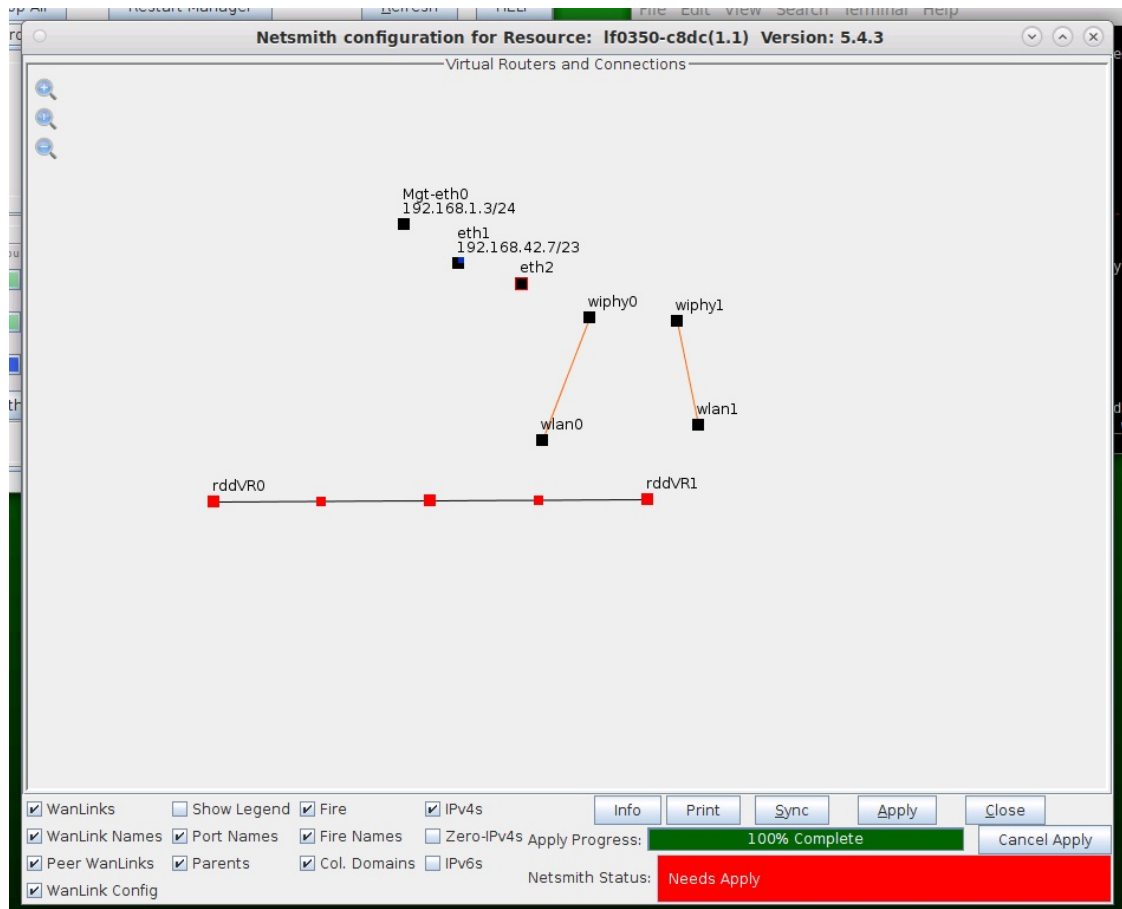

E. Repeat and create a second connection.

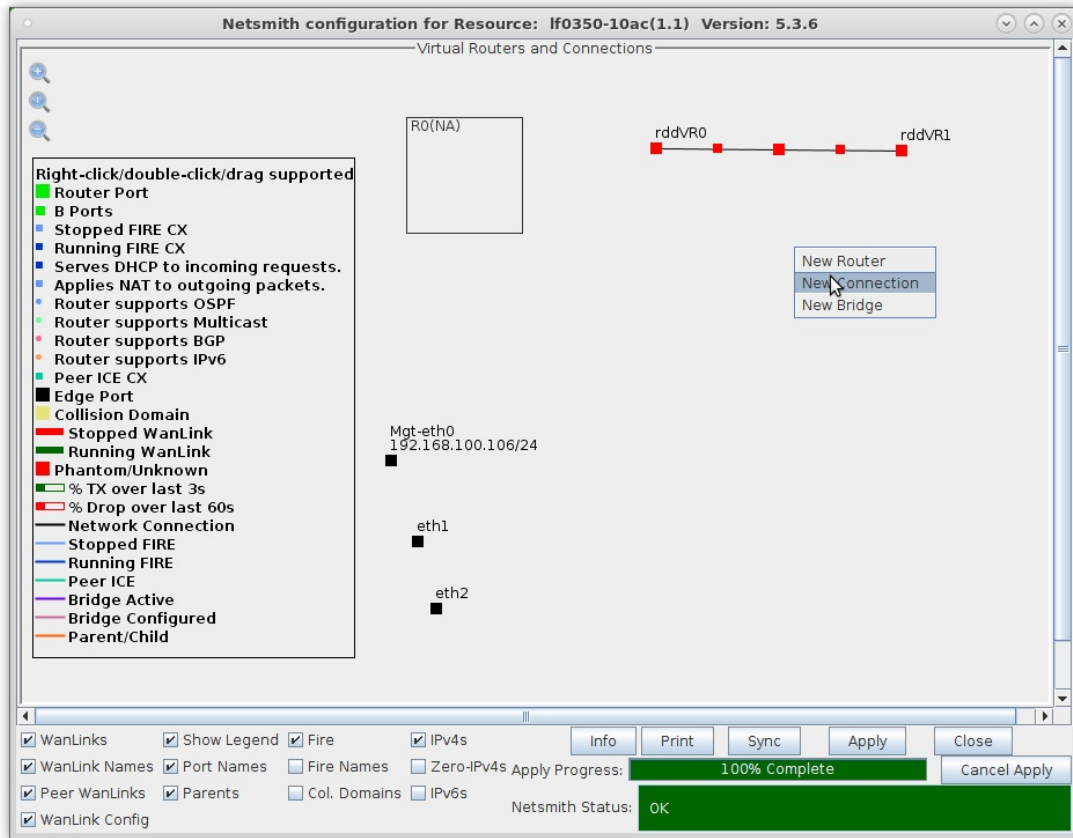


F. Click the **Apply** button to commit the changes in Netsmith to the LANforge Server.

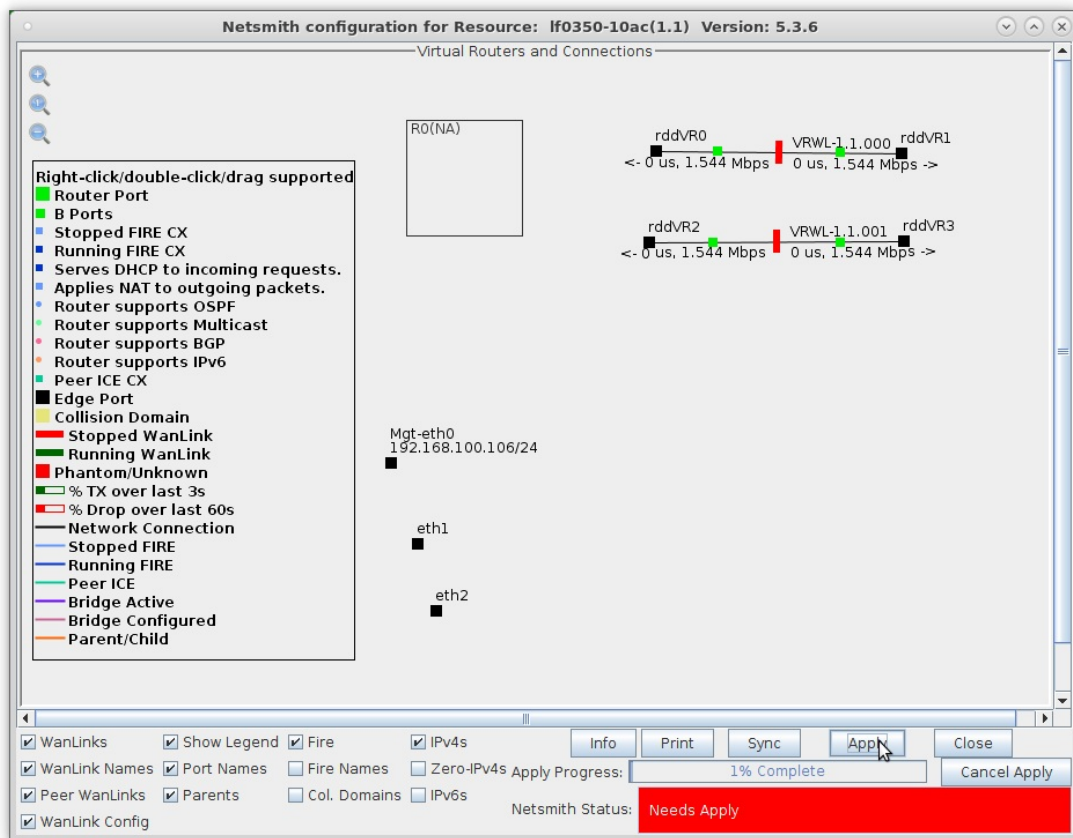


A. **NOTE:** Modifications in Netsmith are only sent to the LANforge-Server after Applying them

2. Setup the WanLinks.

A. Right-click the first WanLink and select **Modify WanLink**

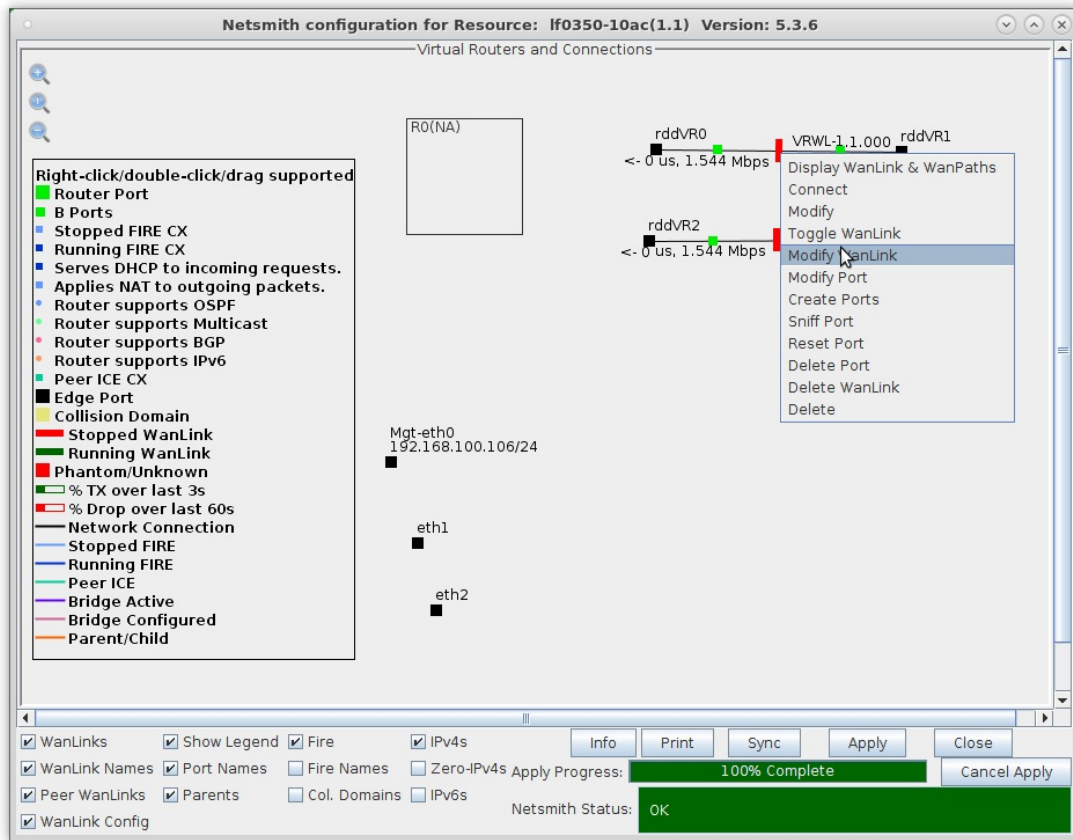


B. Enter values specific to your test and click **OK**

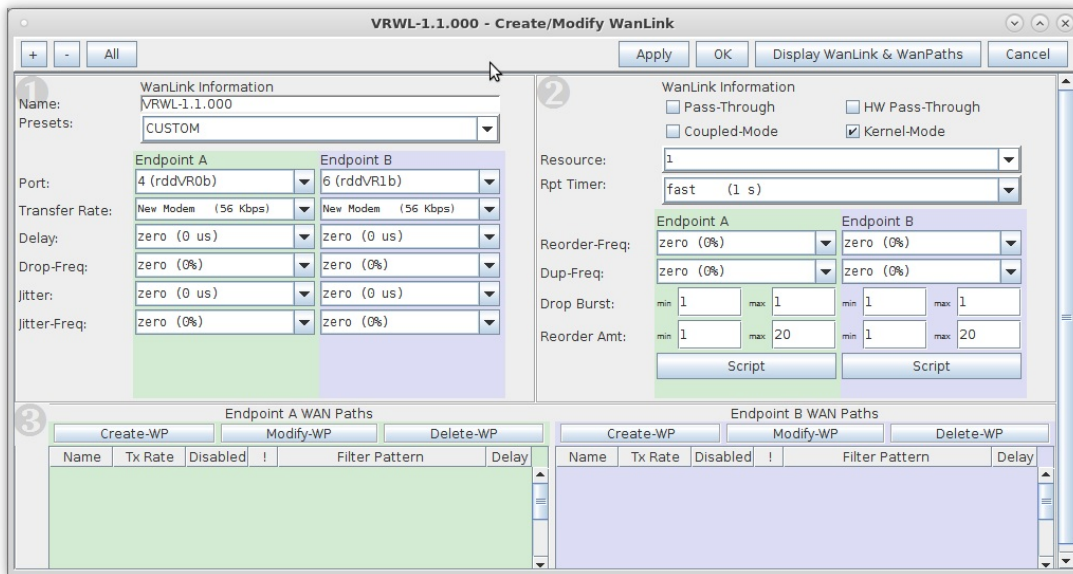


- A. **NOTE:** Kernel-Mode allows for much higher emulation speeds and supports all features of the normal WAN emulation mode
- B. Kernel-Mode is available for the WAN emulation if you are using a pre-compiled Linux kernel from the Candela downloads page

C. Right-click to toggle the WanLink status to Running (green).

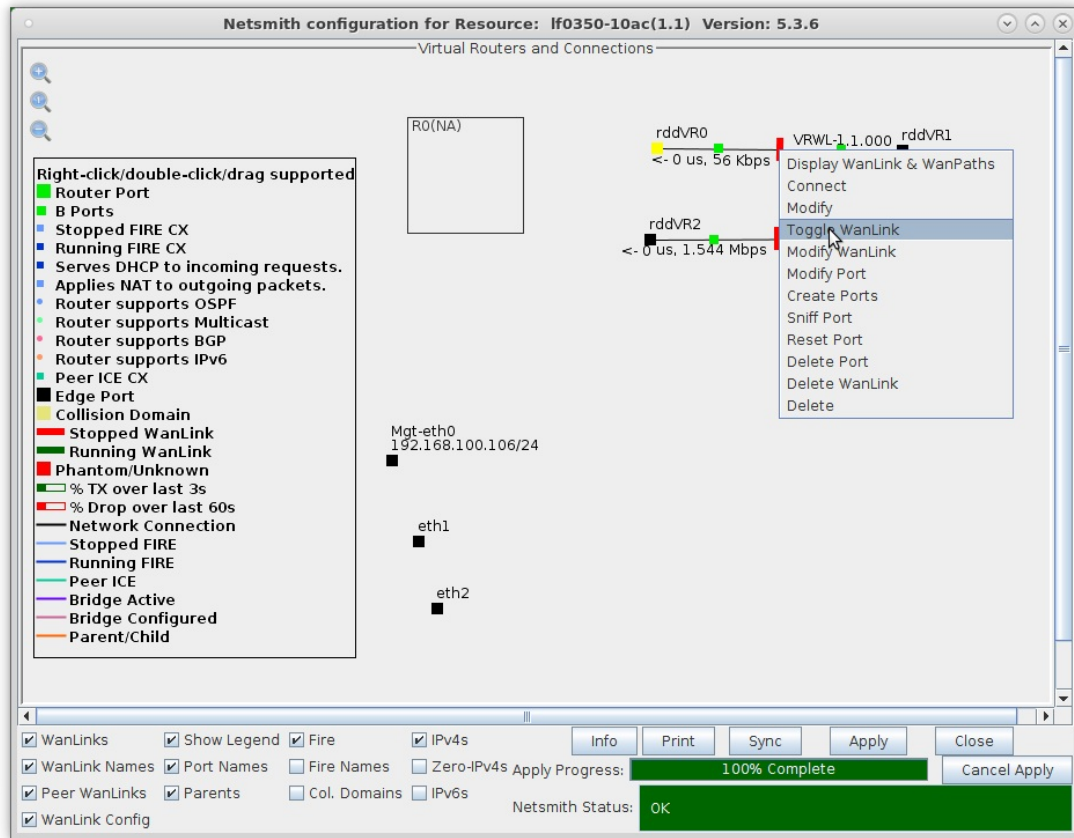


D. Repeat for the second WanLink and set it to Running (green).

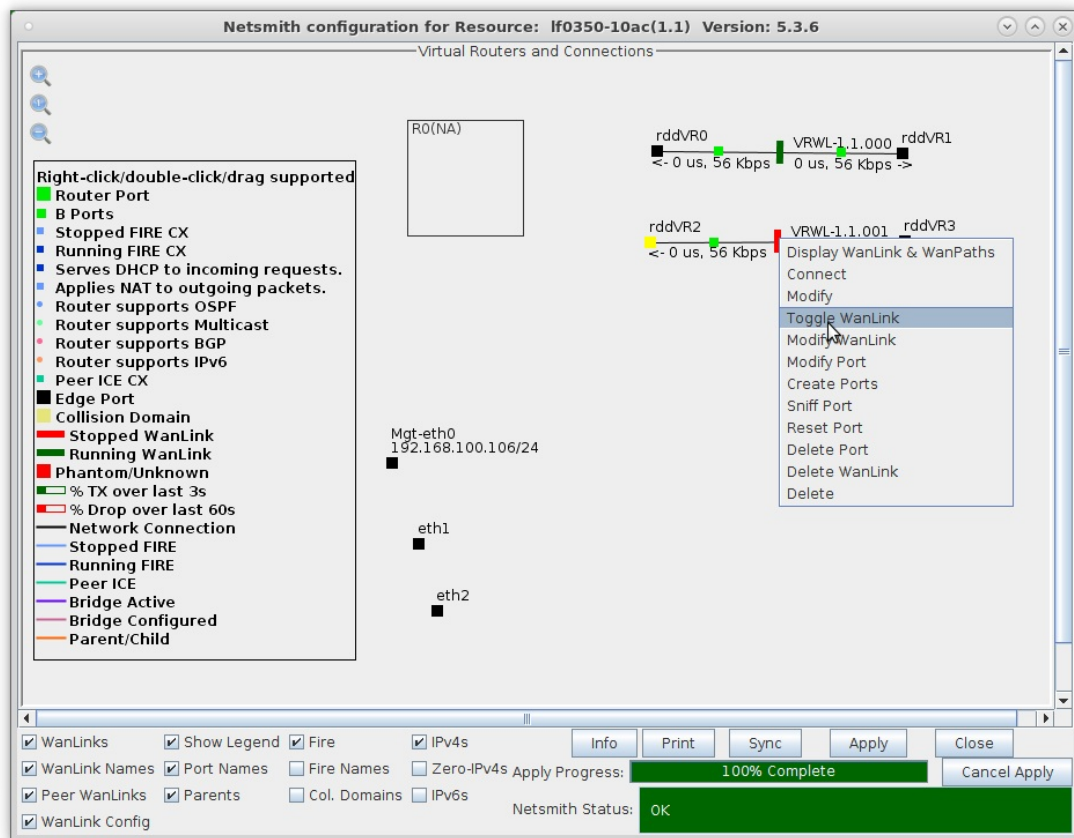


For more information see [LANforge-GUI User Guide: WanLinks \(ICE\)](#)

3. Setup the ports.


A. Right-click port rddVR0 and select **Create Ports**

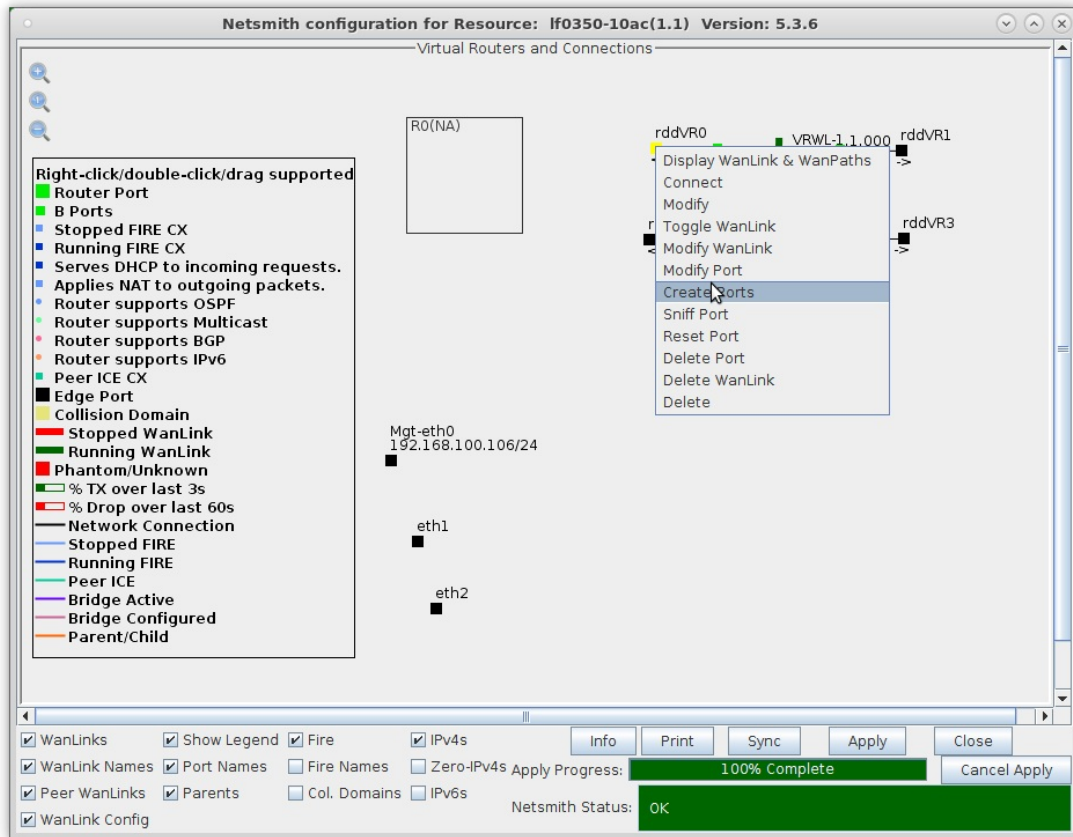

B. Select the **Bridge** button from the available connection types, name it, and click **OK**

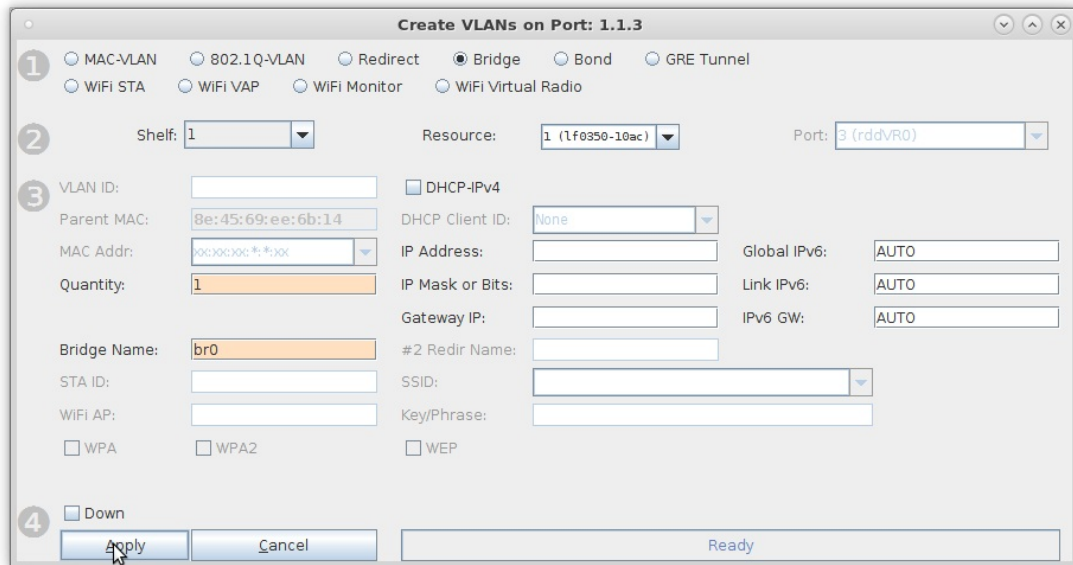


C. Right-click the bridge port and select **Modify Port**

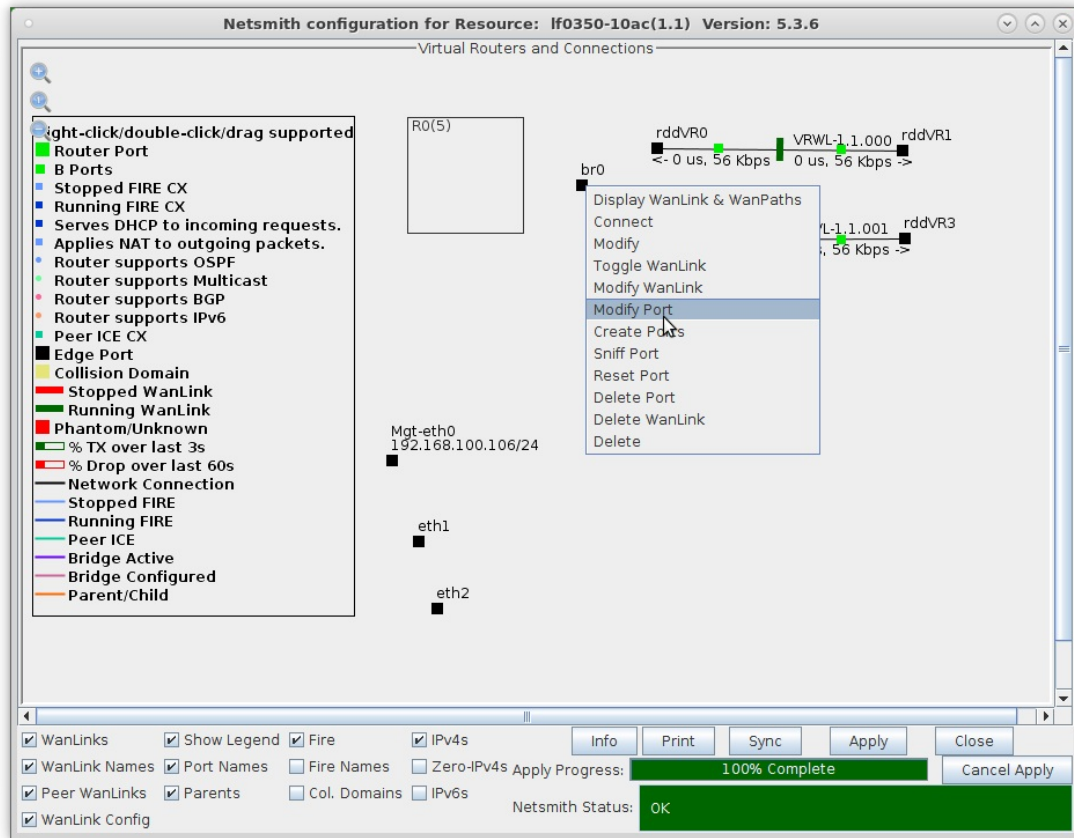


A. **NOTE:** You will have to click the **Sync** button for your newly created bridge port to appear in the Netsmith window.


D. Assign an IP address and IP mask, then click **Apply**

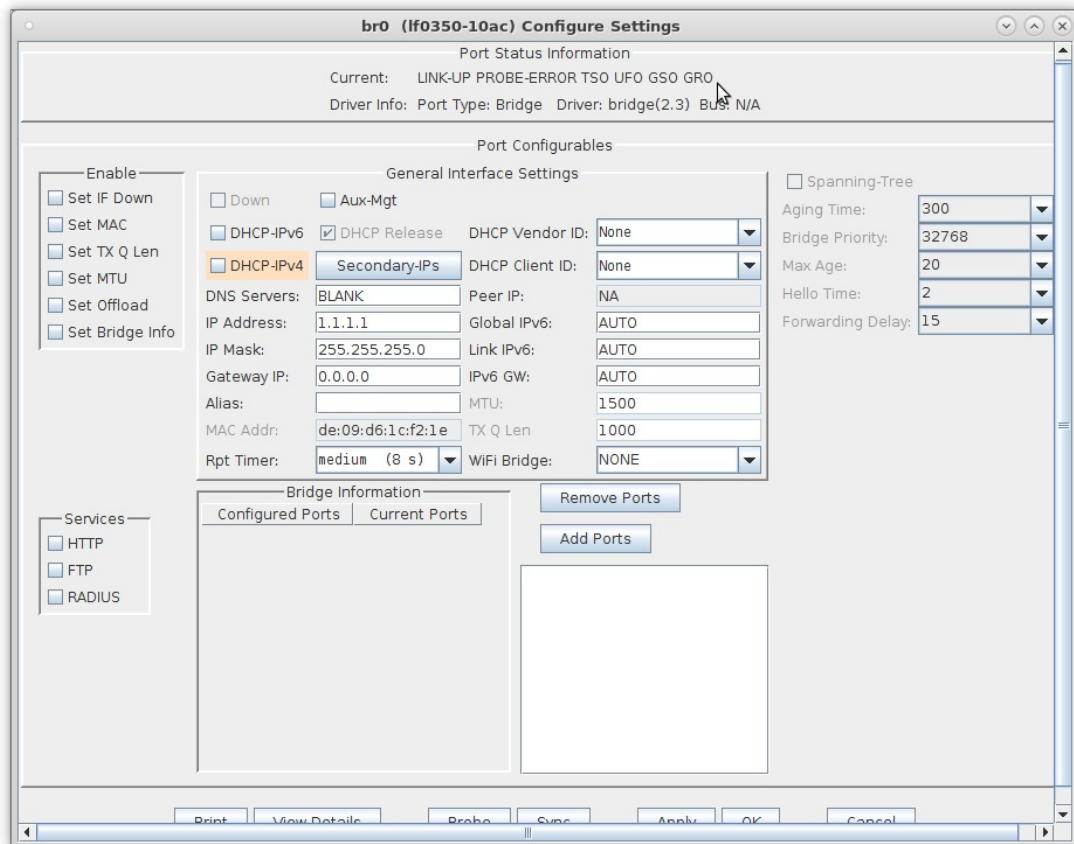


- E. Enter interface names rddVR0 and rddVR2 in the whitespace located below the **Add Ports** button so that you can add them as bridge members

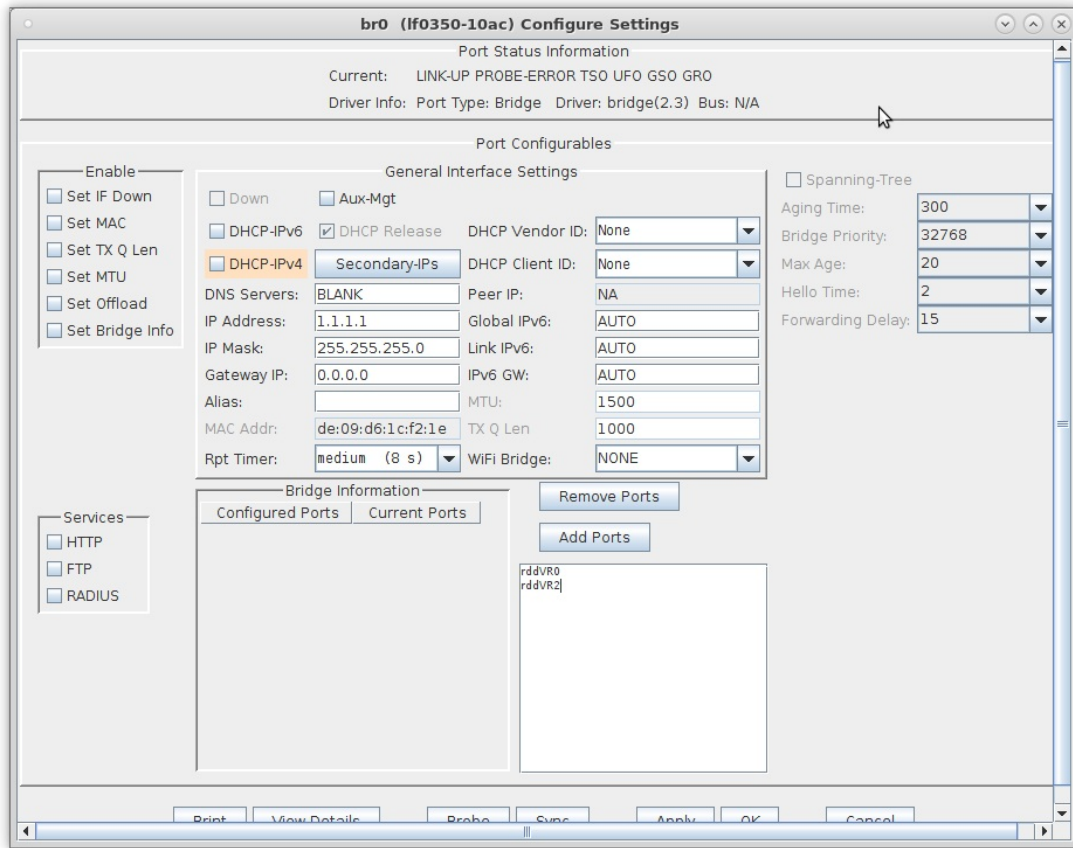

- F. Click **Add Ports** to add the interfaces as bridge members, then click **OK**

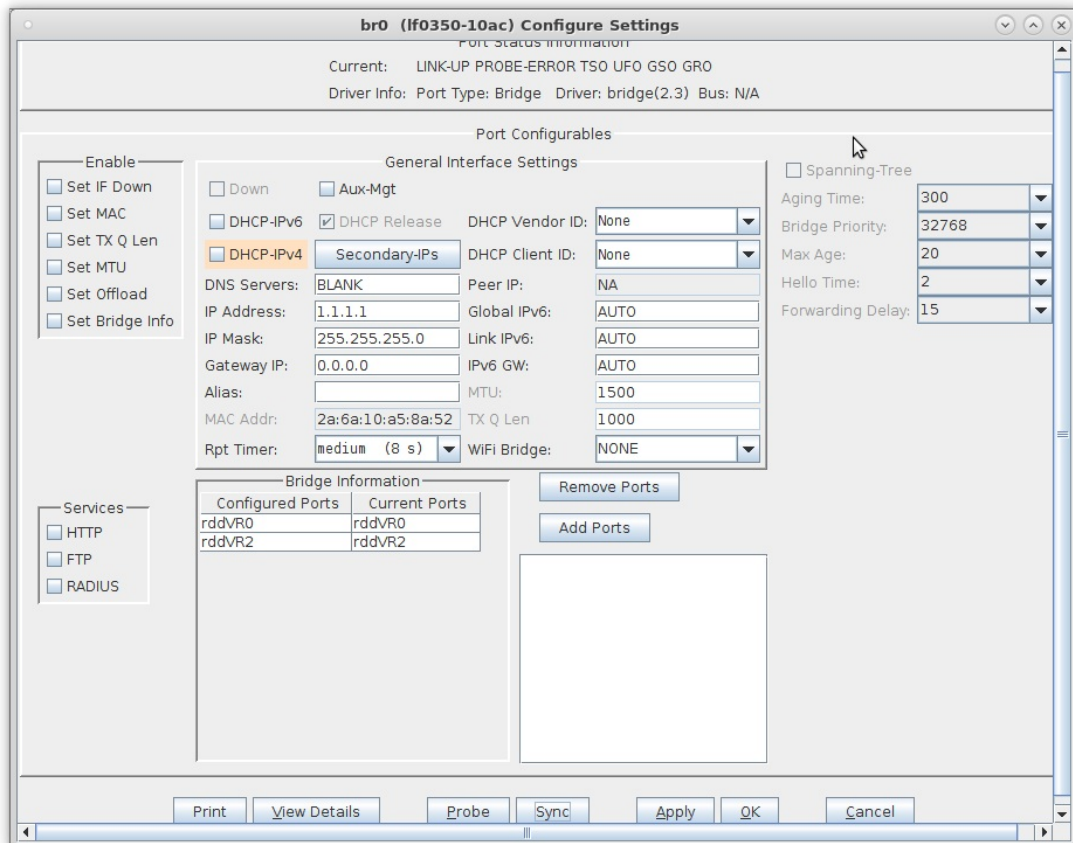


G. The Netsmith window now shows a bridge port with two bridge members

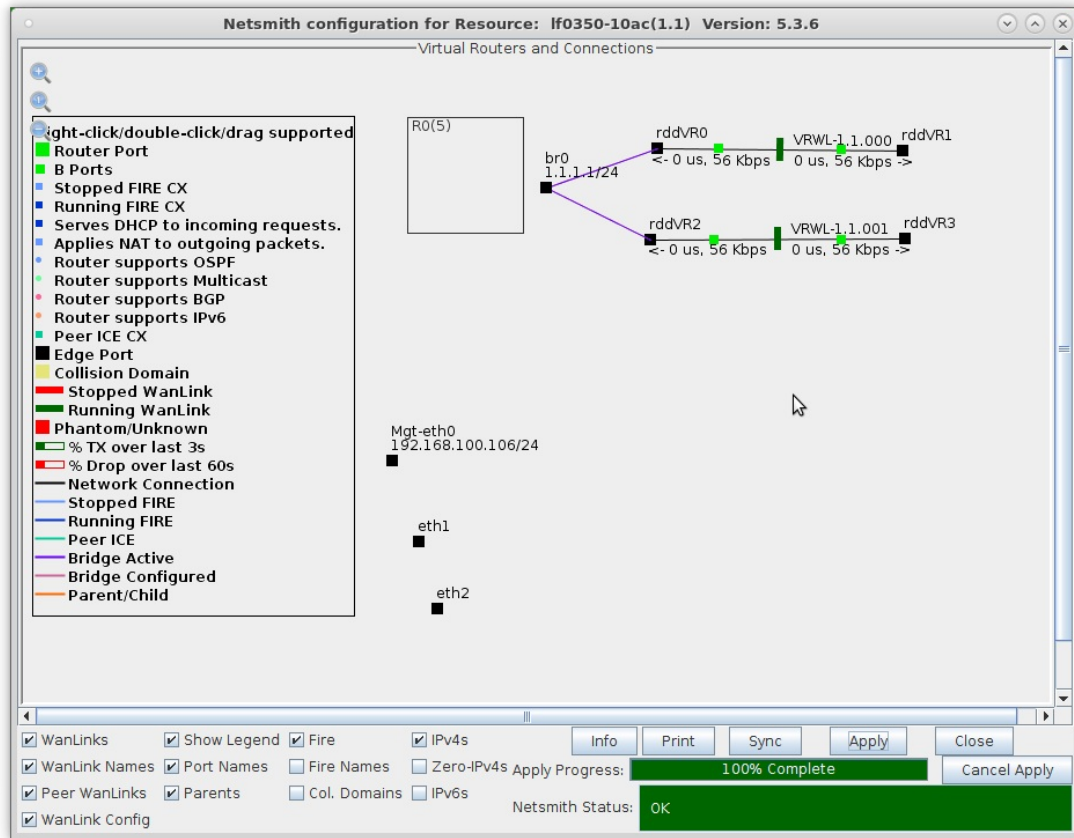


For more information see [LANforge-GUI User Guide: Ports \(Interfaces\)](#)

4. Setup DHCP Server and Clients.


A. Drag the bridge port into the virtual router.

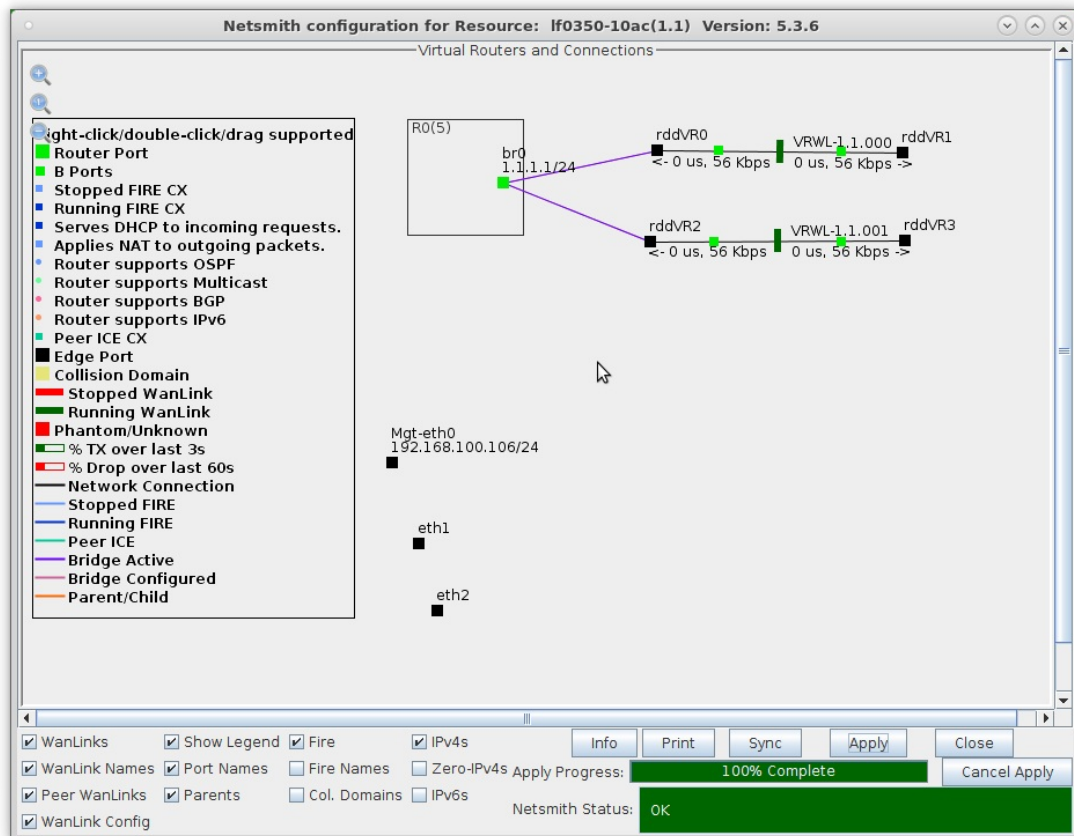


B. Right-click the bridge port and select **Modify**

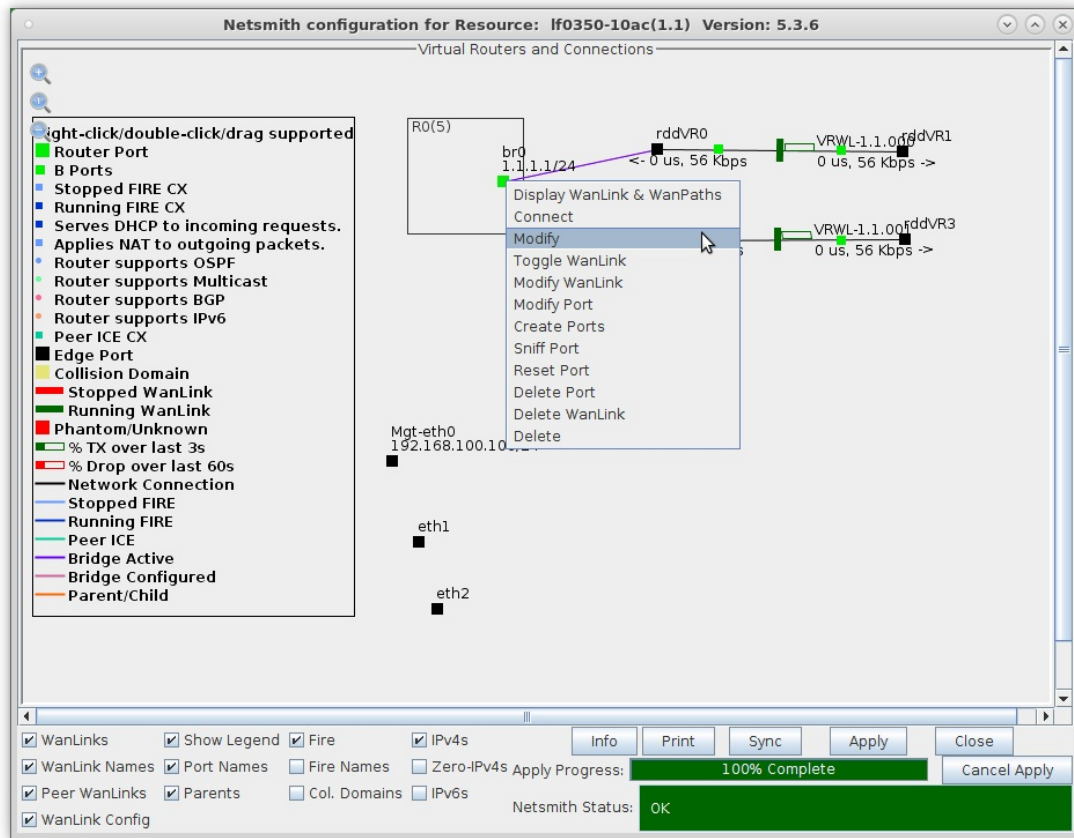


C. Select the 'DHCP' checkbox at the bottom of the window and enter in your desired DHCP Server configuration, then click **OK**

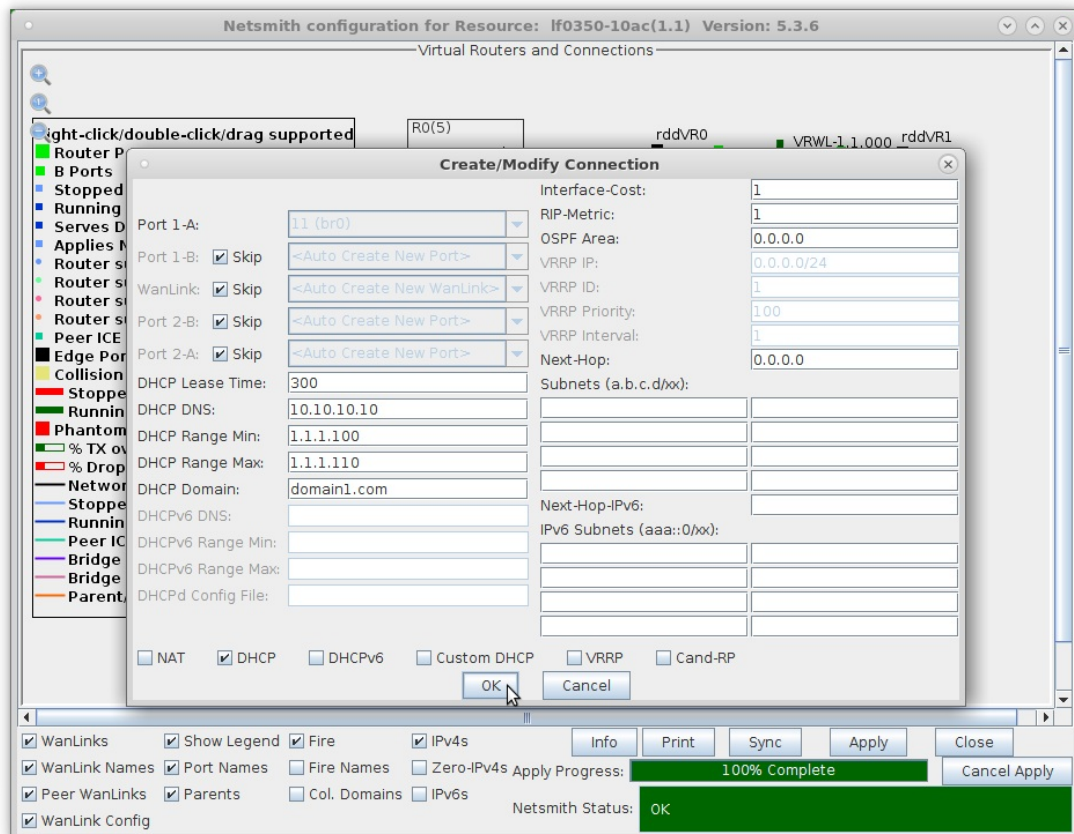


D. Right-click interface rddVR1 and select **Modify Port**

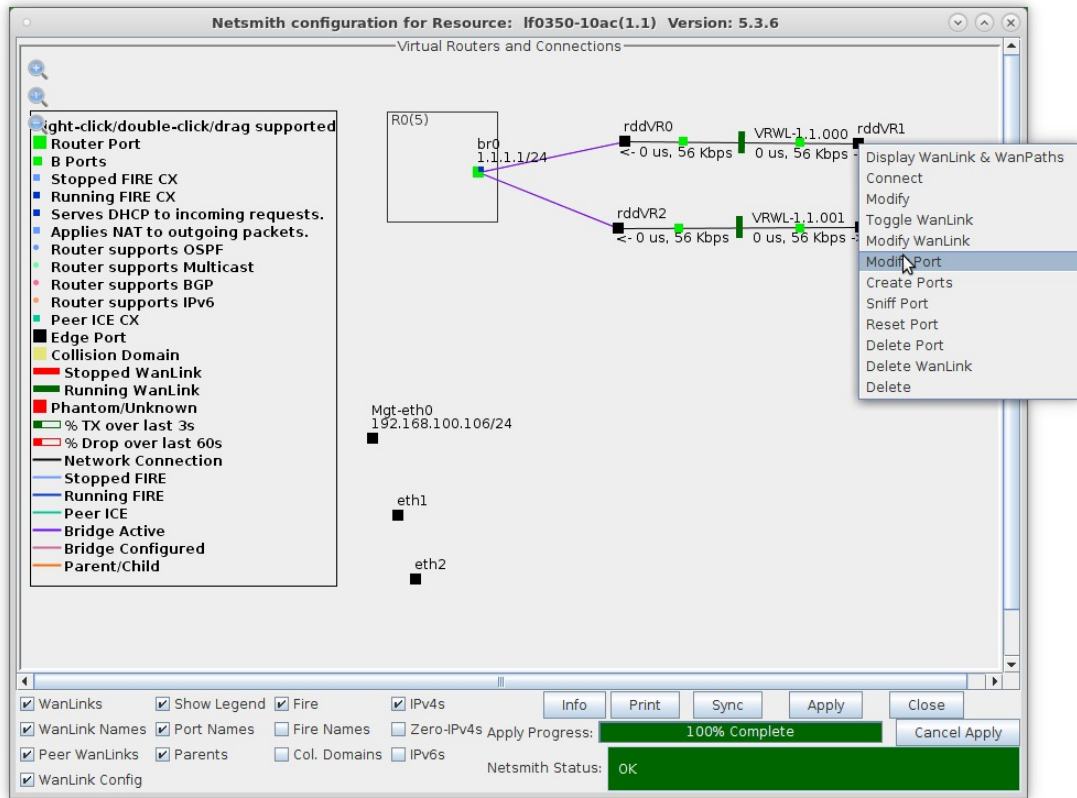


E. Select the 'DHCP' checkbox to make this interface a DHCP client, then click **OK**

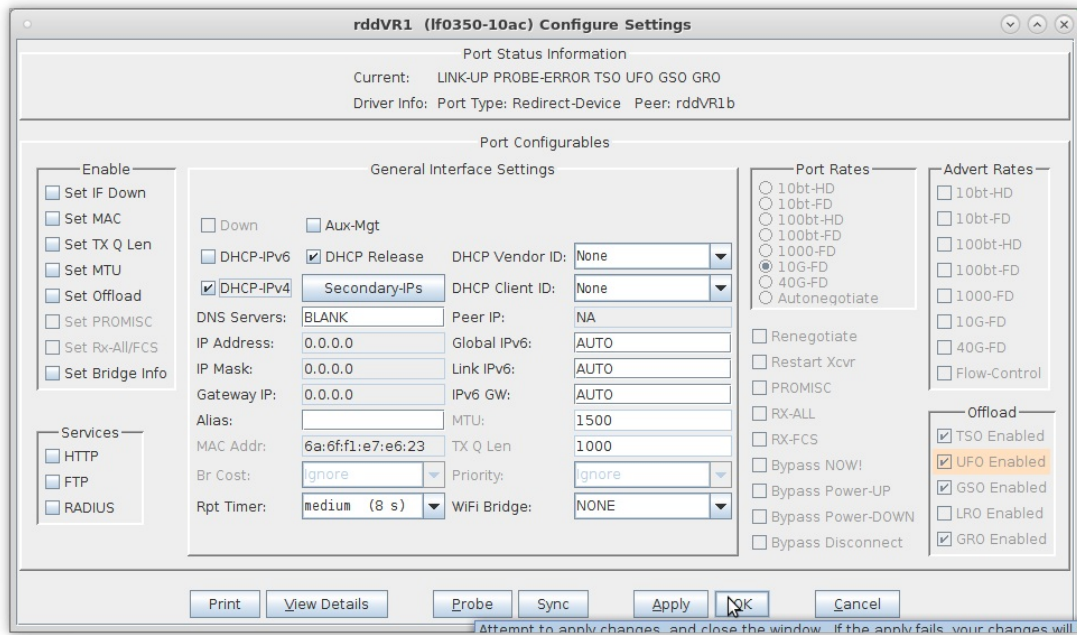

F. Repeat for interface rddVR3, then click Netsmith **Apply**

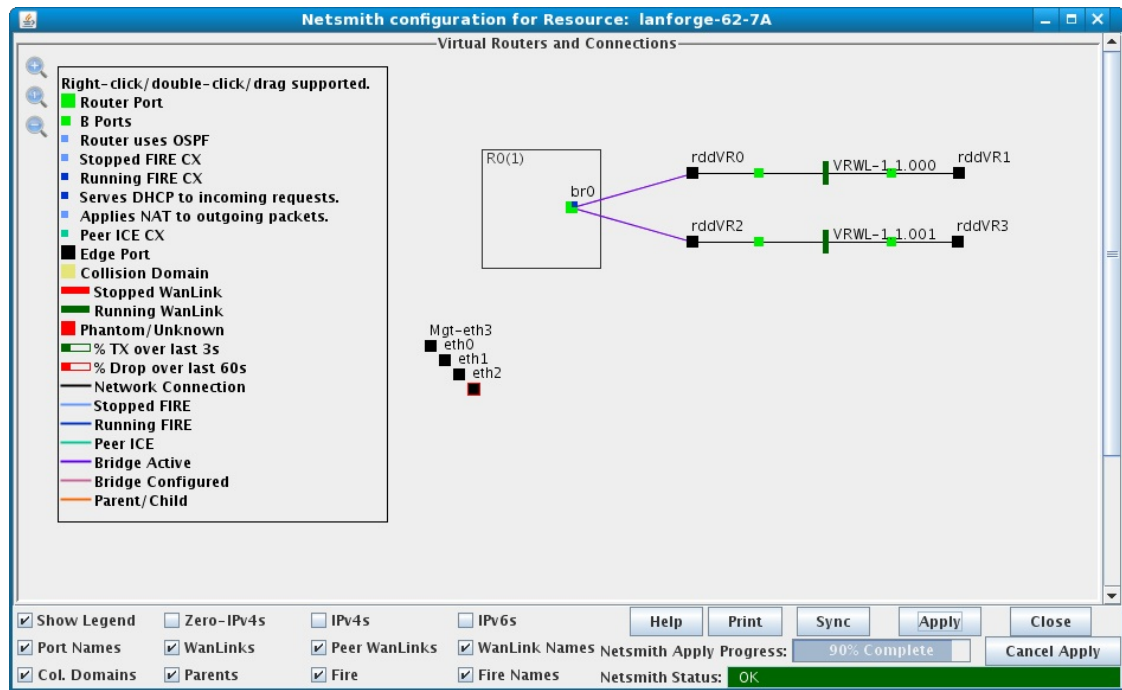

G. After the Netsmith apply, DHCP clients will acquire IP addresses from the DHCP server

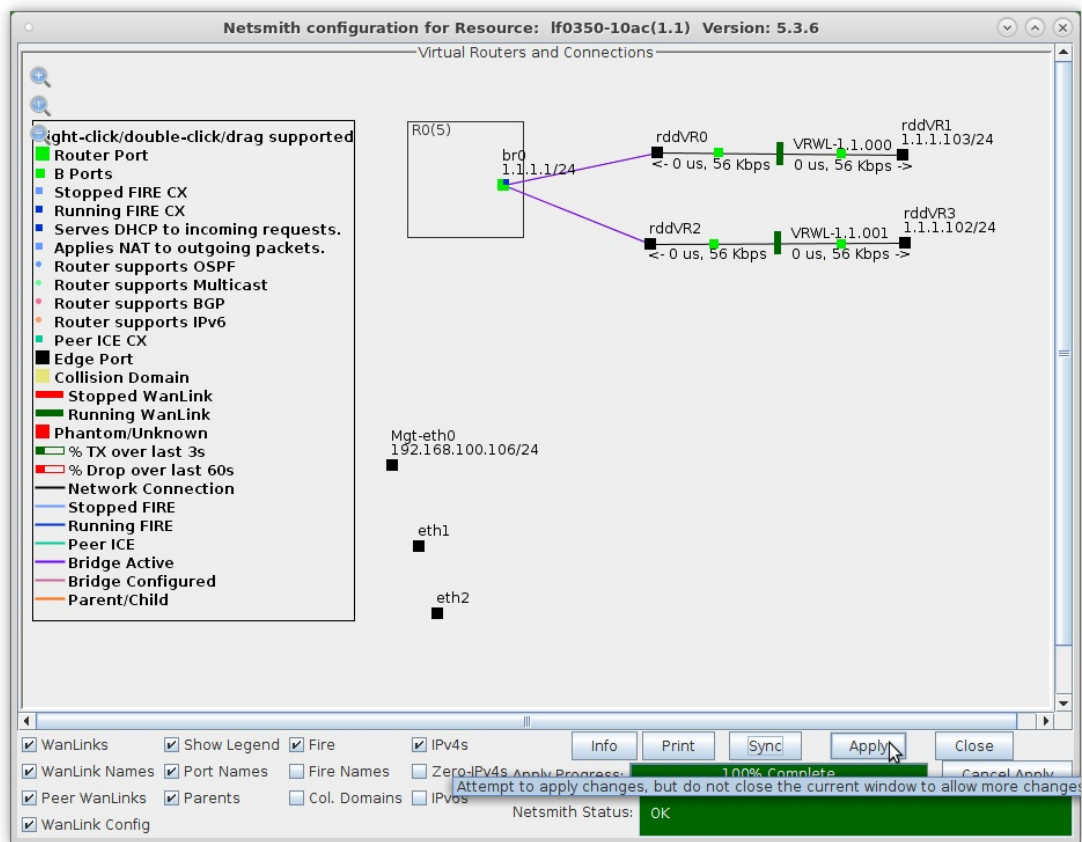


A. Select the 'IPv4s' checkbox at the bottom of the Netsmith window to see the IP addresses of the DHCP clients


For more information see [LANforge-GUI User Guide: Ports \(Interfaces\)](#)

5. Create a Layer-3 Connection.


A. Go to the **Layer-3** tab and click **Create**

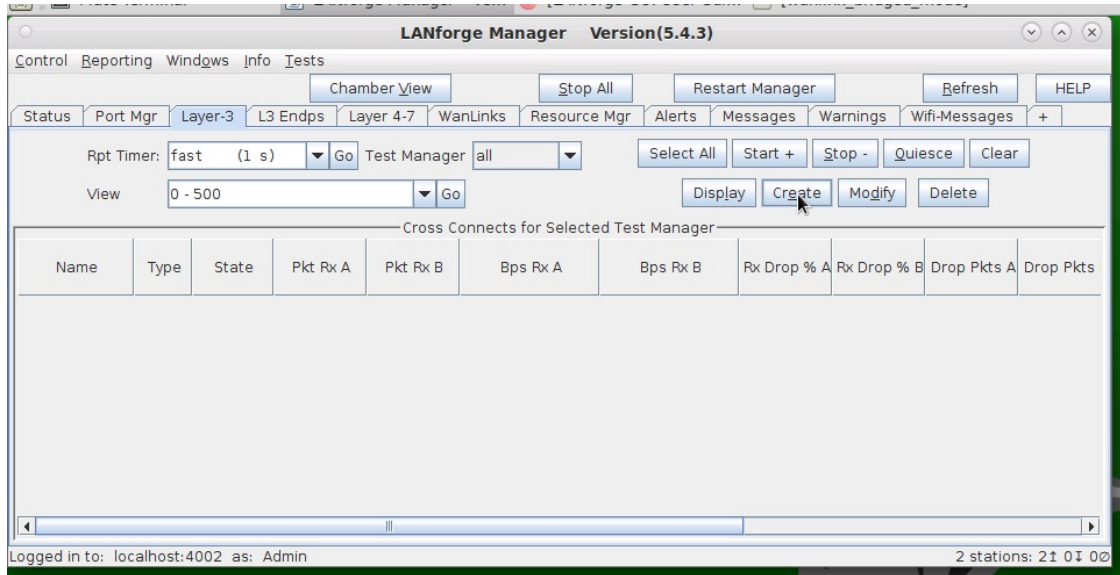

B. The RDD-FIRE connection for this example will use interfaces rddVR1 and rddVR3.

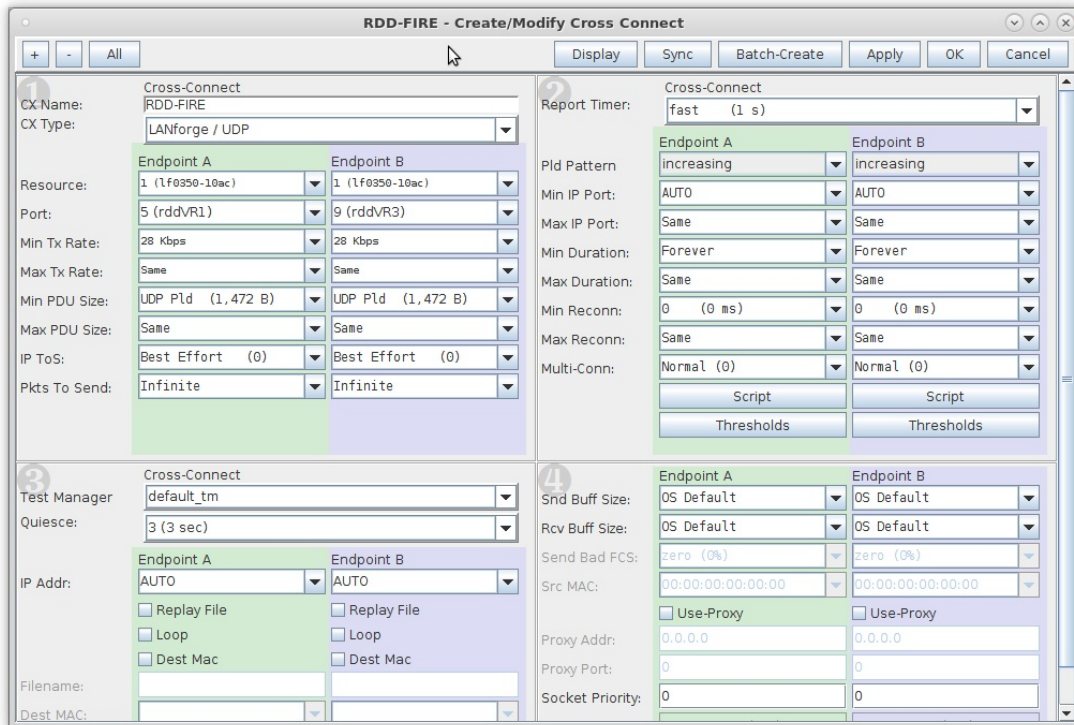


C. Verify the Layer-3 connection was created

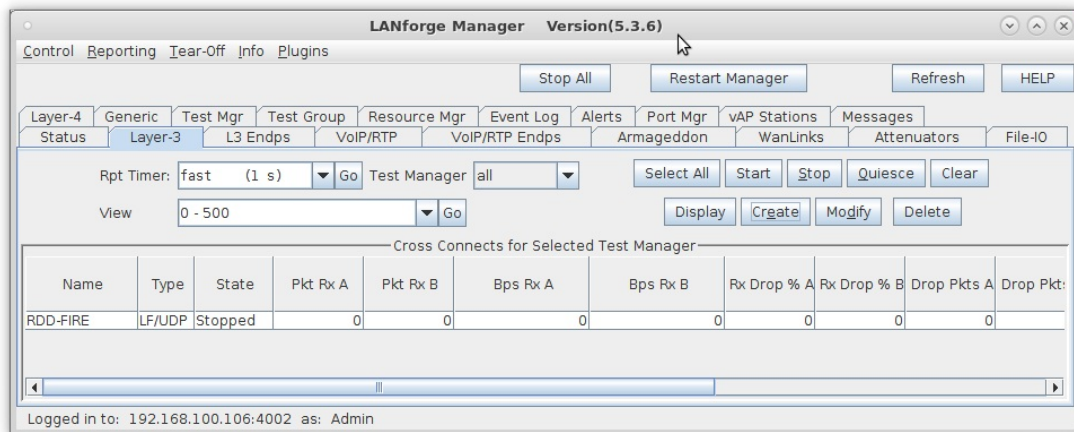


For more information see [LANforge-GUI User Guide: Layer-3 Cross Connects \(FIRE\)](#)

6. Run LANforge-FIRE to yourself through LANforge-ICE!

A. Select the Layer-3 Cross Connect and click **Start**

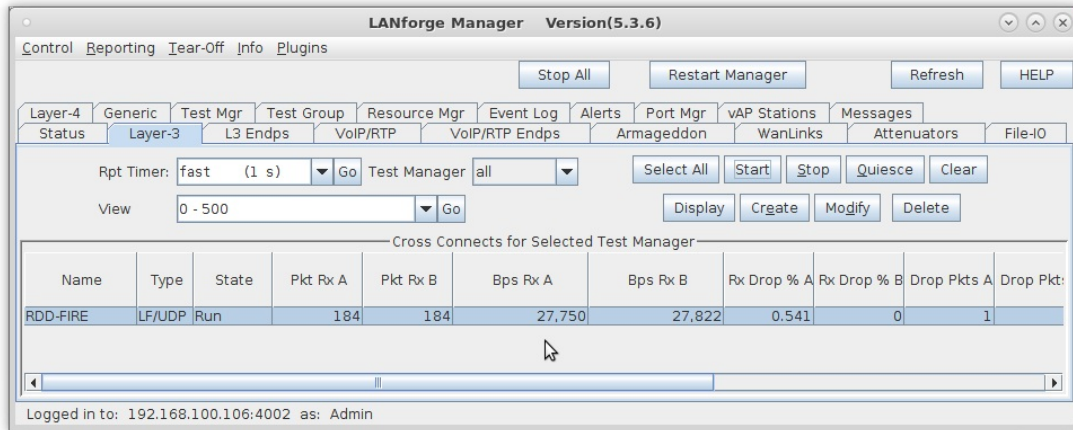

B. Go to the **Status** tab and click **Netsmith** to view the graphical representation of the setup

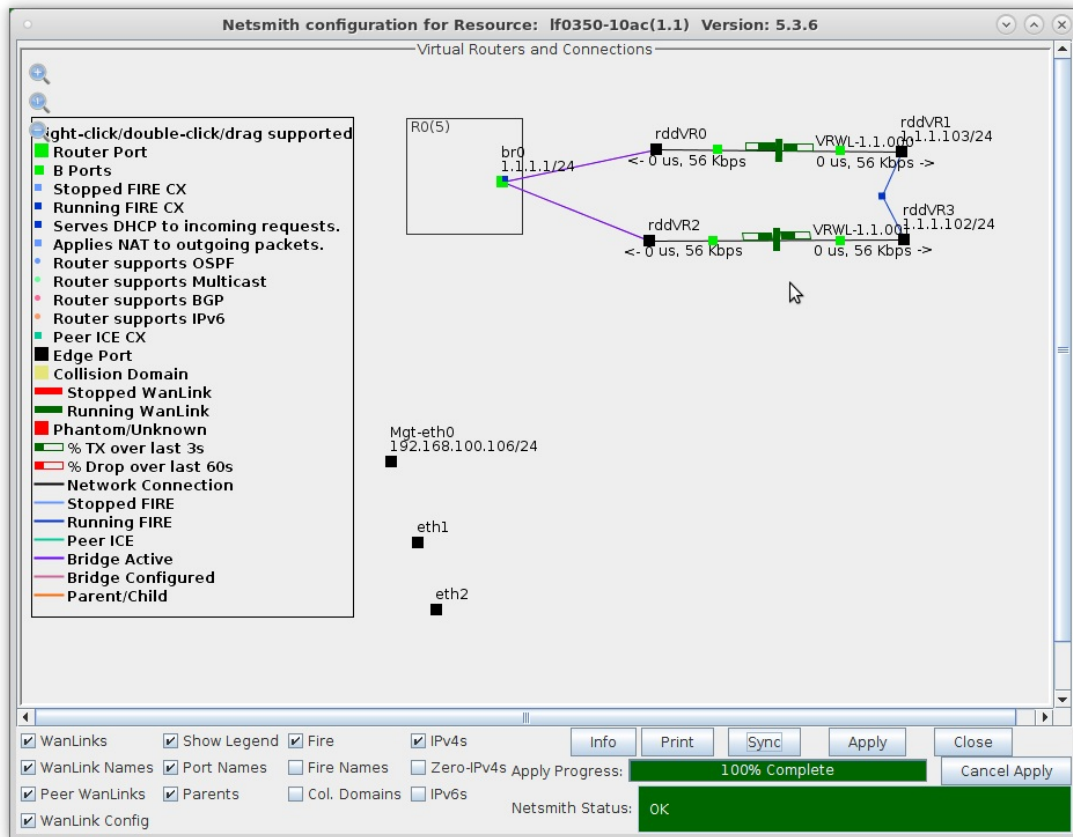

For more information see [LANforge-GUI User Guide](#)


Virtual Router with NAT

Goal: Setup a Virtual Router with one interface performing NAT on outgoing traffic.


In this test scenario, a pair of Virtual Routers are connected with a Redirected Interface connection with one side of the connection performing NAT on outgoing traffic. Two additional Redirected Interface connections are configured to pass traffic and demonstrate NAT.

1. Setup two Virtual Routers and three Netsmith Connections.


A. Right-click inside the Netsmith window and select **New Router**

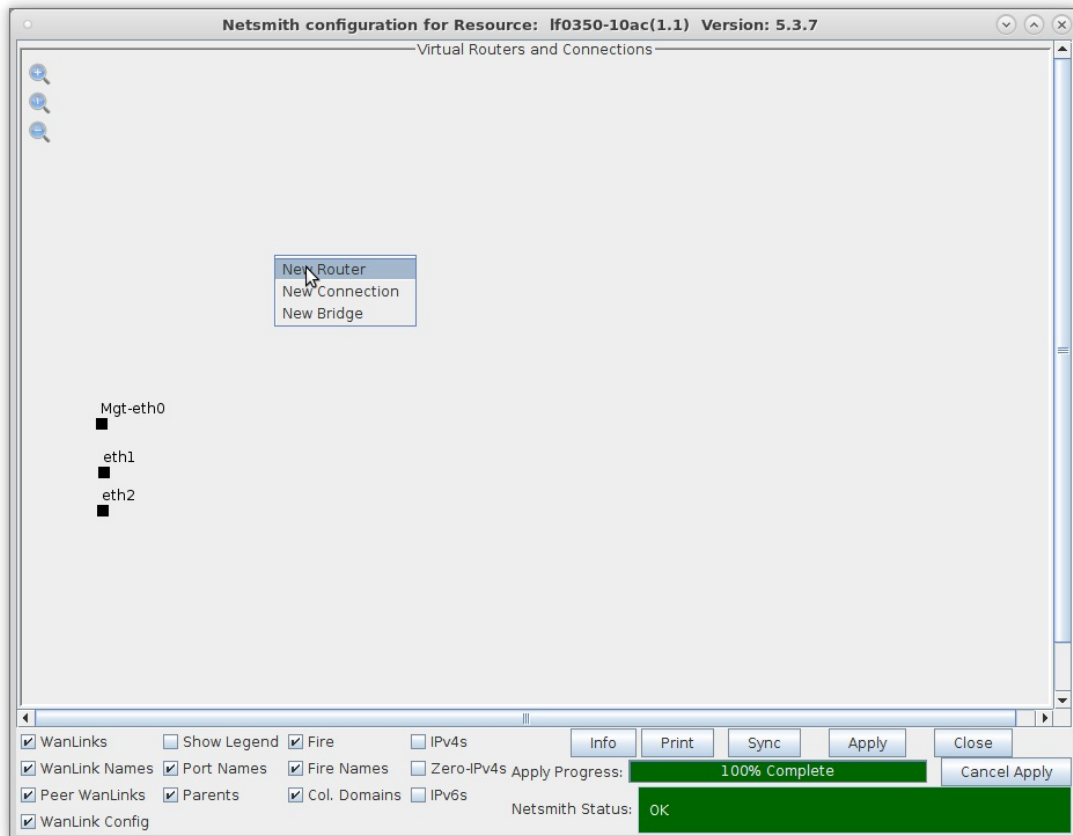


B. Repeat to create another virtual router

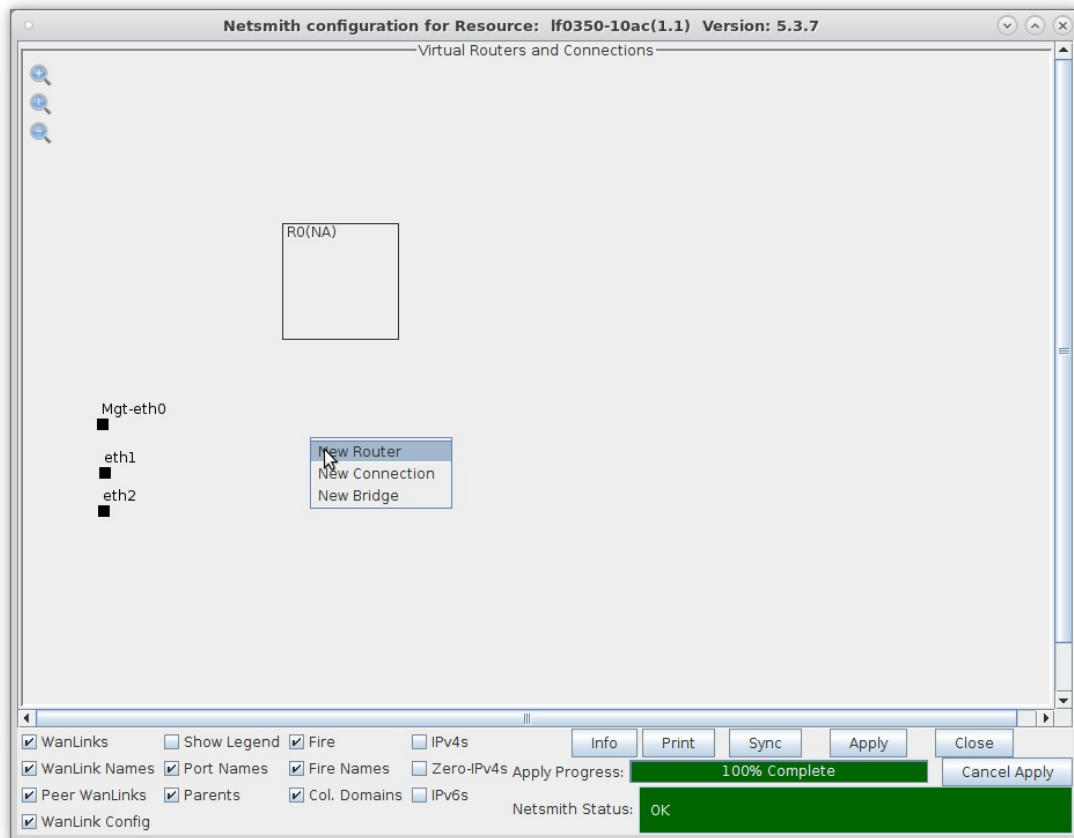


C. Right-click inside the Netsmith window and select **New Connection**

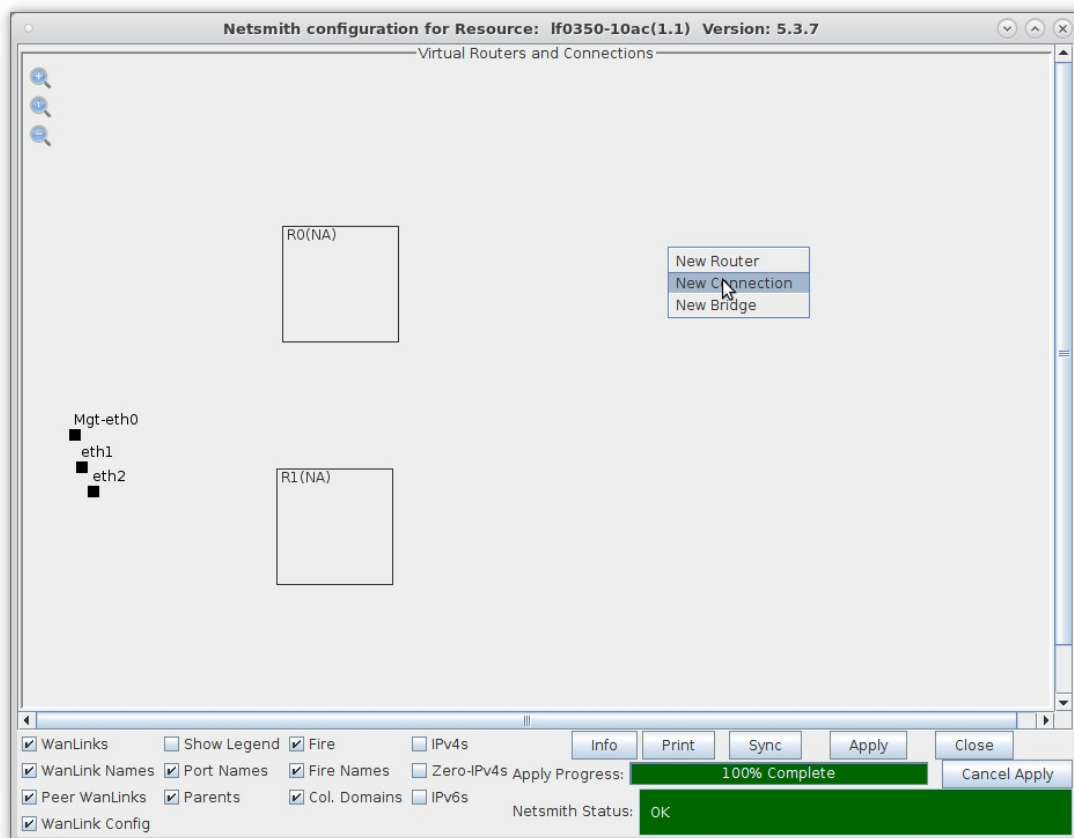


D. Select the 'Skip' option on Port 1-B, WanLink and Port 2-B, then click **OK**

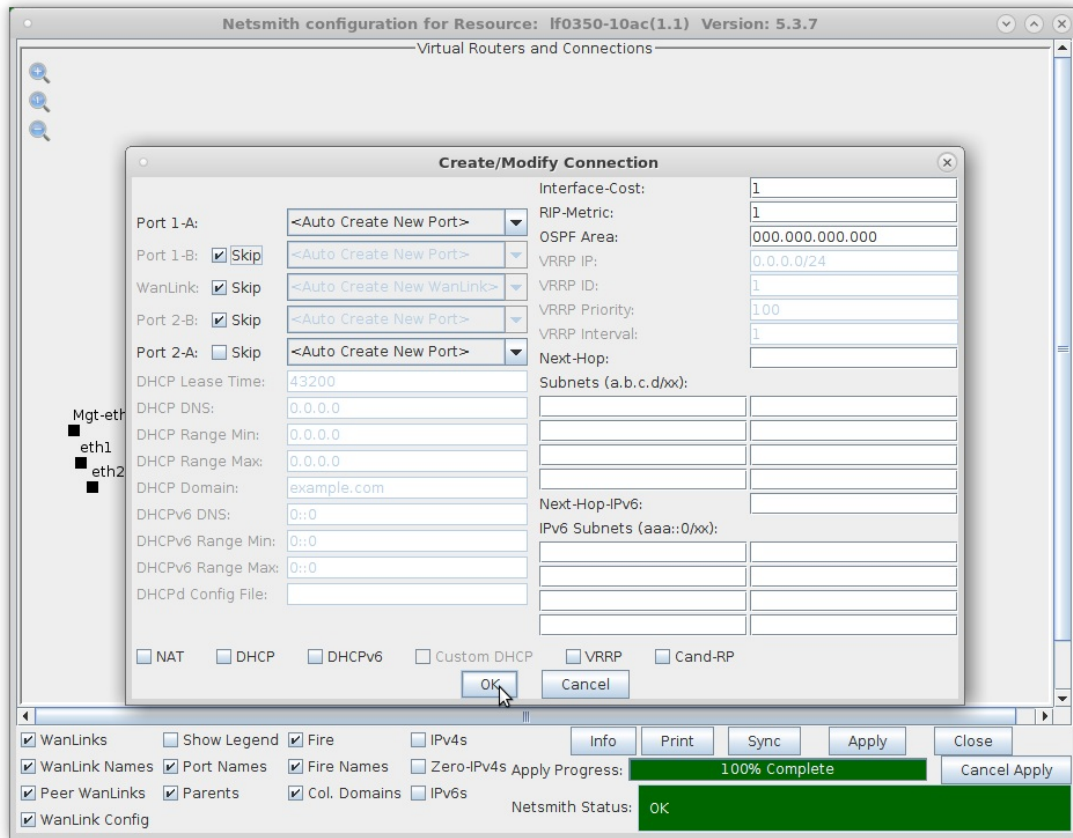

E. Repeat and create two more connections

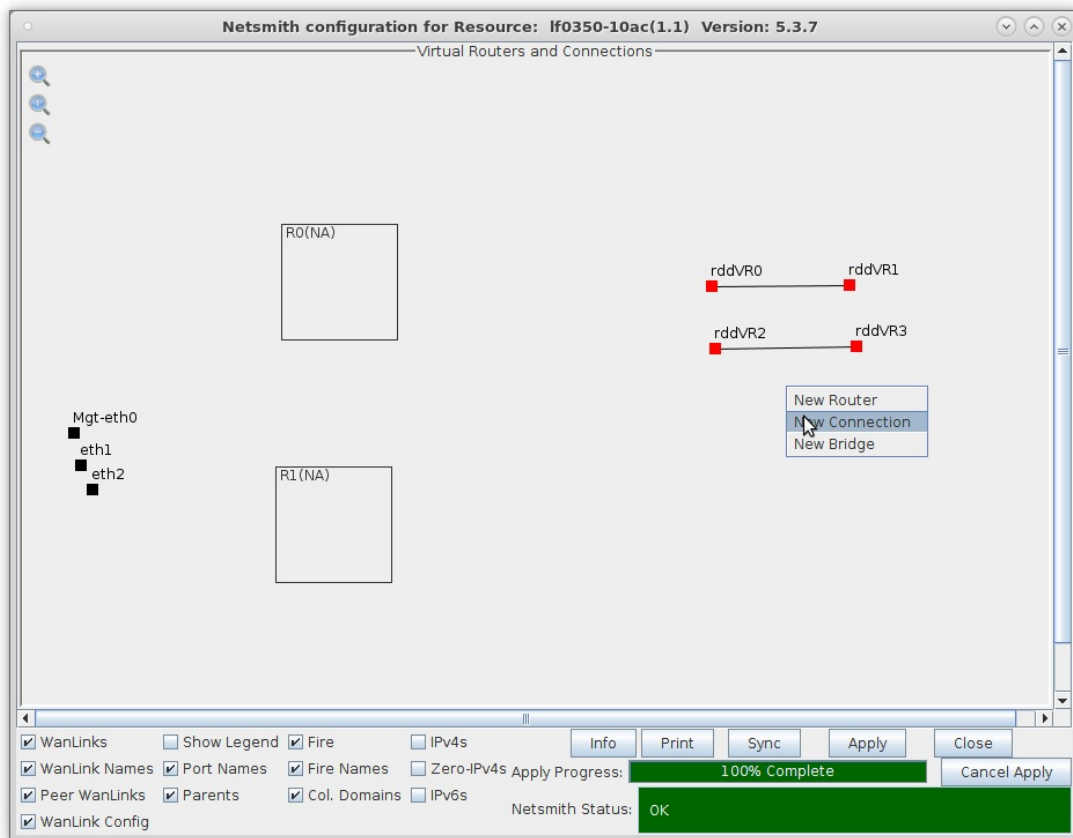

F. Click the **Apply** button followed by the **Sync** button

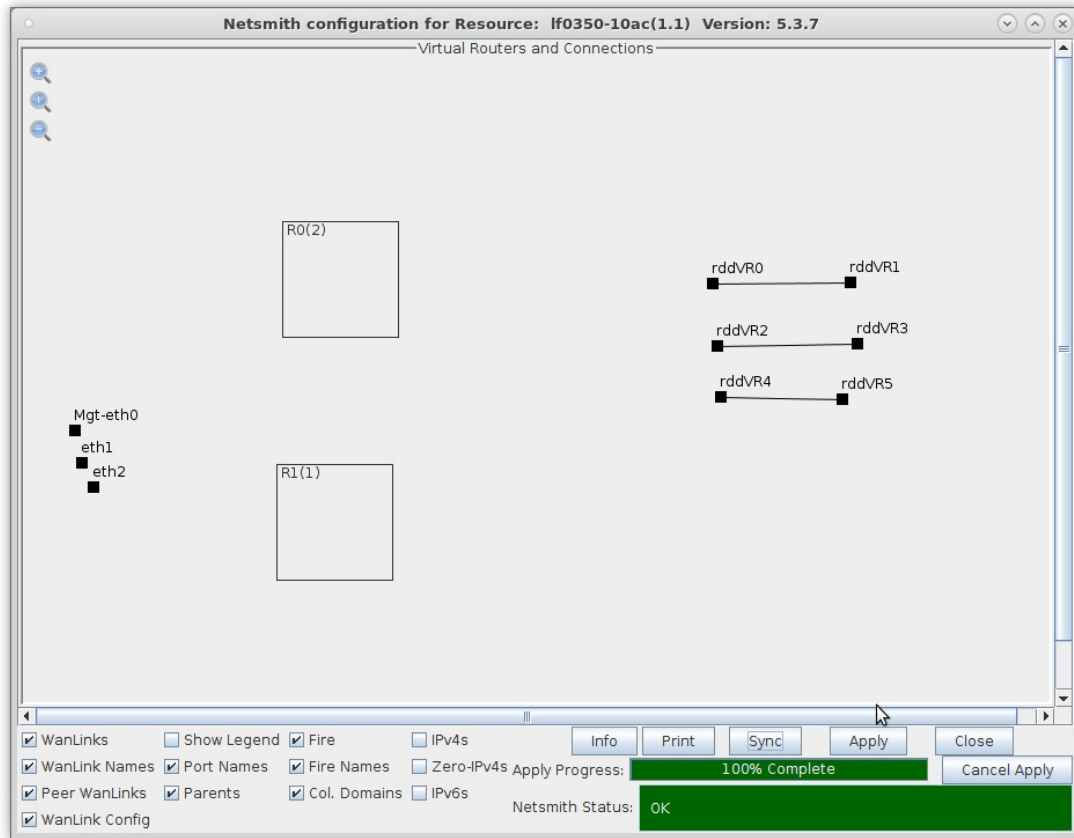


- A. **NOTE:** Modifications in Netsmith are only sent to the LANforge-Server after Applying them
- B. Clicking **Sync** makes sure any changes are synchronized with the current database

For more information see [LANforge-GUI User Guide: Virtual Interfaces](#)


2. Setup the Ports.

A. Right-click the rdd ports and select **Modify Port**

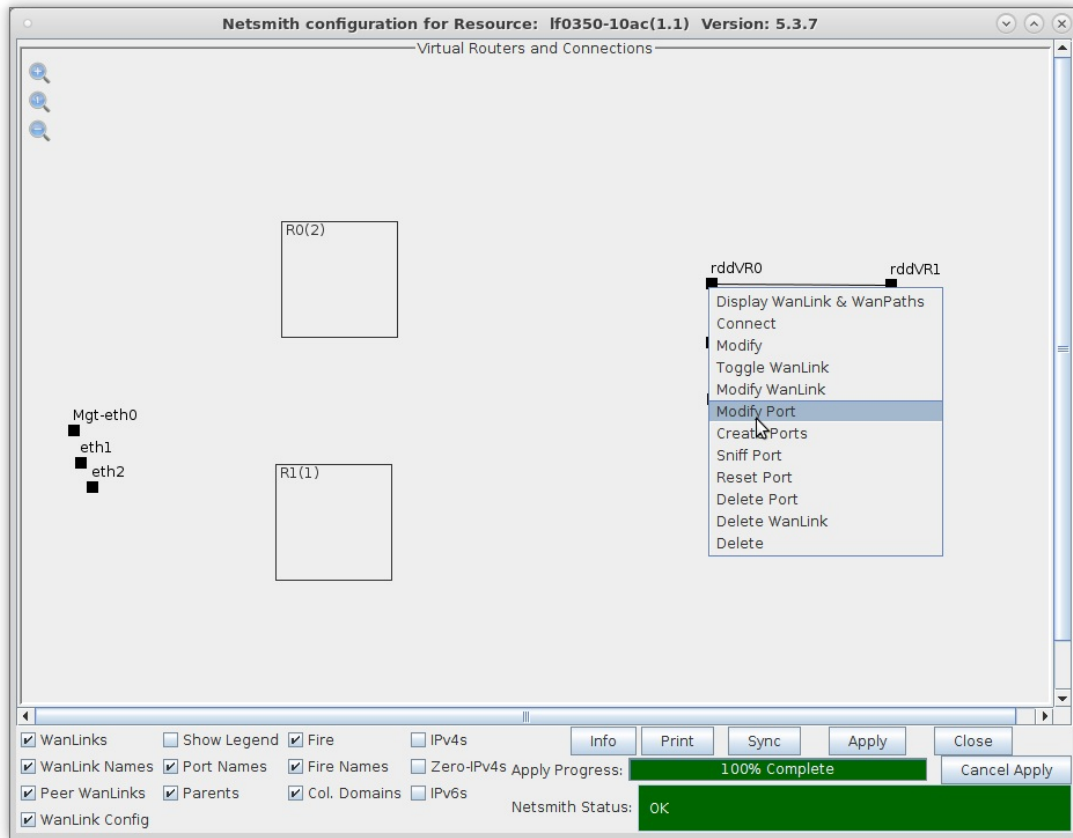


A. Assign each pair of rdd ports a unique subnet and IP address

B. Select the 'IPv4s' checkbox to view the IP addresses of the rdd ports

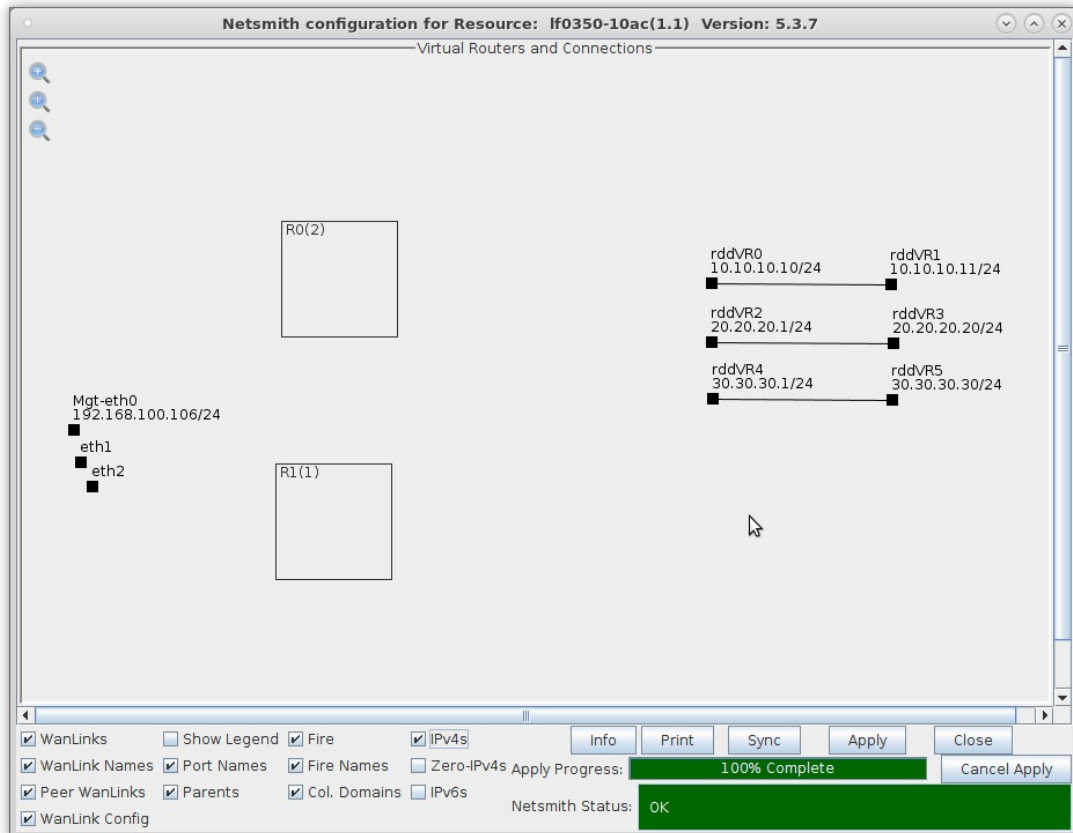

C. Configure rddVR3 and rddVR5 with a Gateway IP that corresponds to their peer rdd interface

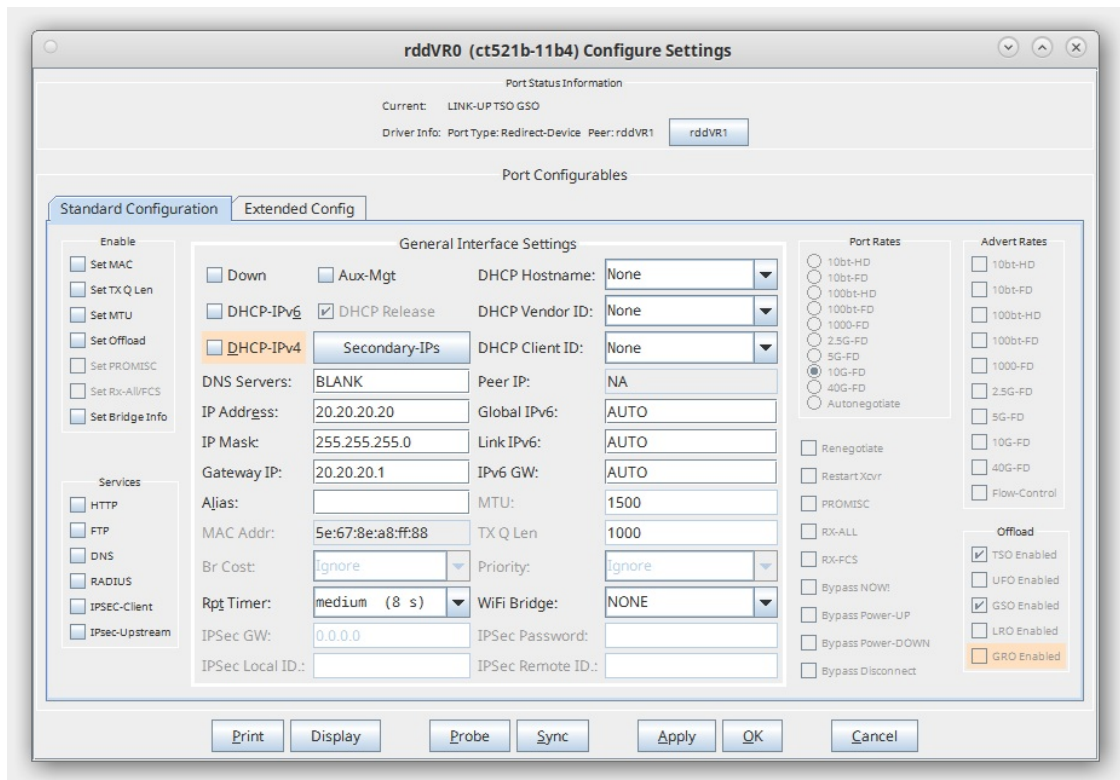


A. **NOTE:** In this example, rddVR3 has a Gateway IP of 20.20.20.1 and rddVR5 has a Gateway IP of 30.30.30.1


For more information see [LANforge-GUI User Guide: Ports \(Interfaces\)](#)

3. Move the Redirected Interfaces into their desired positions.


A. Drag rddvR0 into Router R0(2) and rddvR1 into Router R1(1)

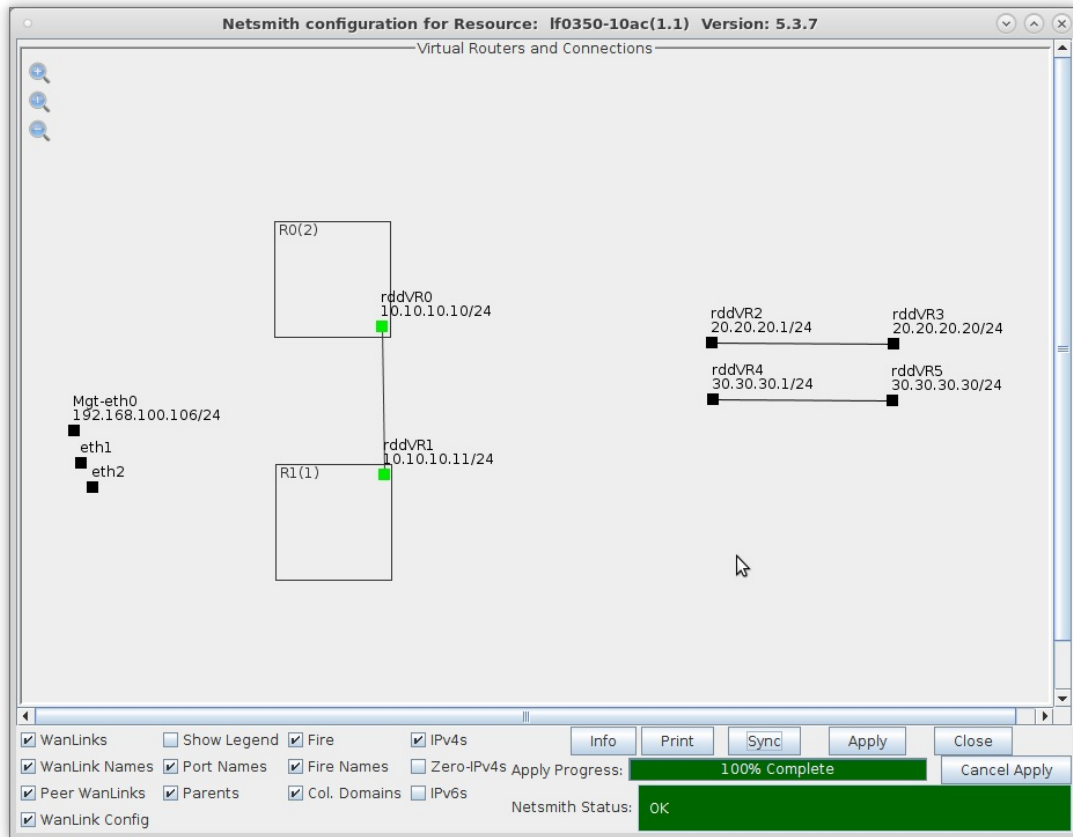

B. Drag rddvR2 into Router R0(2) and rddvR4 into Router R1(1)

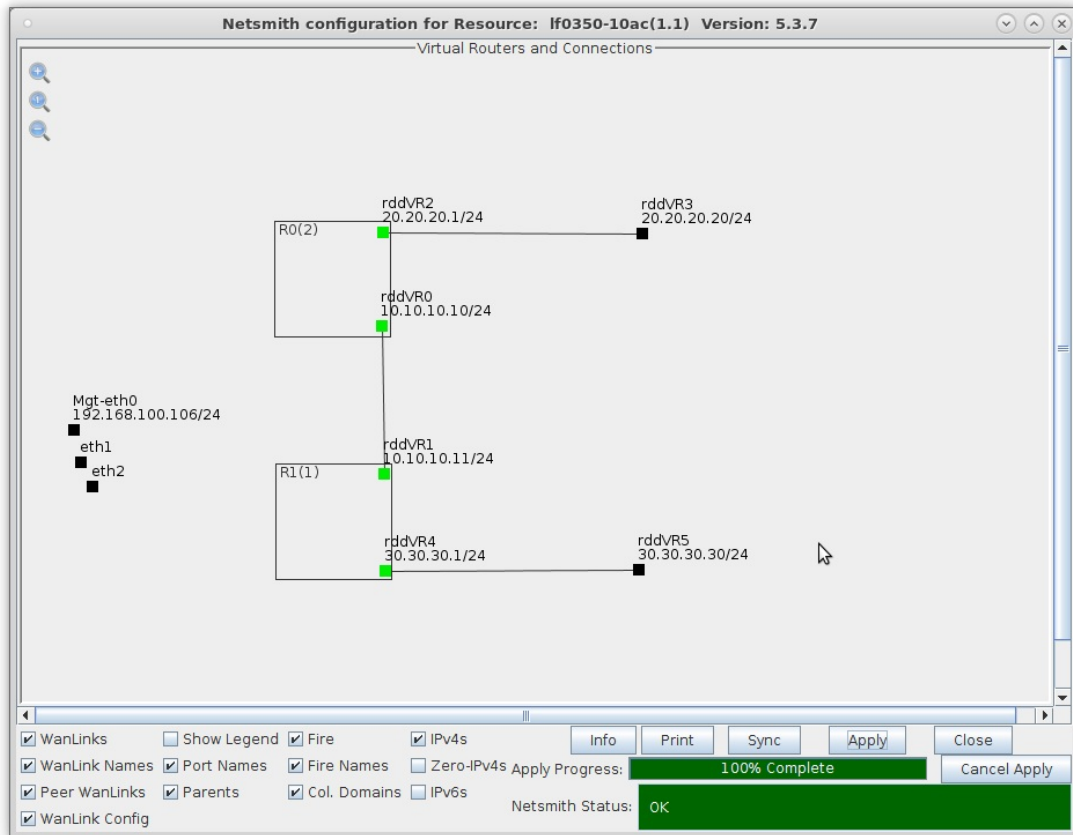


C. Click Netsmith **Apply** to commit the changes

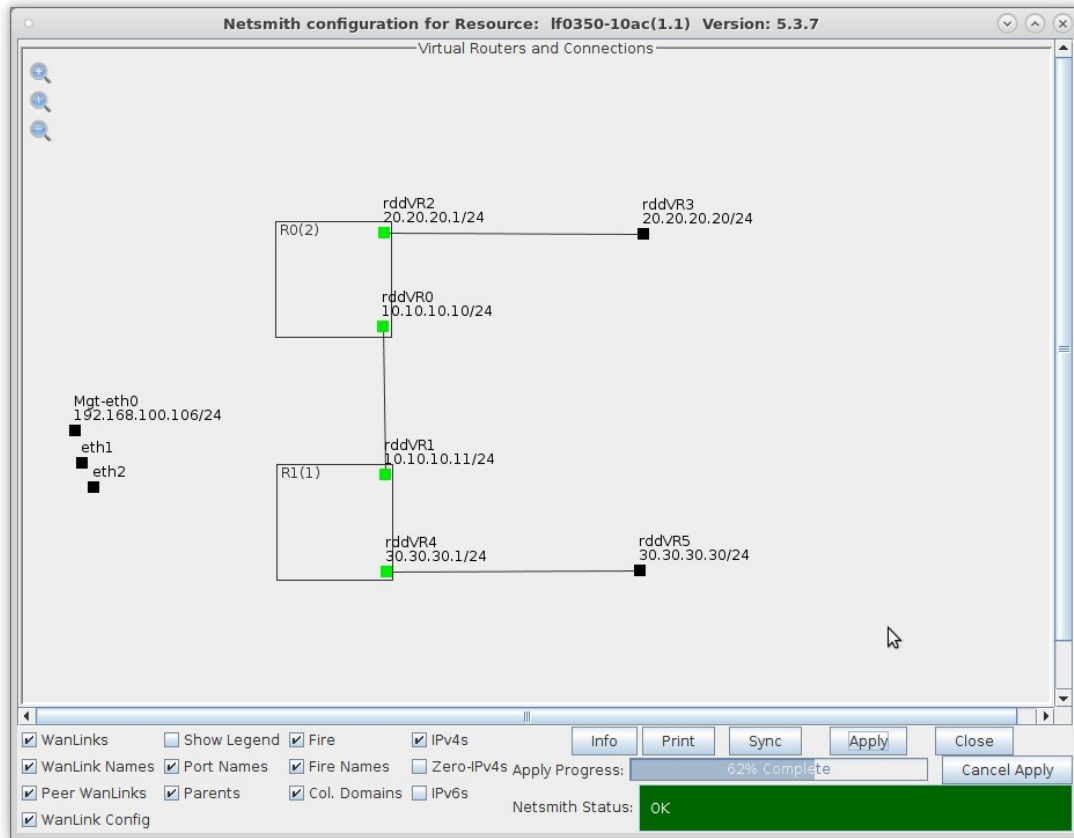


4. Create a TCP connection and sniff traffic without NAT.

A. Go to the **Layer-3** tab and click **Create**

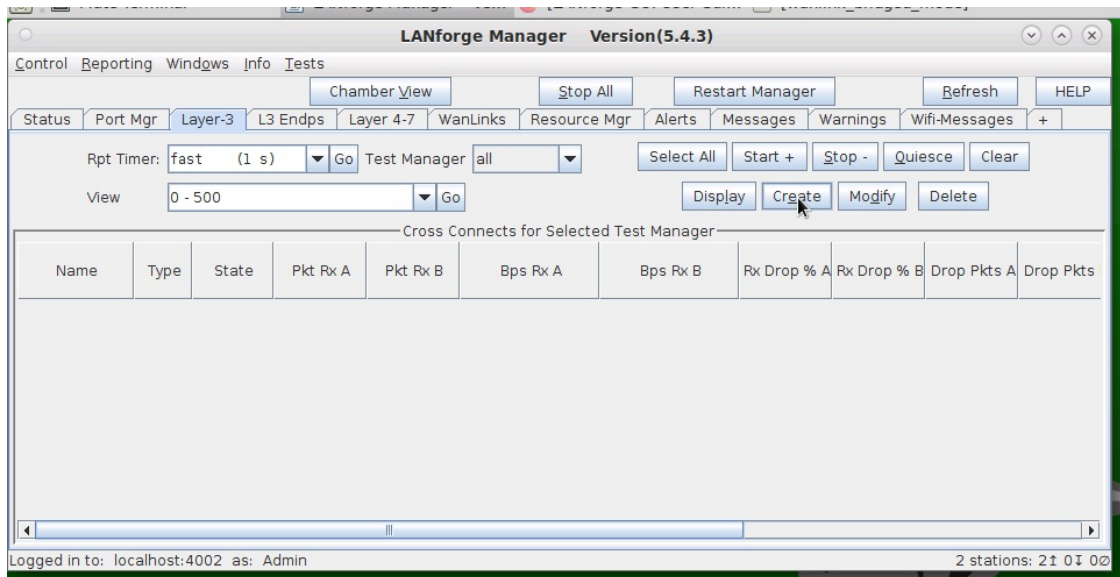


B. Create a Layer-3 TCP connection between endpoints rddVR3 and rddVR5 then click **OK**

C. In Netsmith, right-click the TCP connection and click **Start**

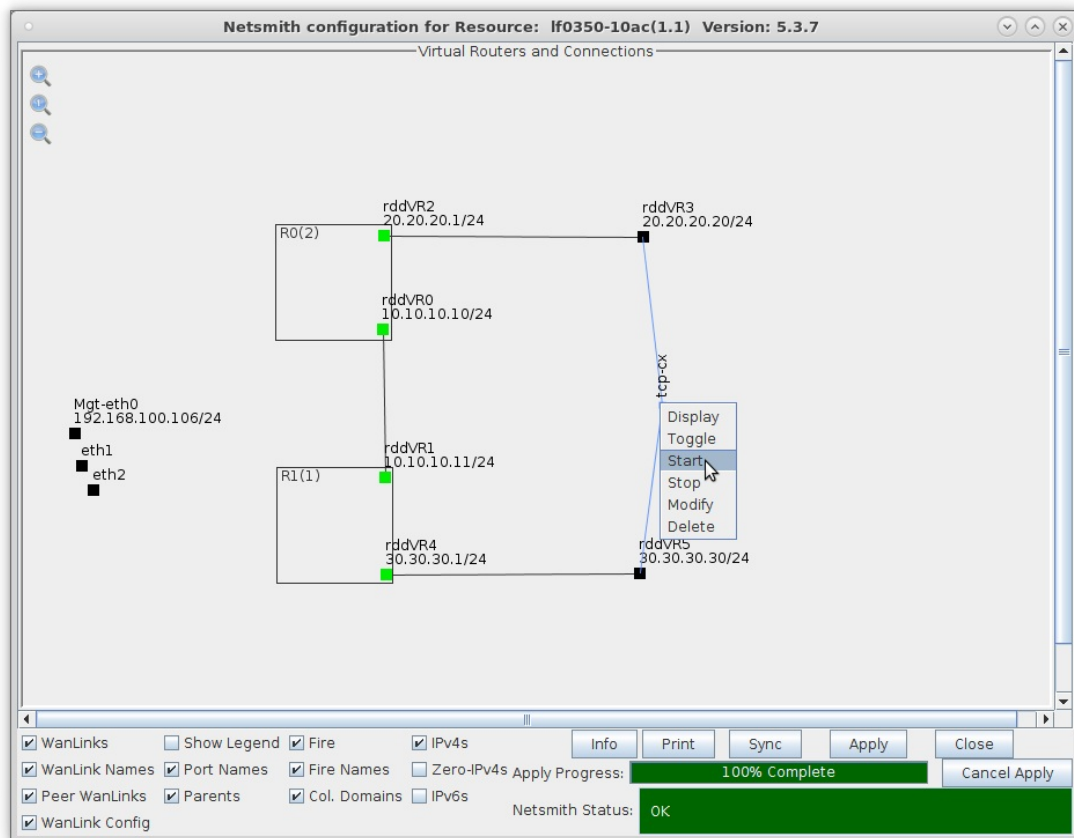


D. Right-click port rddVR1 and click **Sniff Port**

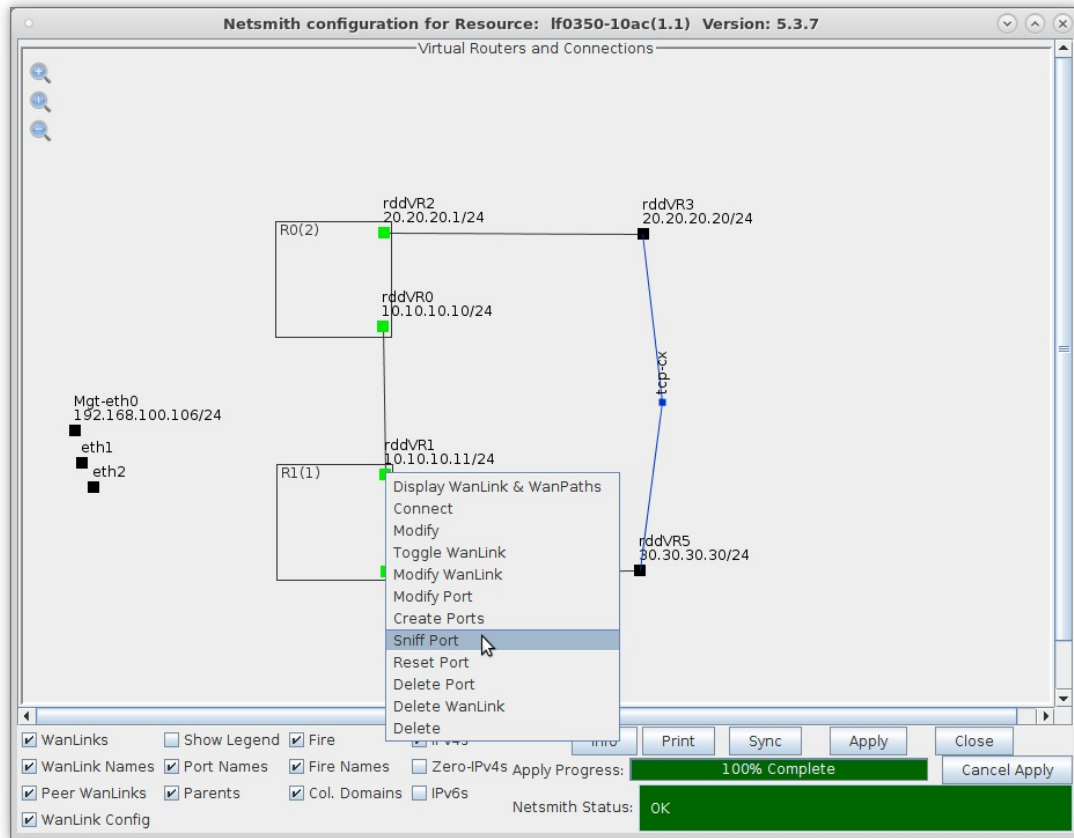

A. **NOTE:** You must have Wireshark properly installed as described here: [Installing Wireshark](#)


E. After Wireshark begins, notice that the source and destination IP addresses are from 20.20.20.20 (rddVR3) and 30.30.30.30 (rddVR5) as expected without NAT enabled

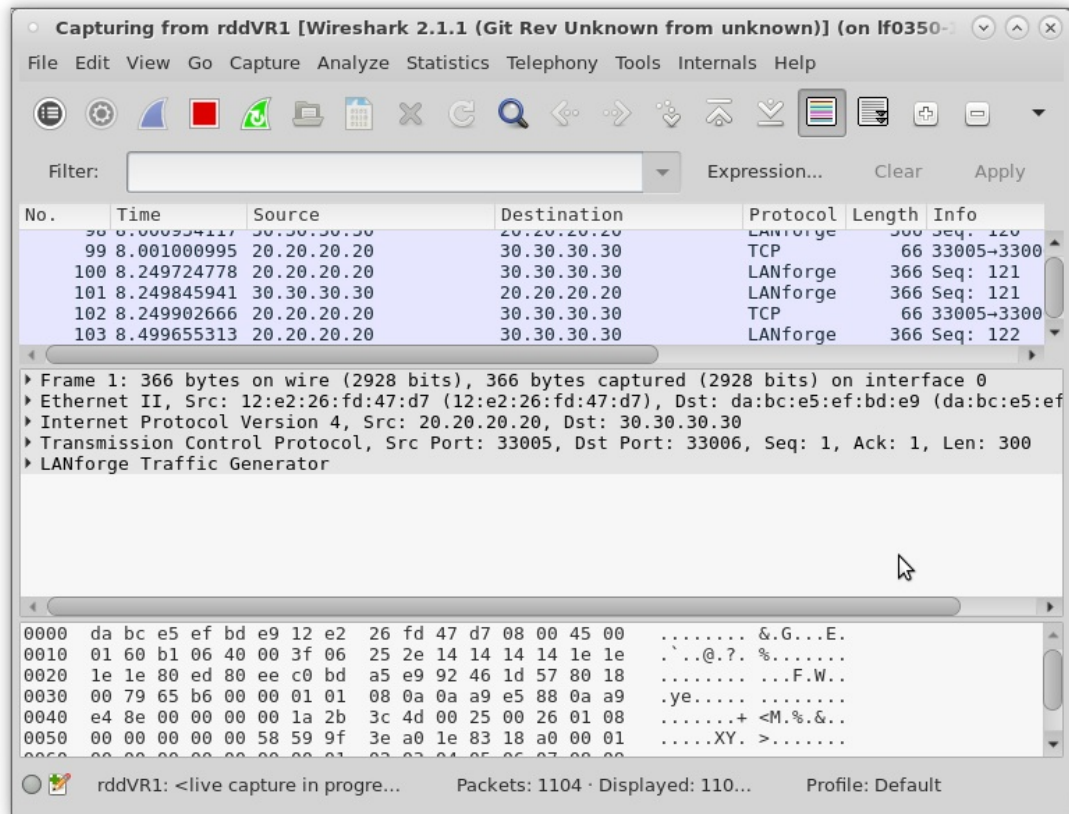


5. Enable NAT and sniff traffic on the same port.

NOTE It is important that Endpoint-A of the connection is **behind** the NAT port because it is the side that initiates the connection. Reversing the endpoint ports will cause the connection to fail.


A. Right-click on the TCP connection and select **Stop**

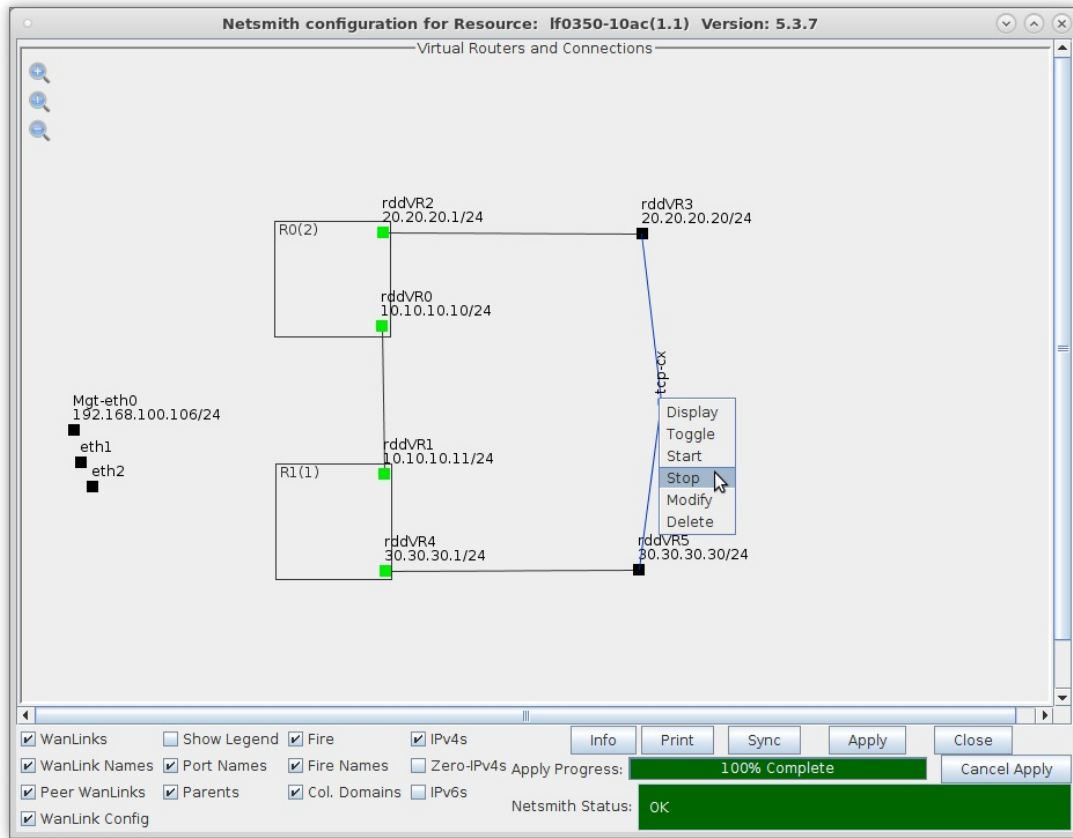


B. Right-click rddVR0 and select **Modify**

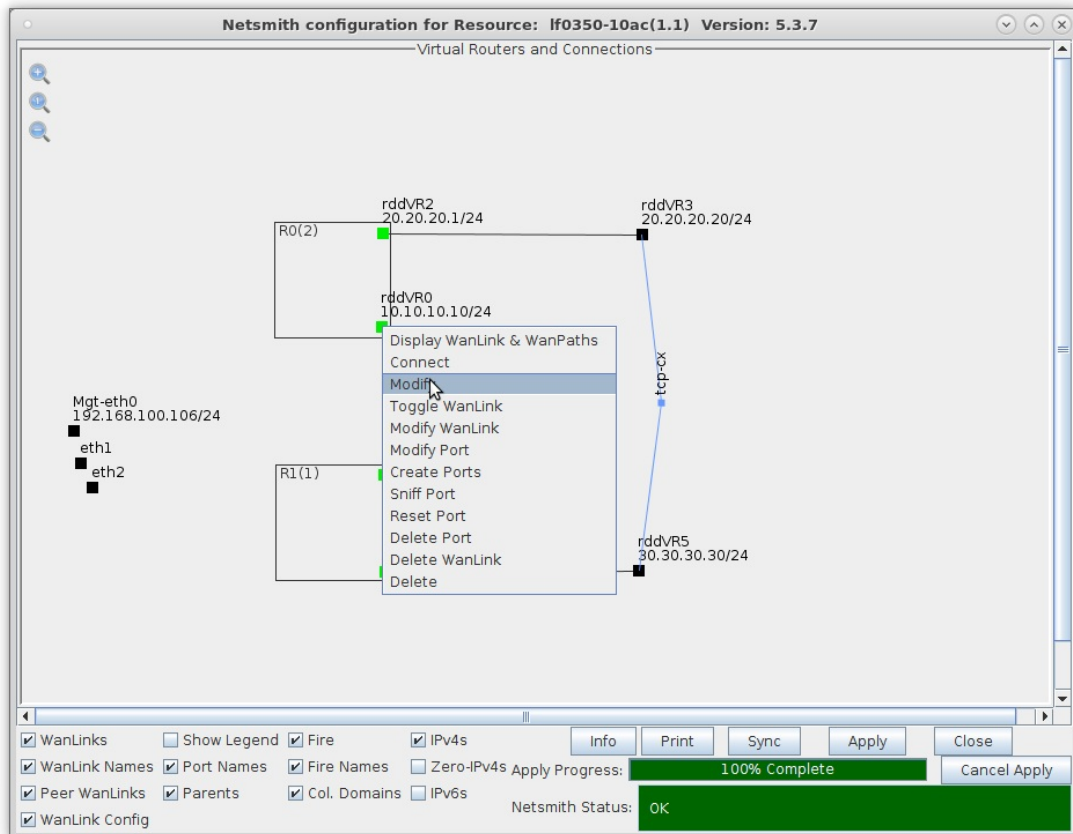


C. Select the 'NAT' checkbox and click **OK**, then click the Netsmith **Apply** button

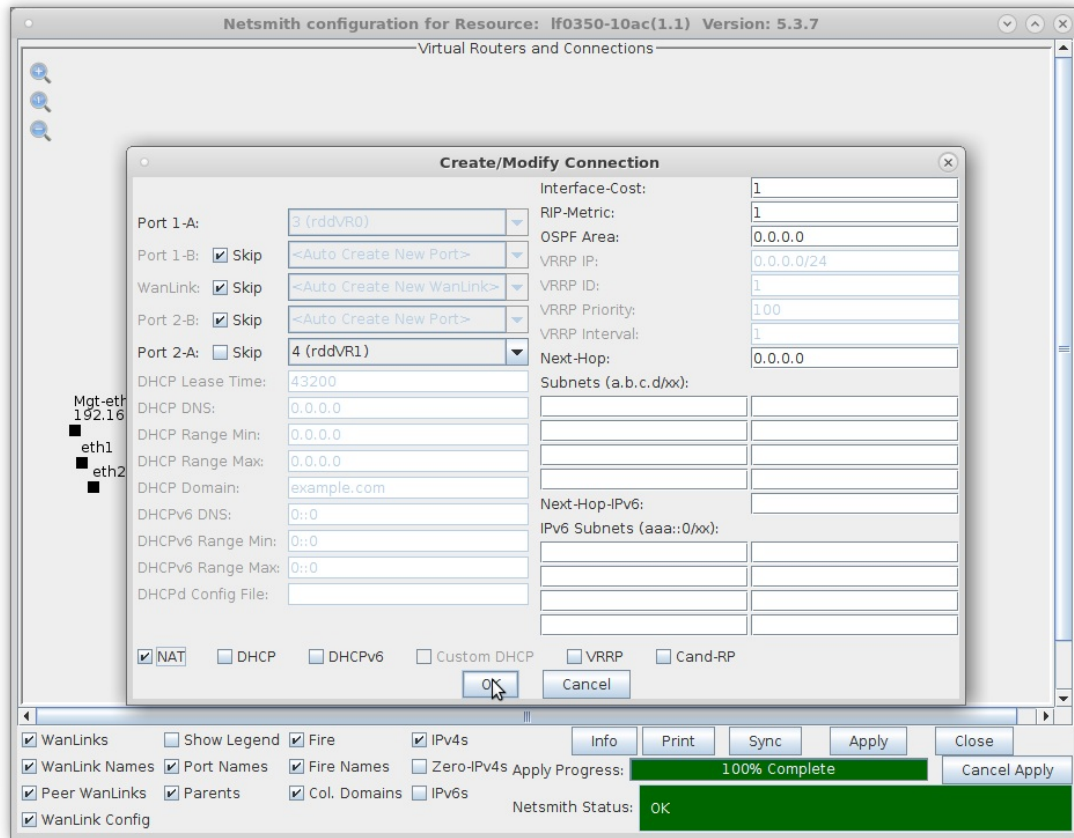


D. Right-click on the TCP connection and select **Start**

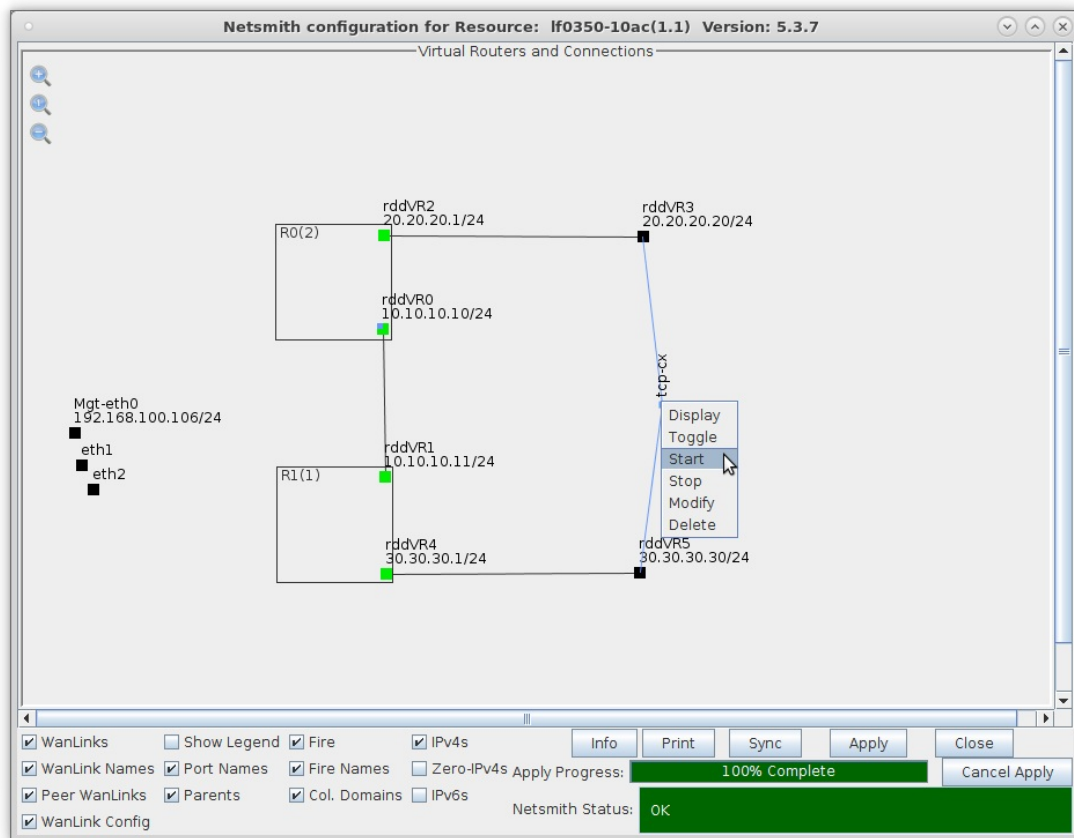

E. Right-click port rddVR1 and select **Sniff Port**

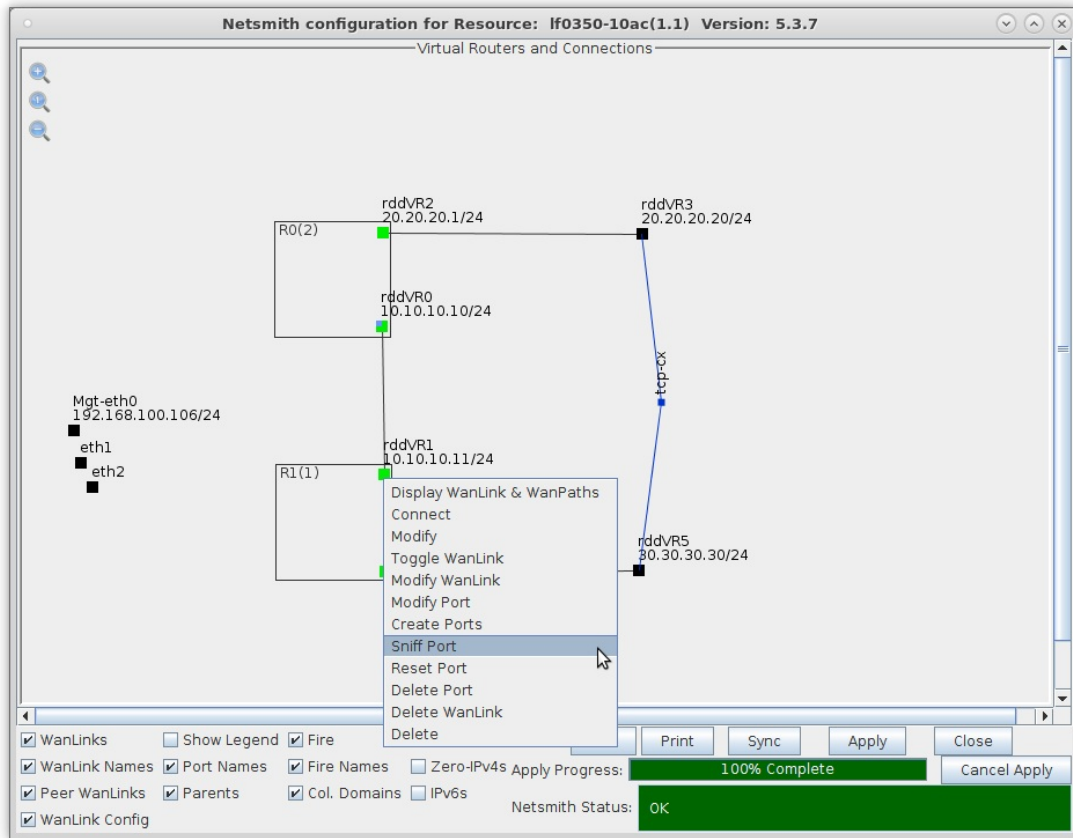

F. After Wireshark begins, notice that any source or destination IP address from or to 20.20.20.20 (rddVR3) has been NAT'd to be 10.10.10.10 because rddVR0 is now performing NAT on all outgoing traffic

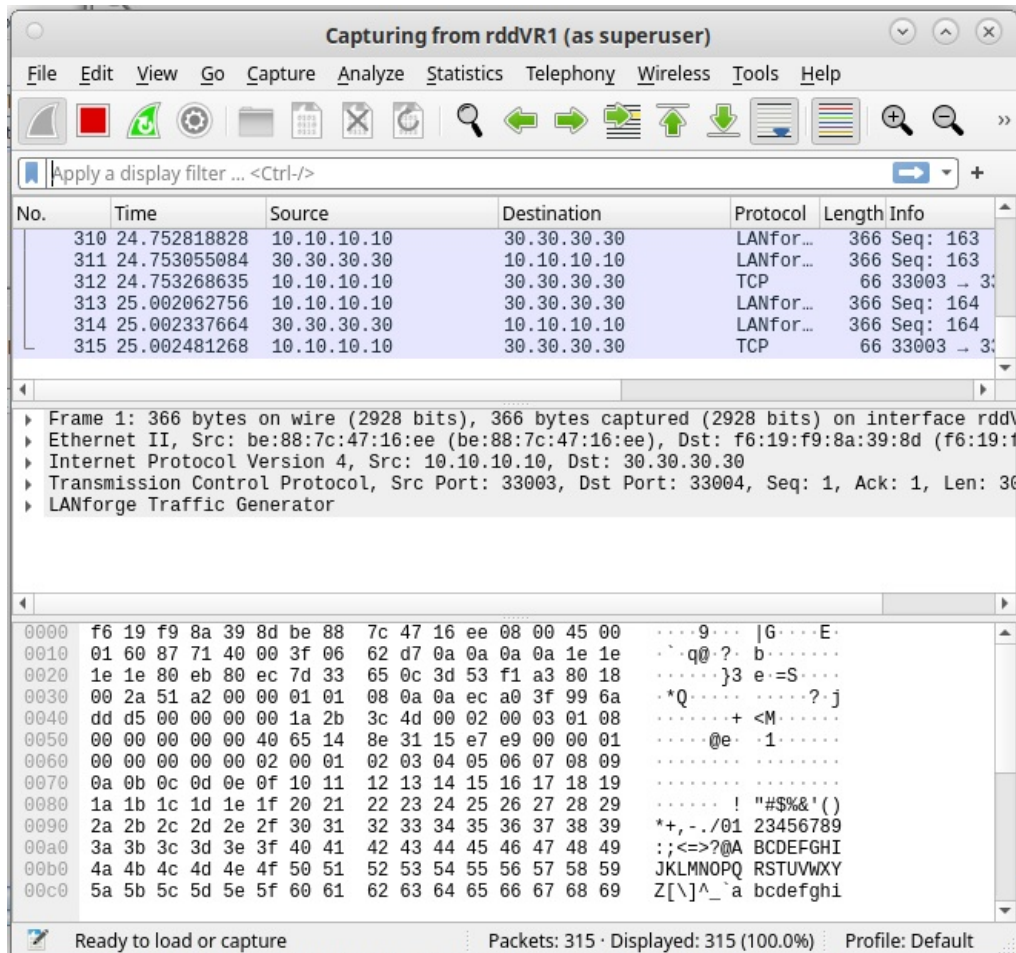


Multiple Layer-2 Switches

Goal: Emulate the behavior of five Layer-2 Switches connected together for traffic fail-over testing.

In this test scenario, the function of several layer-2 switches will be emulated using multiple LANforge Bridge devices with Spanning Tree Protocol (STP) so that each bridge can be connected to at least two others and fail-over tests can be demonstrated.


1. Setup seven Netsmith Connections.

A. Right-click inside the Netsmith window and select **New Connection**

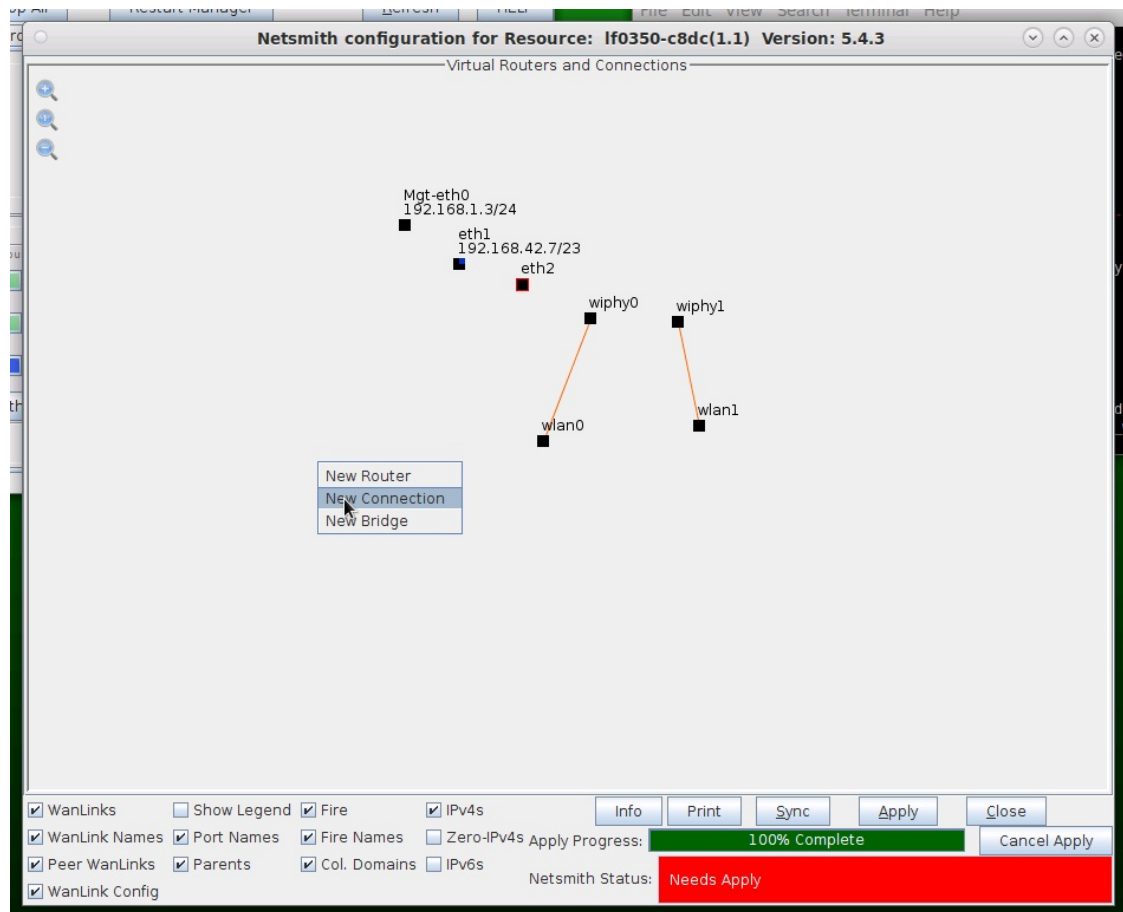


B. Accept defaults Auto Create everything then click **OK**.

C. Repeat and create a total of seven (7) connections

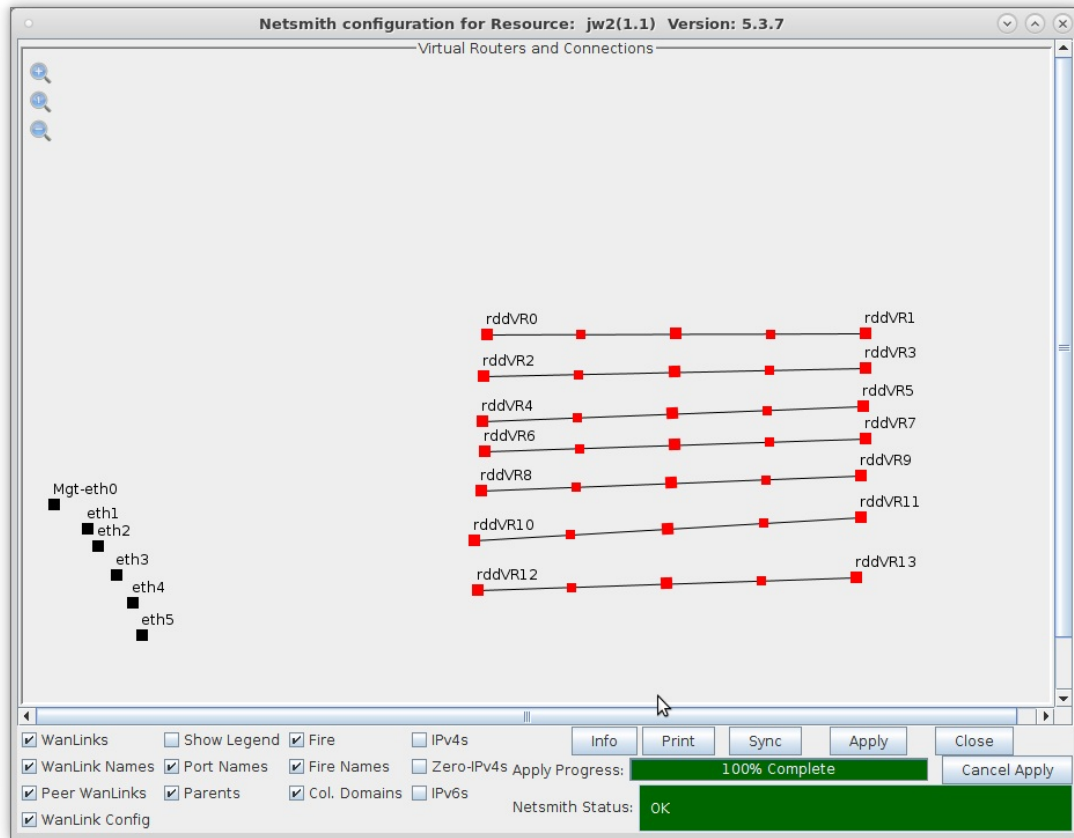

D. Click the **Apply** button to commit the changes in Netsmith to the LANforge-Server

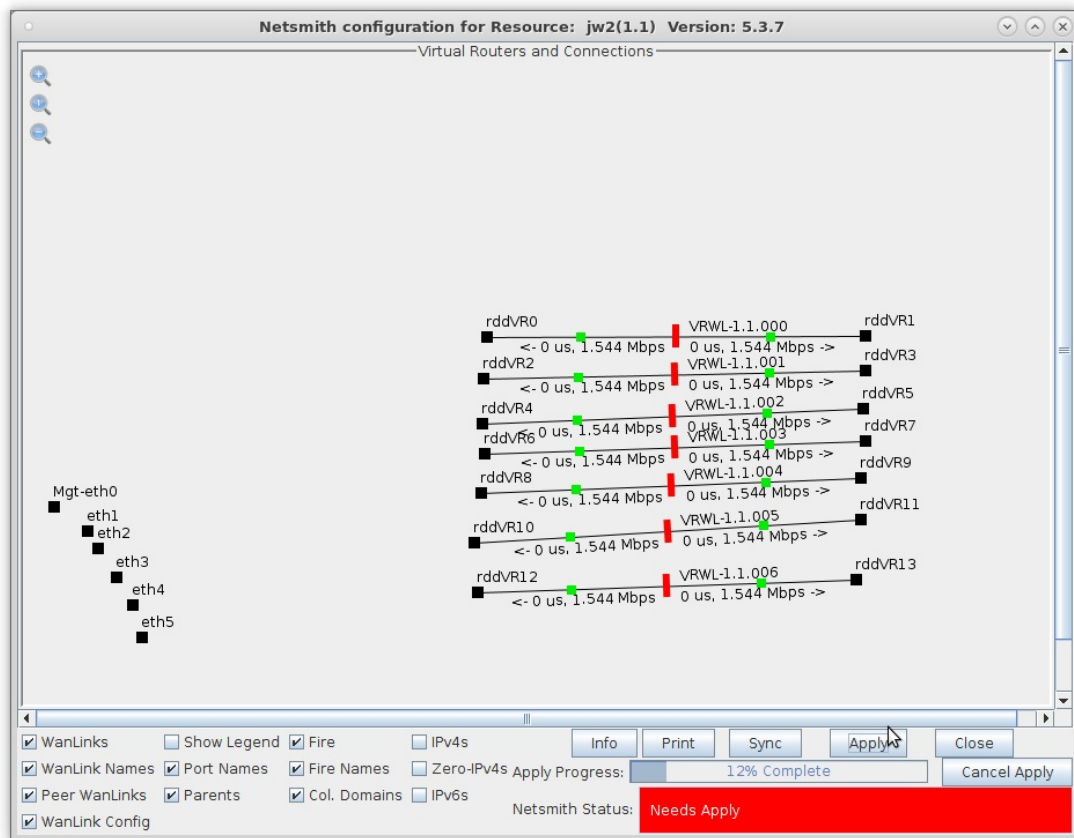


A. **NOTE:** Modifications in Netsmith are only sent to the LANforge-Server after Applying them


For more information see [LANforge-GUI User Guide: Virtual Interfaces](#)

2. Setup five Bridge devices.

A. Right-click inside the Netsmith window and select **New Bridge**

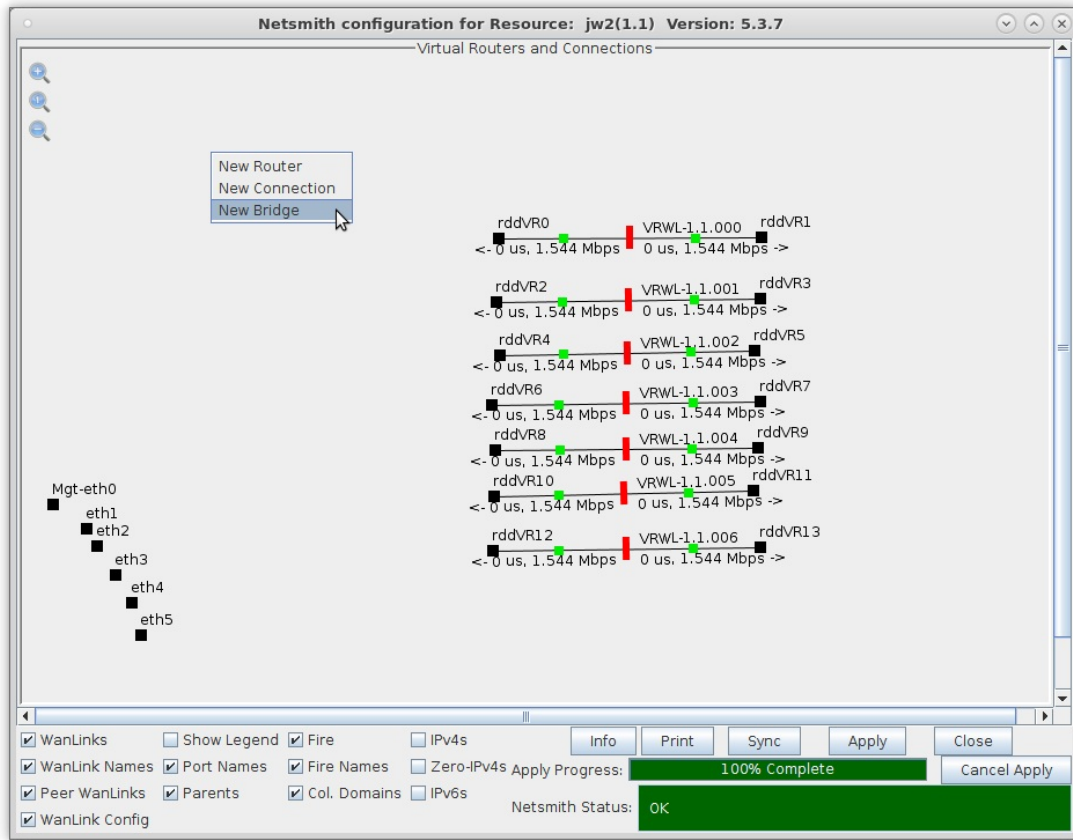


B. Select the **Bridge** button, enter a name and quantity 5

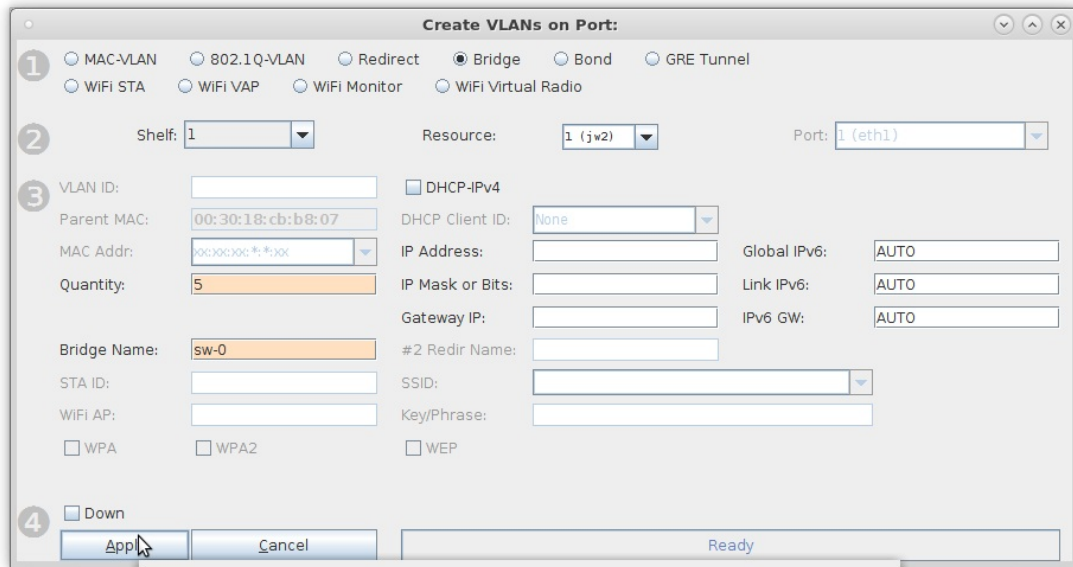

A. **NOTE:** The 5 bridges here are sw-0, sw-1, sw-2, sw-3, and sw-4


- C. In Netsmith, position the bridge devices into separate areas so they can be grouped with WanLink entry points

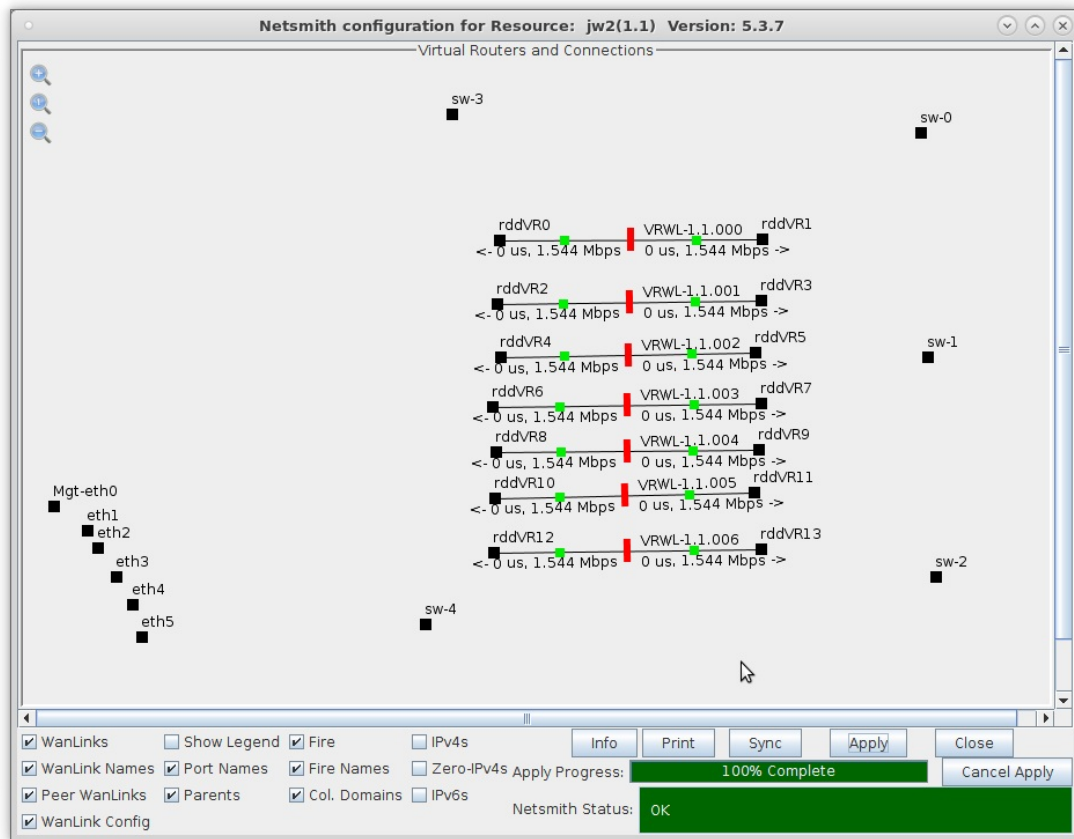

For more information see [LANforge-GUI User Guide: Ports \(Interfaces\)](#)


3. Move the WanLinks into their desired positions.

A. Position the WanLink entry points in groups near the bridges as follows:

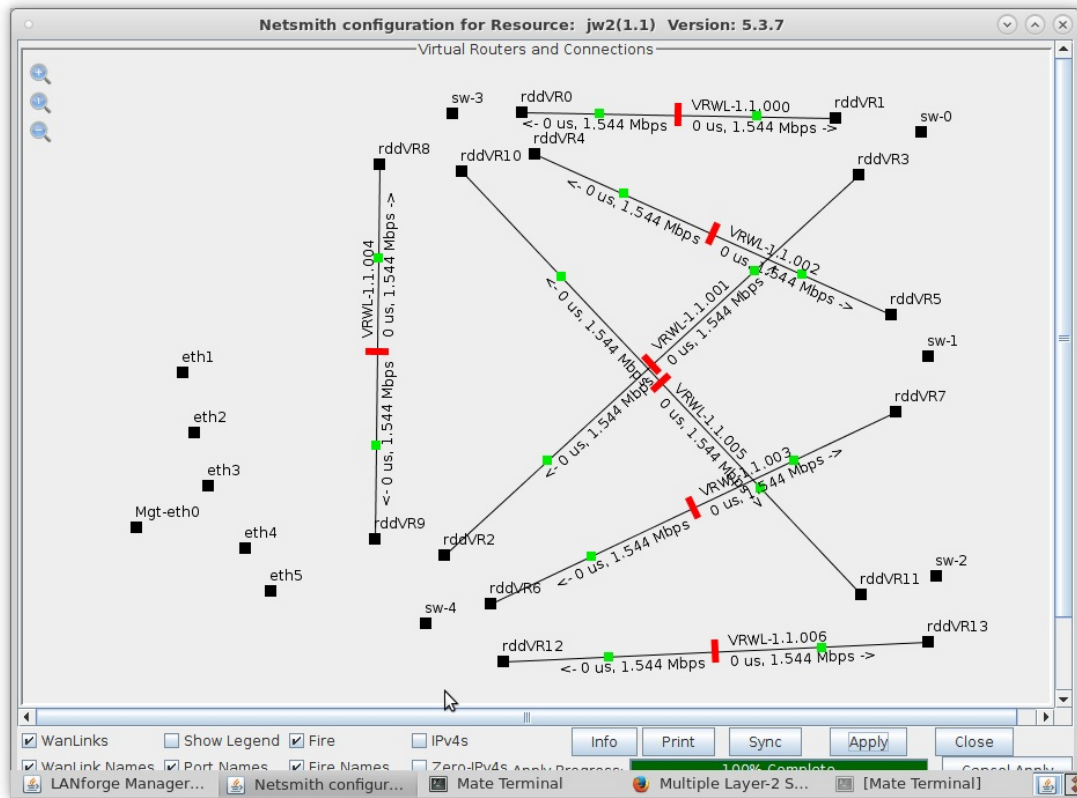


- A. 2 entry points near sw-0, sw-1, and sw-2 (one to sw-3 and one to sw-4)
- B. 3 entry points near sw-3 and sw-4 (one to sw-0, sw-1, and sw-2)
- C. Bridges sw-3 and sw-4 should also have a WanLink between them

B. Click Netsmith **Apply** to commit the changes

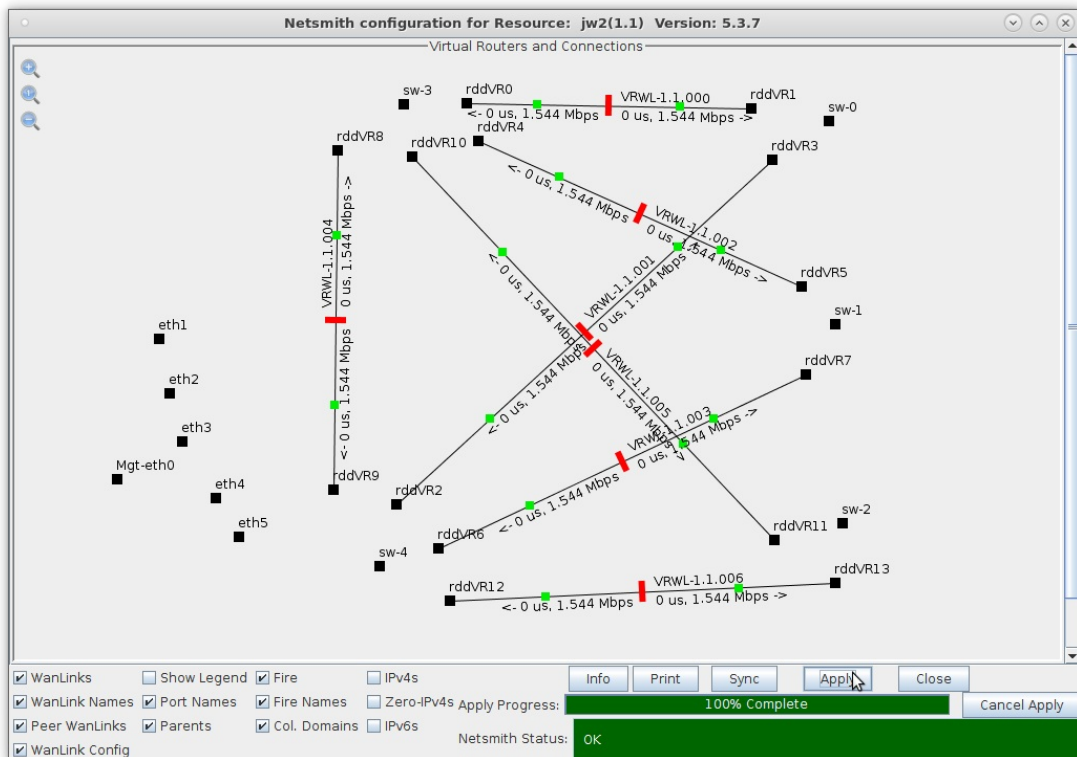


4. Modify each Bridge to enable Spanning Tree Protocol (STP) and add Bridge Members.

A. Right-click bridge sw-0 and select **Modify Port**

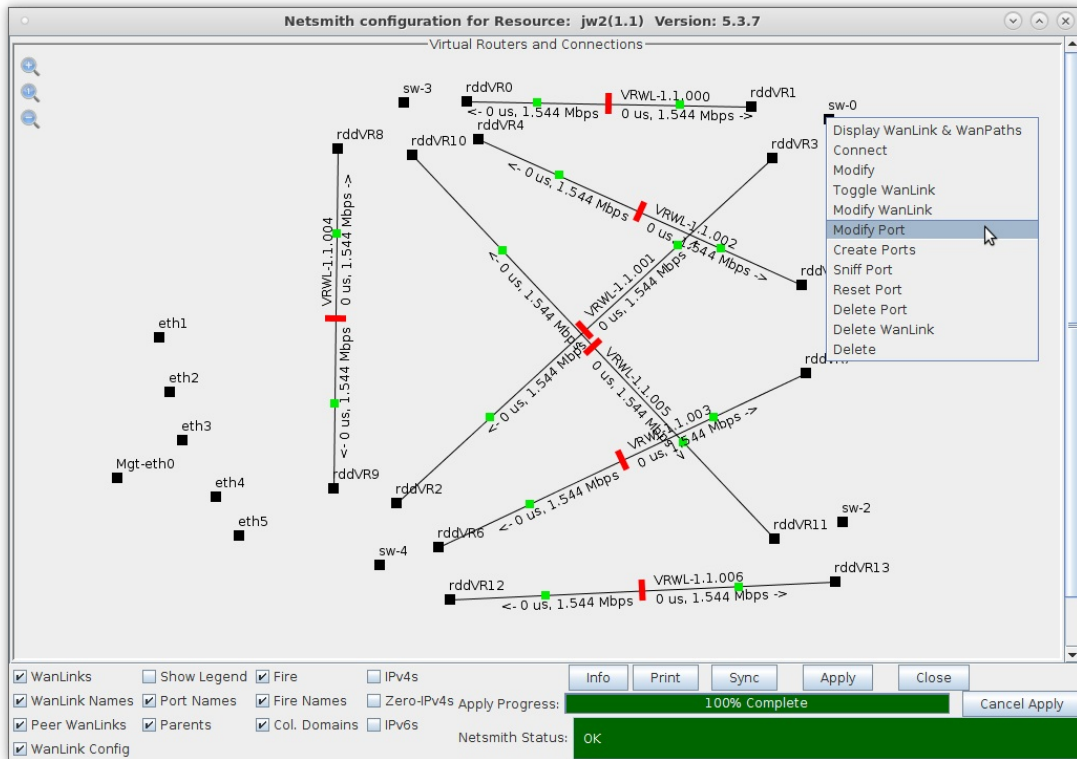


B. Select the 'Set Bridge Info' and 'Spanning Tree' checkboxes, then add bridge members rddVR1 and rddVR3

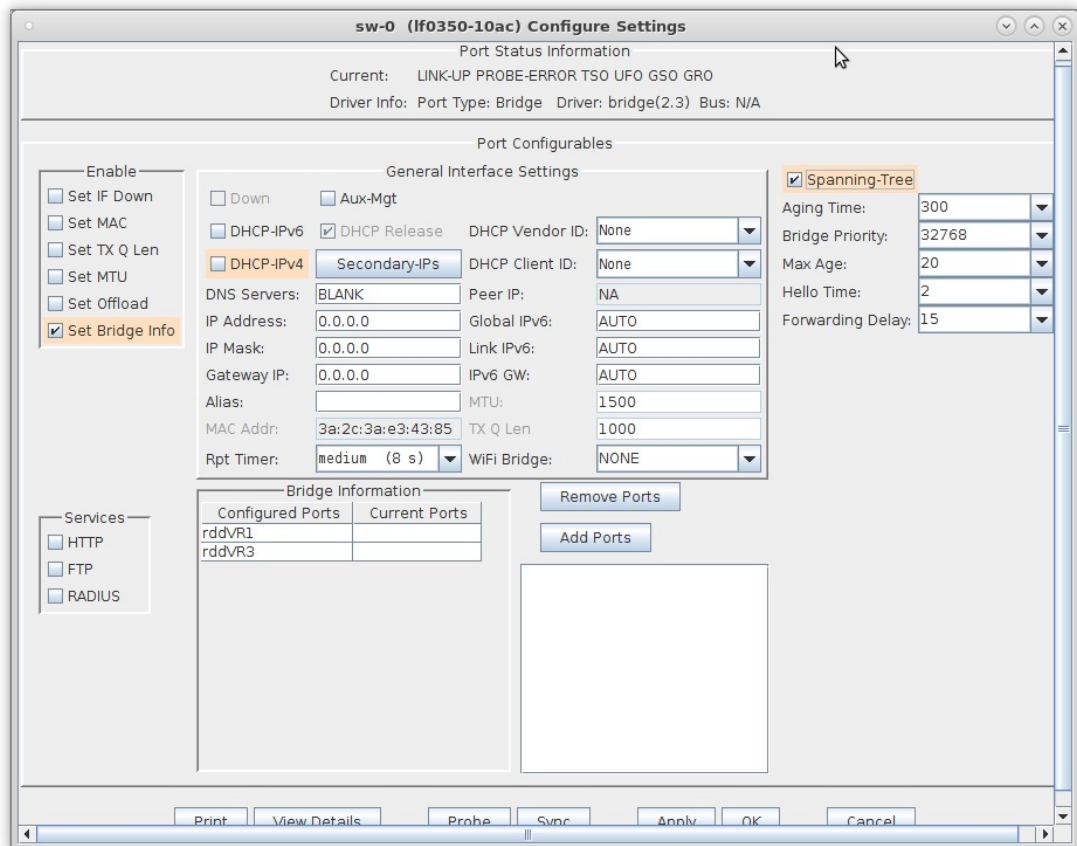

A. **NOTE:** Selecting the 'Spanning Tree' checkbox enables Spanning Tree Protocol (STP) for that port


B. Click the **Apply** or **OK** button to commit the changes in bridge configuration to the LANforge-Server

C. Right-click bridge sw-1 and select **Modify Port**

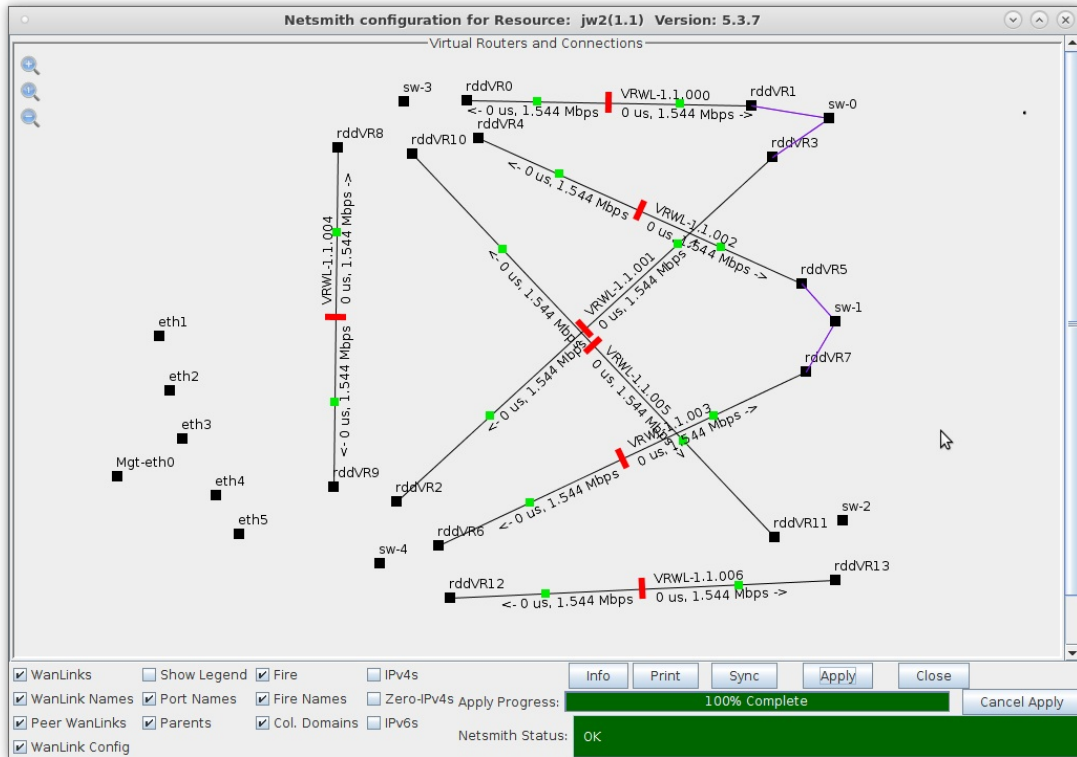


A. Enable STP and add members rddVR5 and rddVR7

D. Right-click bridge sw-2 and select **Modify Port**

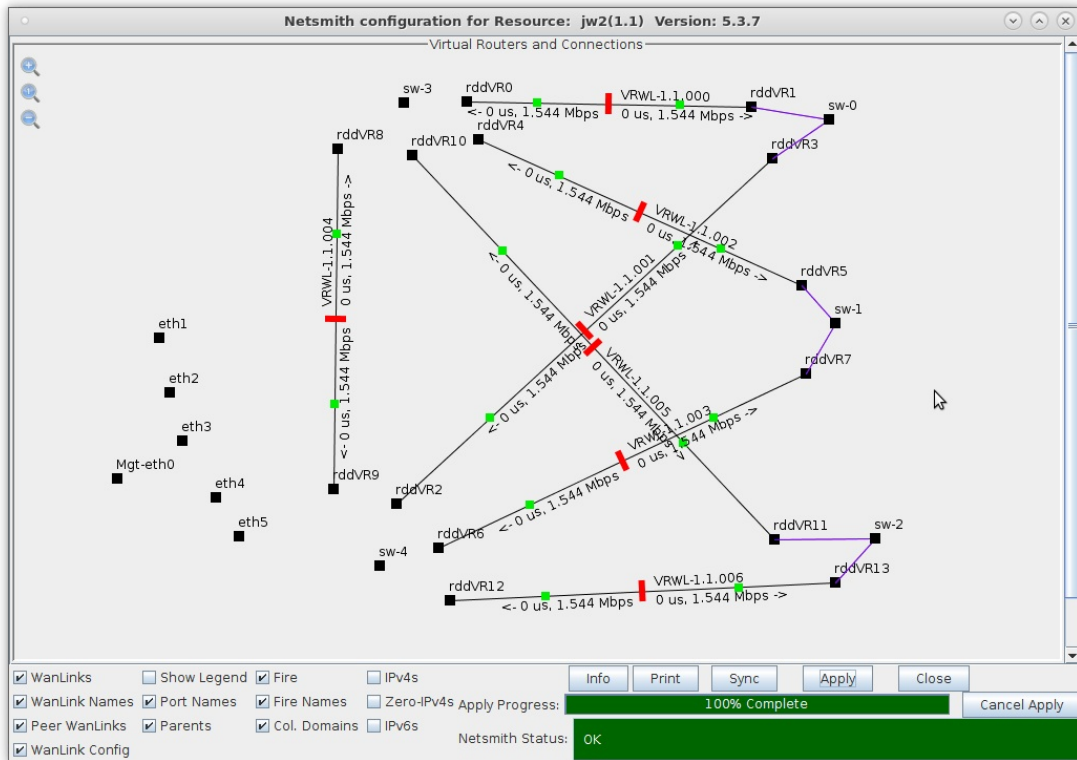


A. Enable STP and add members rddVR11 and rddVR13

E. Right-click bridge sw-3 and select **Modify Port**

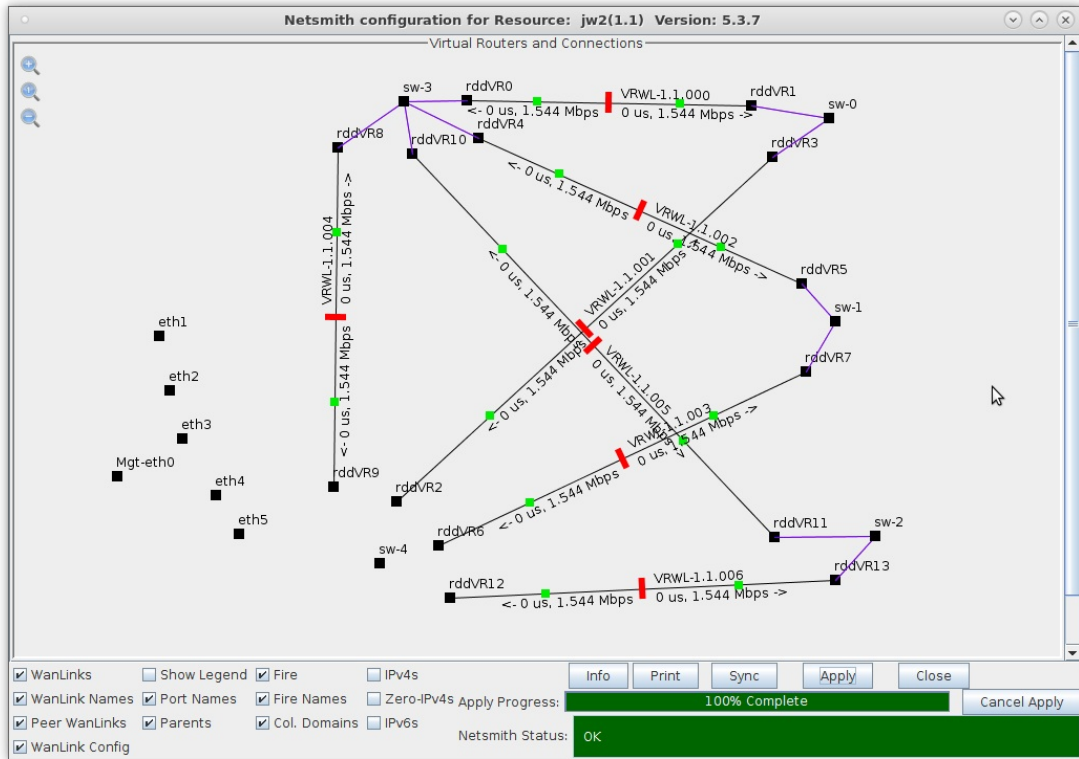

A. Enable STP and add members rddVR0, rddVR4, rddVR8 and rddVR10


F. Right-click bridge sw-4 and select **Modify Port**

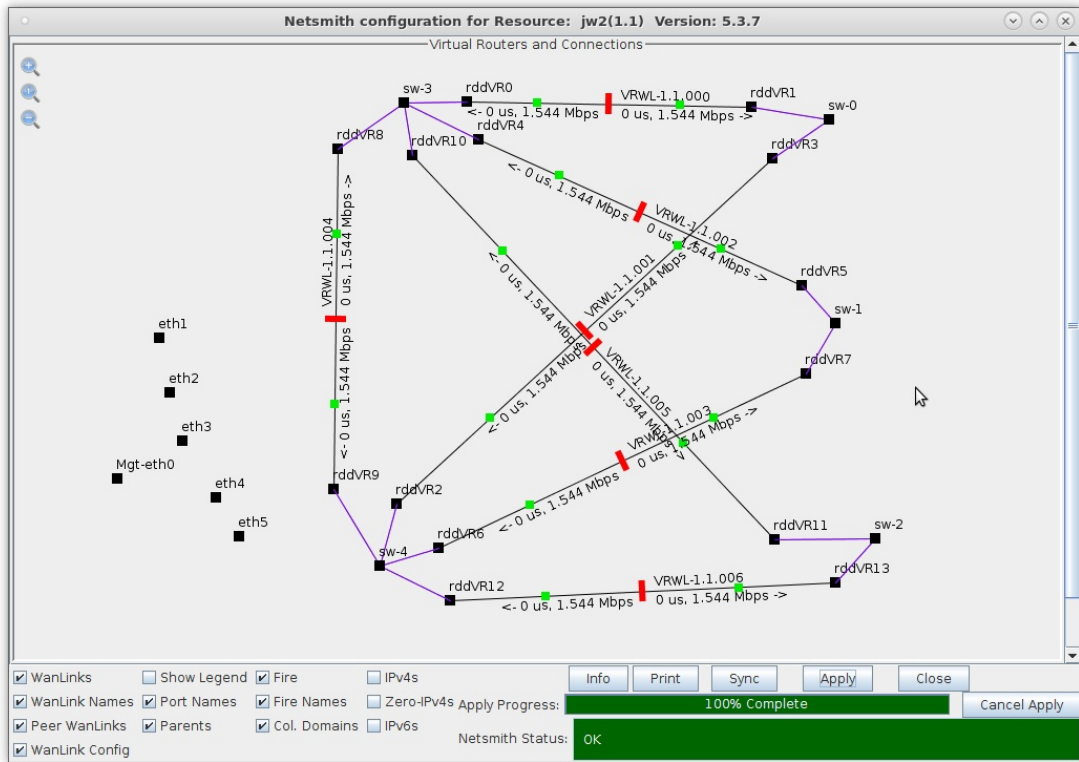

A. Enable STP and add members rddVR2, rddVR6, rddVR9 and rddVR12


5. Create virtual interfaces for traffic generation and fail-over tests.

A. Right-click sw-0 and select **Create Ports** and choose Redirect

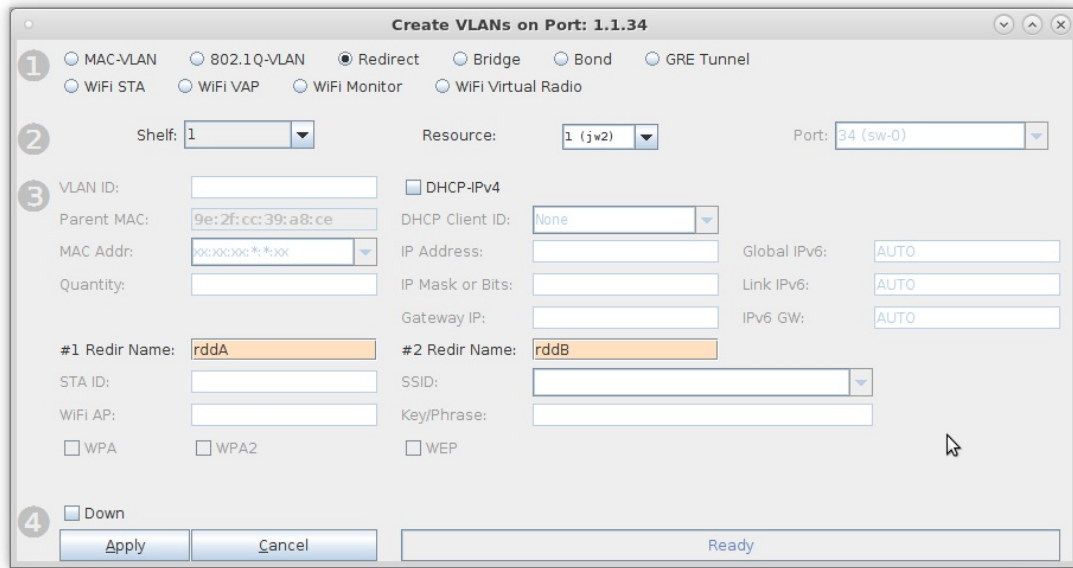


A. This step will create two Redirect Devices, rddA and rddB

B. Add rddA to bridge sw-0

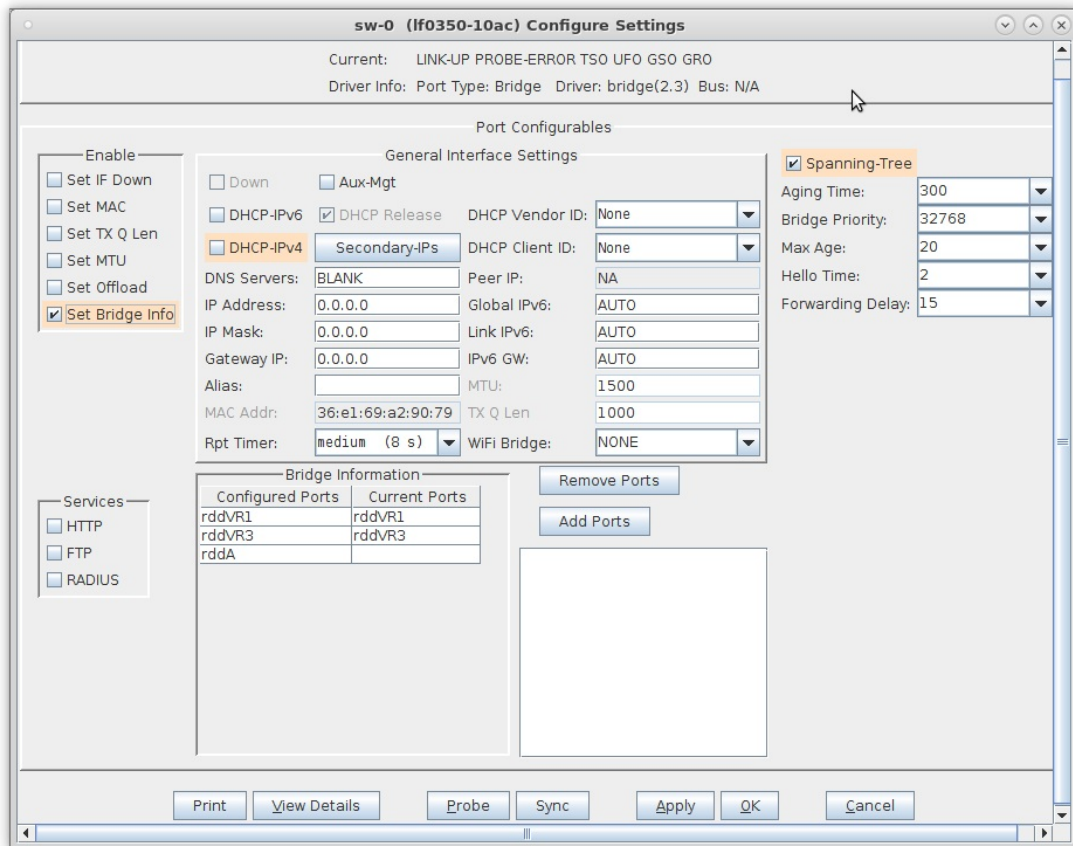

A. Click the **Apply** or **OK** button to commit the changes in bridge configuration to the LANforge-Server

E. Repeat for bridge sw-2

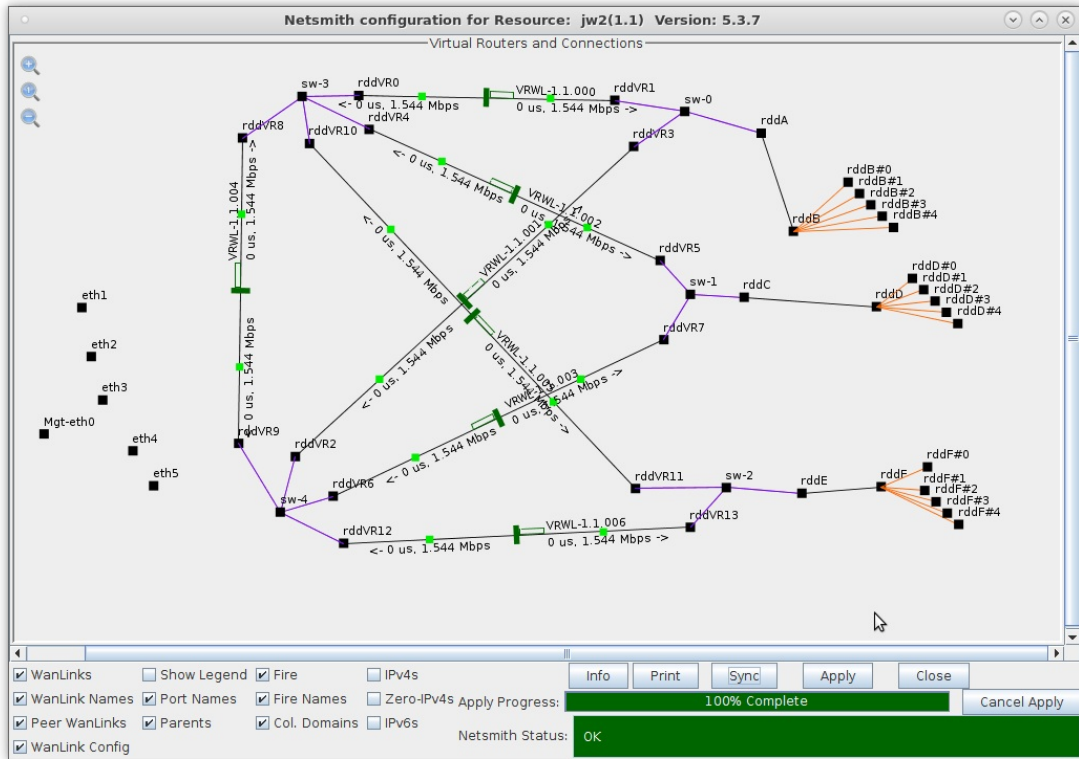

6. Create Layer-3 connections.

A. On the **Layer-3** tab, create a Layer-3 UDP connection between rddB#0 and rddD#0


The screenshot shows the 'cx-01 - Create/Modify Cross Connect' dialog box. The dialog is configured for a Cross-Connect named 'cx-01' of type 'LANforge / UDP'. The configuration includes the following details:

Field	Endpoint A	Endpoint B
Resource	1 (1f0350-10ac)	1 (1f0350-10ac)
Port	43 (rddB#0)	48 (rddD#0)
Min Tx Rate	ISDN (128 Kbps)	ISDN (128 Kbps)
Max Tx Rate	Same	Same
Min PDU Size	UDP Pld (1,472 B)	UDP Pld (1,472 B)
Max PDU Size	Same	Same
IP ToS	Best Effort (0)	Best Effort (0)
Pkts To Send	Infinite	Infinite


Additional configuration options include:

- Report Timer: fast (1 s)
- Endpoint A: increasing
- Endpoint B: increasing
- Pld Pattern: increasing
- Min IP Port: AUTO
- Max IP Port: Same
- Min Duration: Forever
- Max Duration: Same
- Min Reconn: 0 (0 ms)
- Max Reconn: Same
- Multi-Conn: Normal (0)

B. Create 4 more connections between the rddB and rddD ports

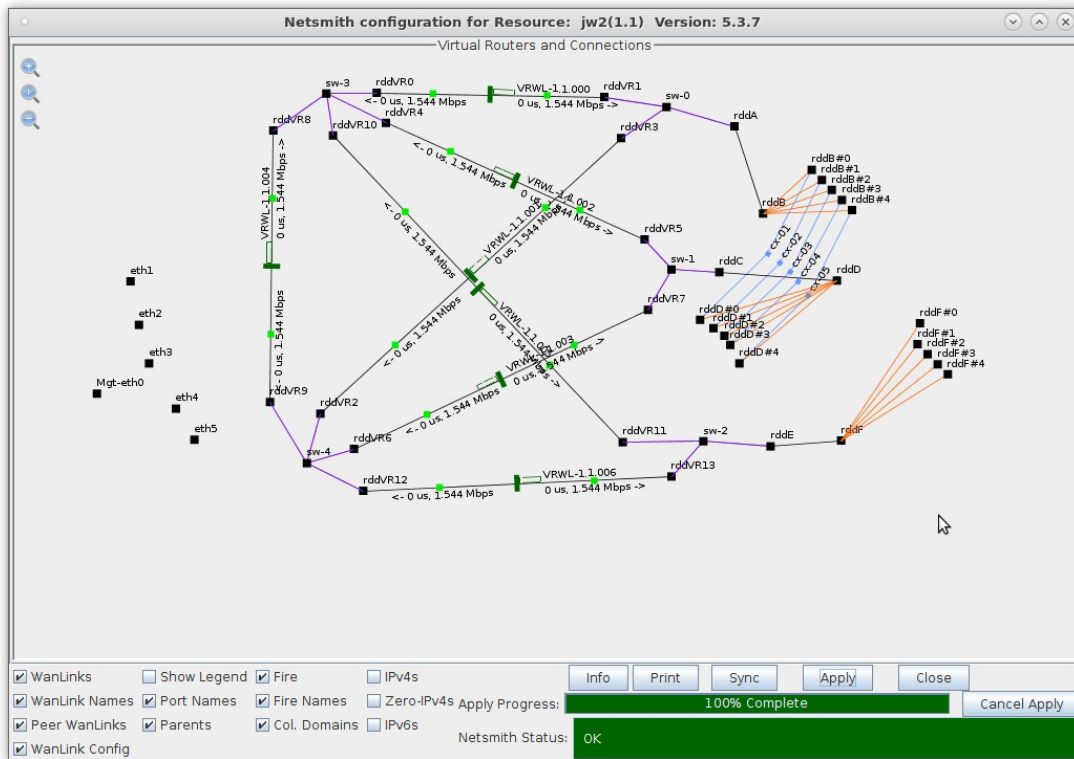

C. Create 5 connections between the rddD and rddF ports

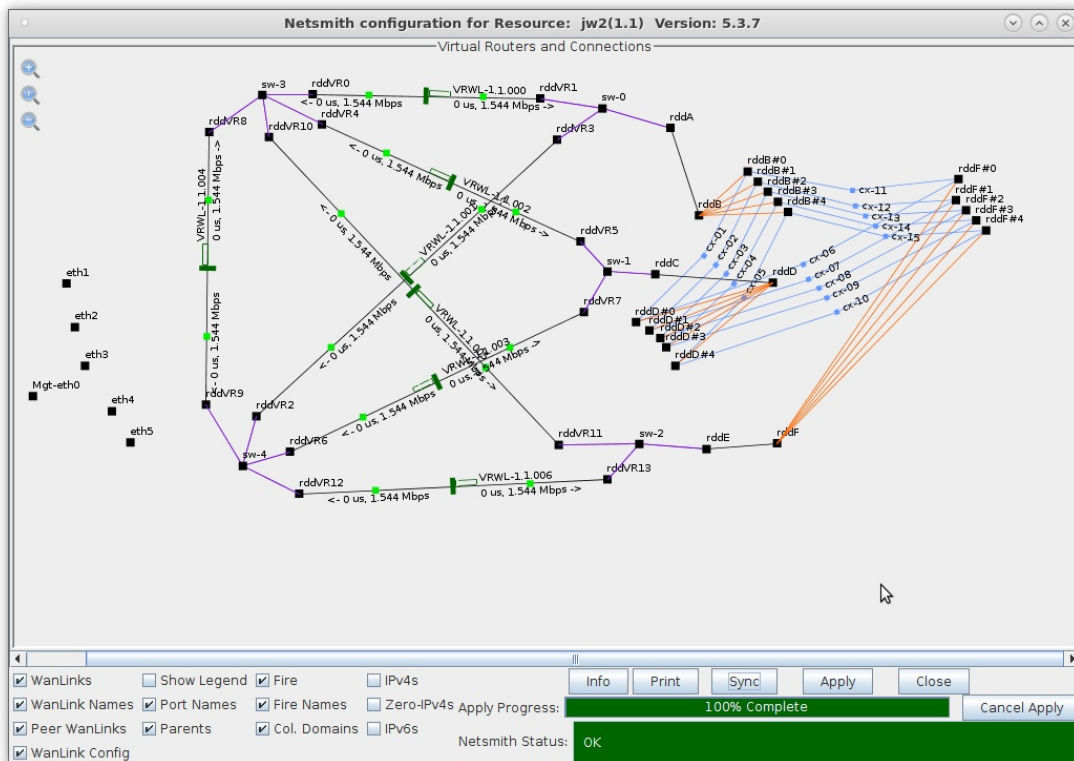

A. Repeat this step for the rddF and rddB ports for a total of 15 connections

7. Test Fail-Over condition.


The screenshot shows the LANforge Manager Version 5.3.7 interface. The 'Layer-3' tab is selected. The 'Test Manager' dropdown is set to 'all'. The 'Rpt Timer' is set to 'fast (1 s)'. The 'View' is set to '0 - 500'. The table below shows 15 cross connects, all in a 'Run' state, with various packet and bit rates and zero drop rates.

Cross Connects for Selected Test Manager										
Name	Type	State	Pkt Rx A	Pkt Rx B	Bps Rx A	Bps Rx B	Rx Drop % A	Rx Drop % B	Drop Pkts A	Drop Pkt:
cx-01	LF/UDP	Run	330	330	127,755	127,755	0	0	0	0
cx-02	LF/UDP	Run	331	323	127,731	127,600	0	0	0	0
cx-03	LF/UDP	Run	323	325	127,592	127,522	0	0	0	0
cx-04	LF/UDP	Run	327	328	127,885	127,847	0	0	0	0
cx-05	LF/UDP	Run	328	328	127,851	127,851	0	0	0	0
cx-06	LF/UDP	Run	328	328	127,855	127,851	0	0	0	0
cx-07	LF/UDP	Run	329	329	127,645	127,645	0	0	0	0
cx-08	LF/UDP	Run	329	329	127,645	127,641	0	0	0	0
cx-09	LF/UDP	Run	329	330	127,645	127,785	0	0	0	0
cx-10	LF/UDP	Run	330	330	127,789	127,789	0	0	0	0
cx-11	LF/UDP	Run	330	330	127,789	127,789	0	0	0	0
cx-12	LF/UDP	Run	330	330	127,793	127,793	0	0	0	0
cx-13	LF/UDP	Run	330	330	127,797	127,793	0	0	0	0
cx-14	LF/UDP	Run	330	330	127,793	127,793	0	0	0	0
cx-15	LF/UDP	Run	330	330	127,797	127,797	0	0	0	0

Logged in to: 192.168.100.103:4002 as: Admin


A. On the **Layer-3** tab, select all 15 connections and click **Start**

8. In Netsmith, verify traffic is flowing through sw-3 or sw-4 via 3 separate WanLinks

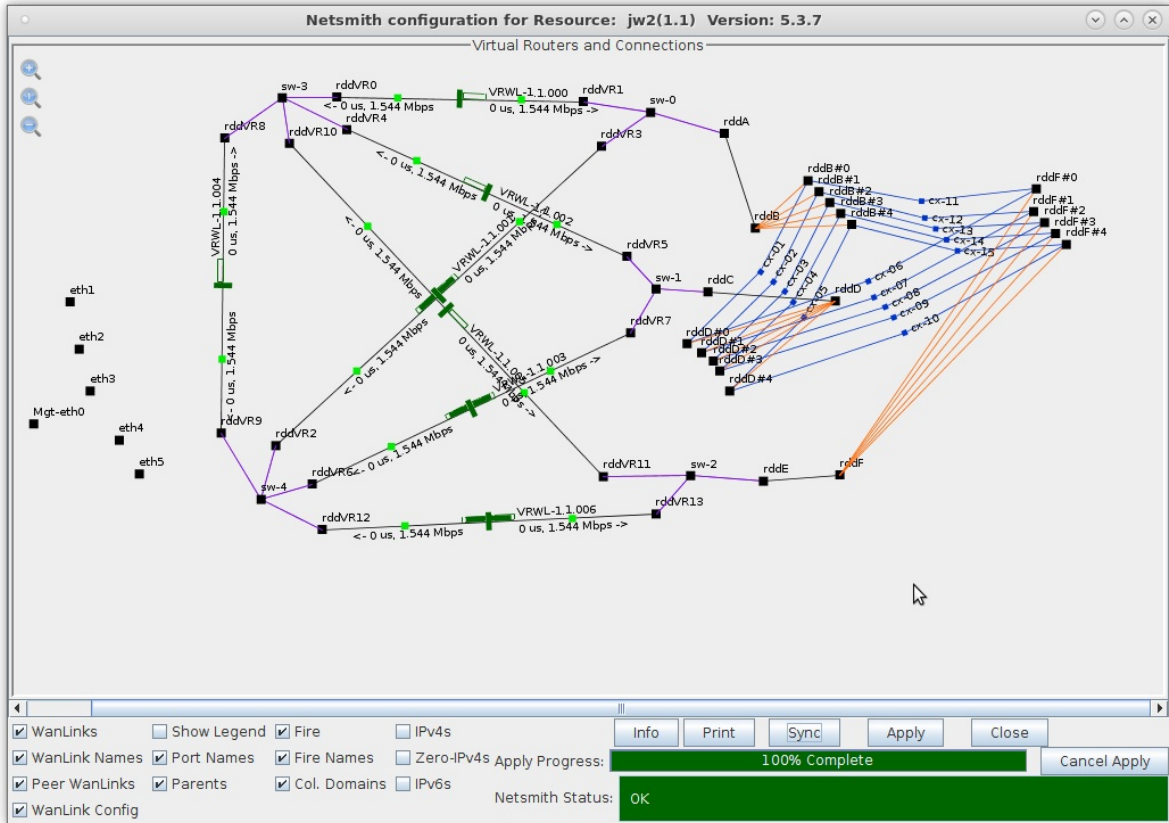


A. In this case, VRWL1.1.001, VRWL-1.1.003 and VRWL-1.1.006 all show traffic flowing


9. Right-click WanLink VRWL-1.1.001 and select **Toggle WanLink**

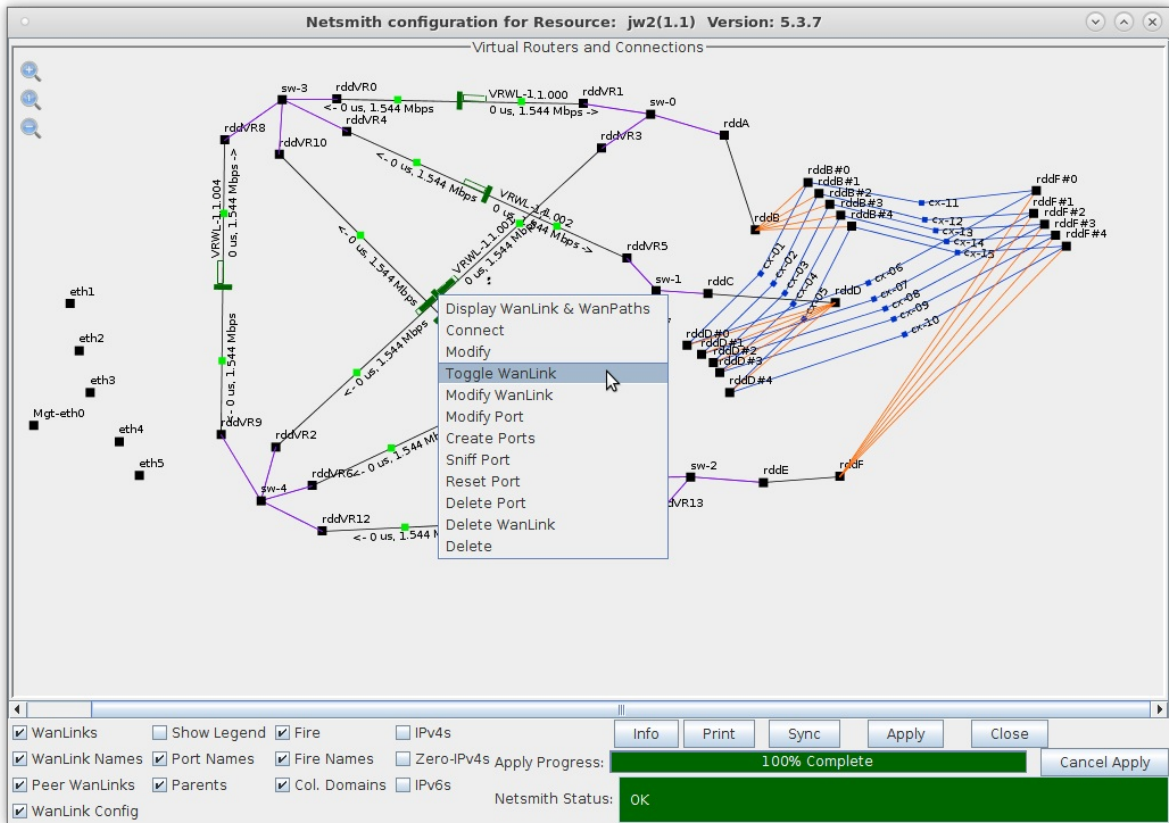


10. After approximately 1 minute, the traffic will find an alternate path

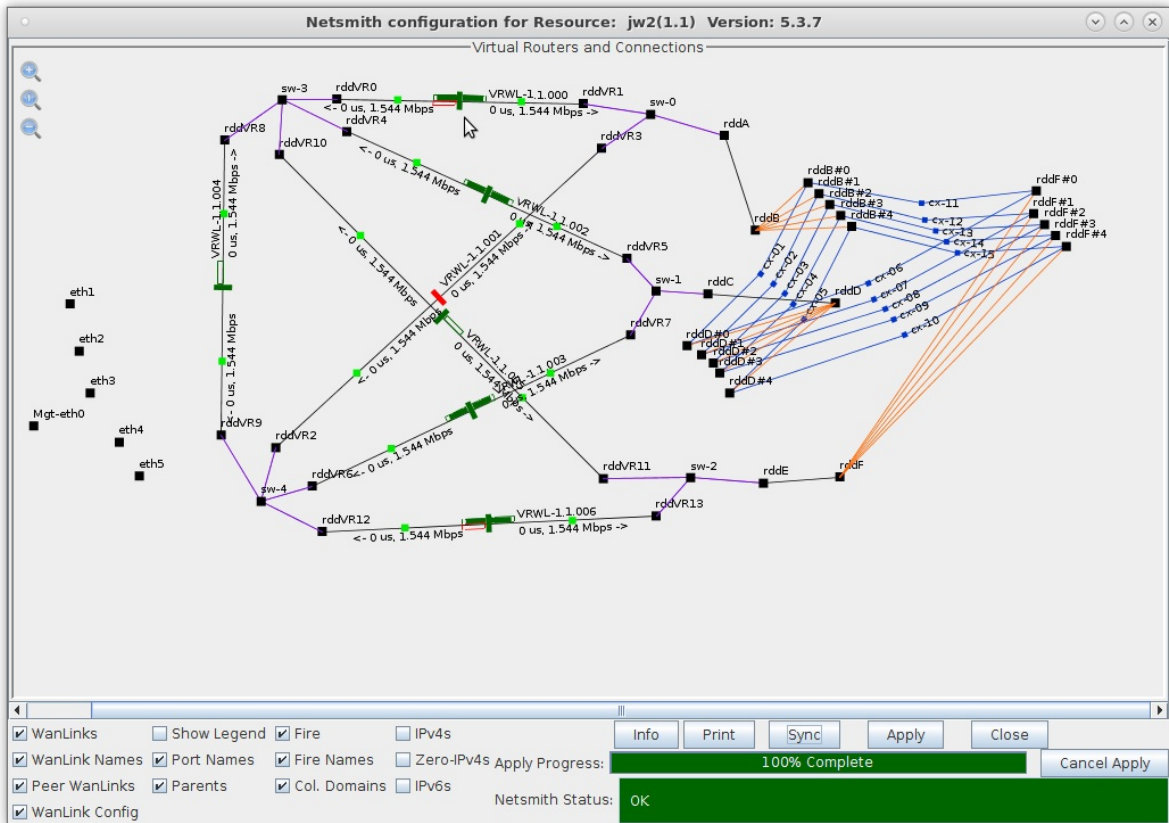


11. Right-click WanLink VRWL-1.1.001 and select **Toggle WanLink**

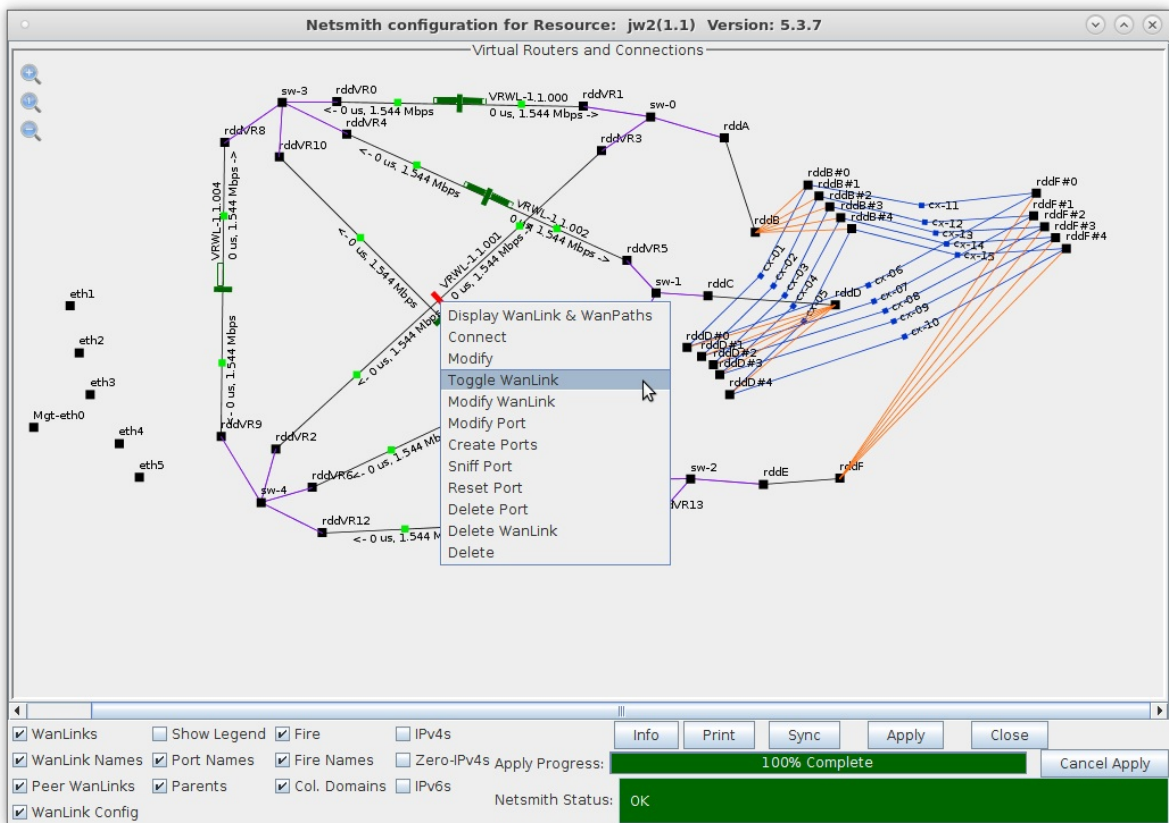

12. After approximately 1 minute, traffic resumes on its original path

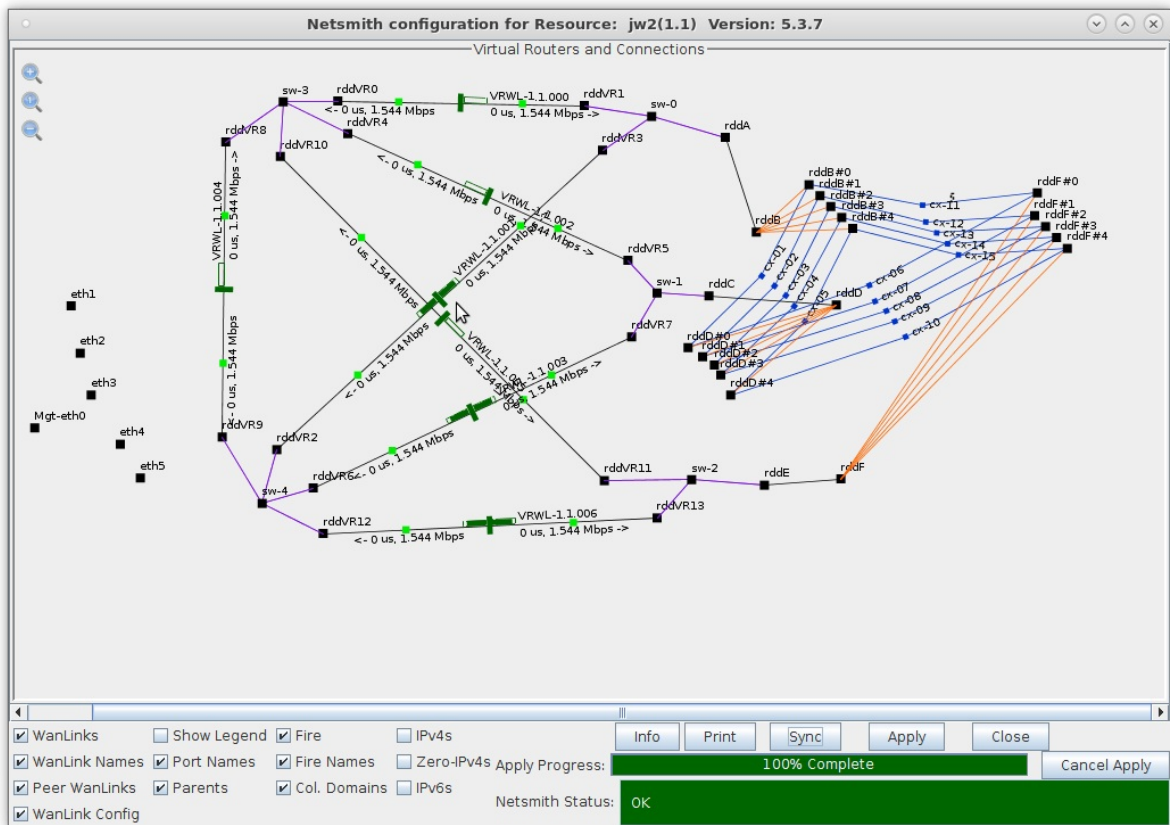

13. Traffic flow after simulating multiple path failures

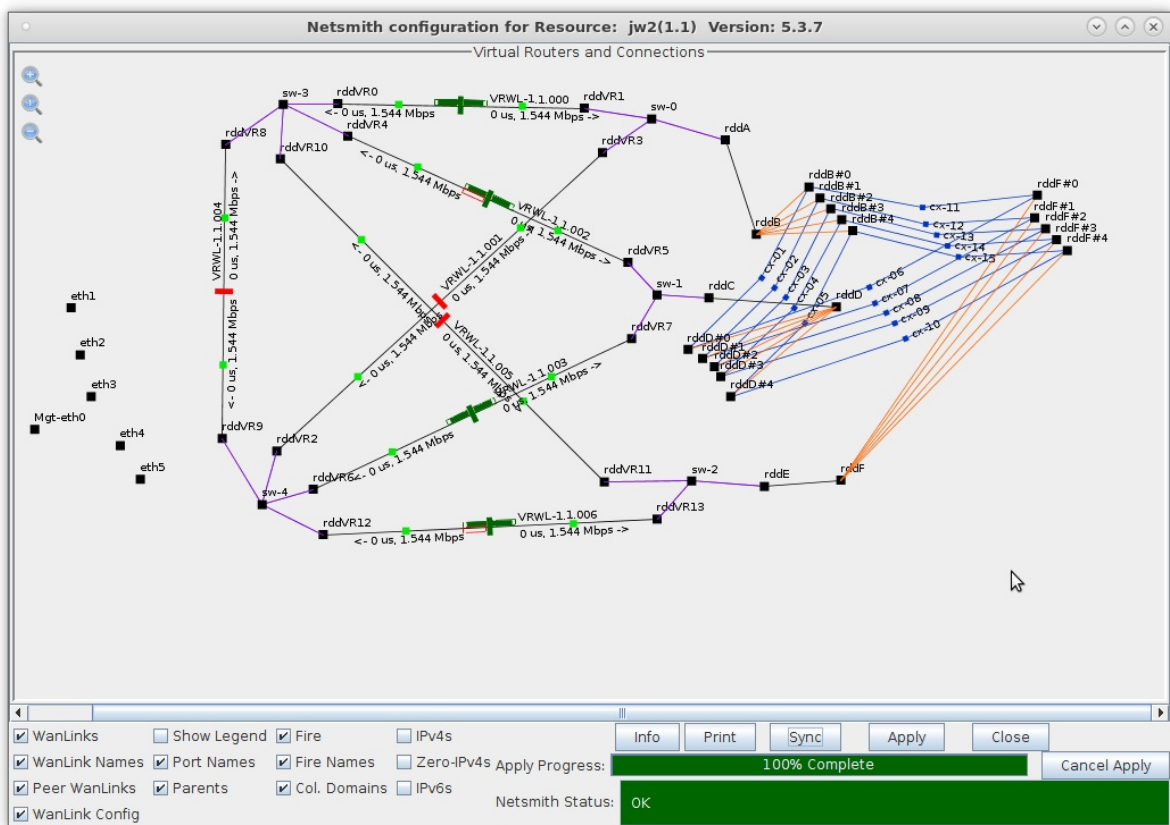

A. A sample LANforge HTML report of this fail-over test can be found here:


B. [Fail-Over Test Sample HTML Report](#)

Emulating a Multiple Hop Network


Goal: Use virtual routers to emulate a multi-hop network.

In this example, LANforge is used to emulate a live routed network by using multiple virtual routers to form a working multi-hop network. Each virtual router has its own routing table and can be configured to use one of many different routing protocols. OSPF will be used in this example and traceroute will be used to demonstrate the traversal of each hop.


1. Use NetSmith to create five OSPF virtual routers.
 - A. From the Status tab, select the NetSmith button.

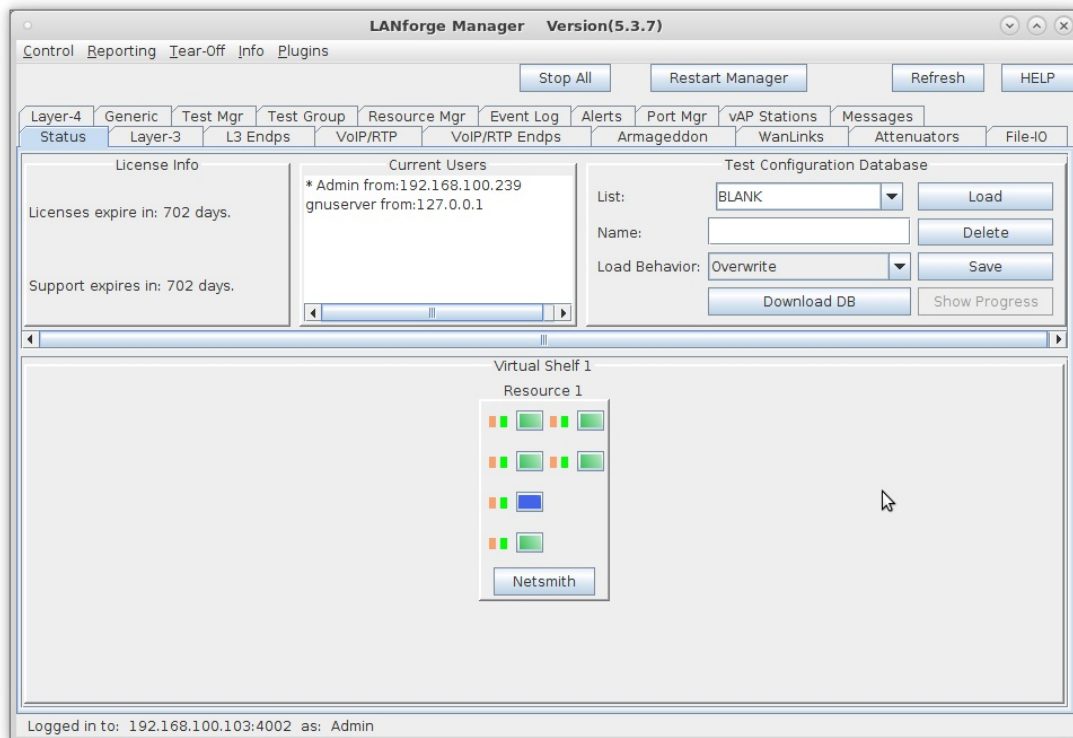


B. Right-click in the Netsmith window and select New Router.

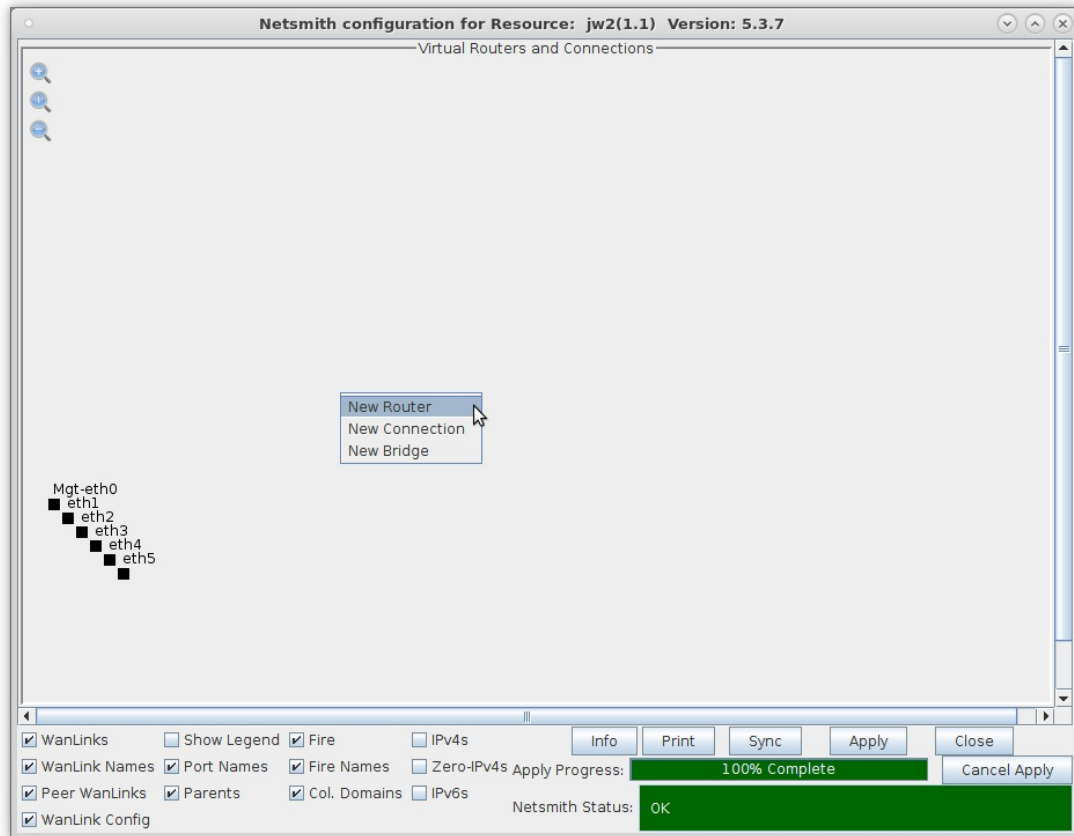


C. Select the Use OSPF checkbox.

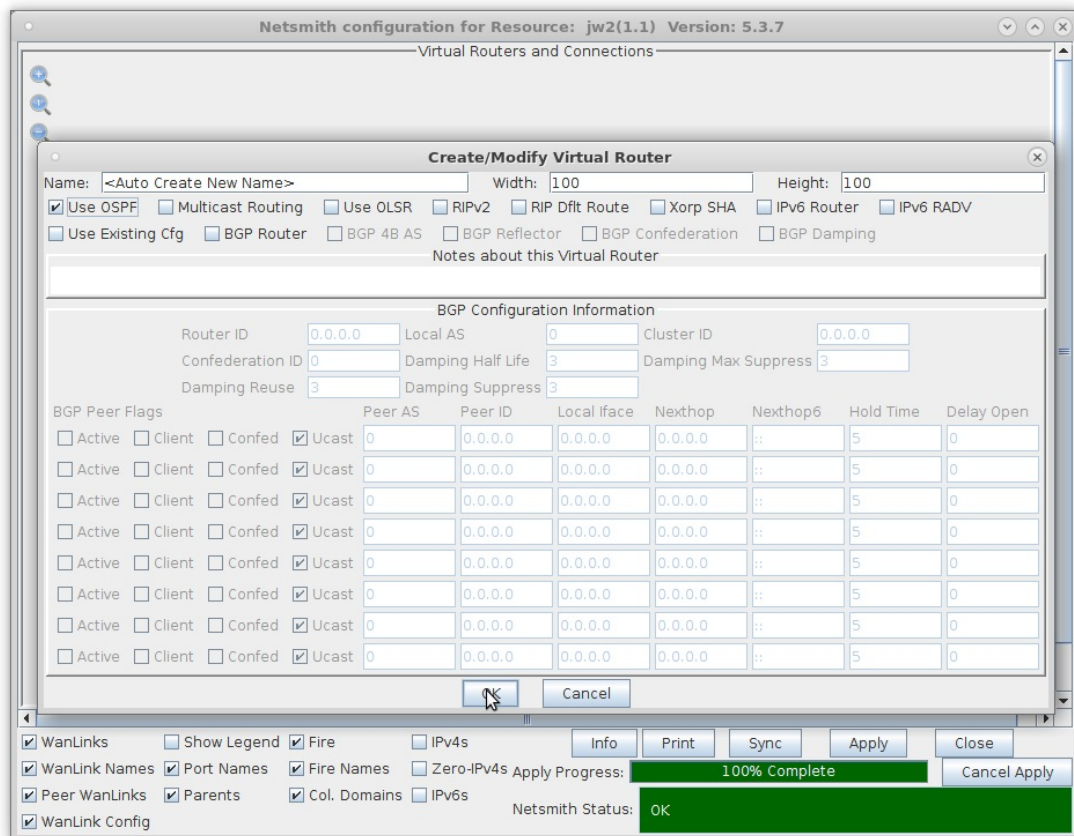

D. Select OK, then create four more OSPF virtual routers.

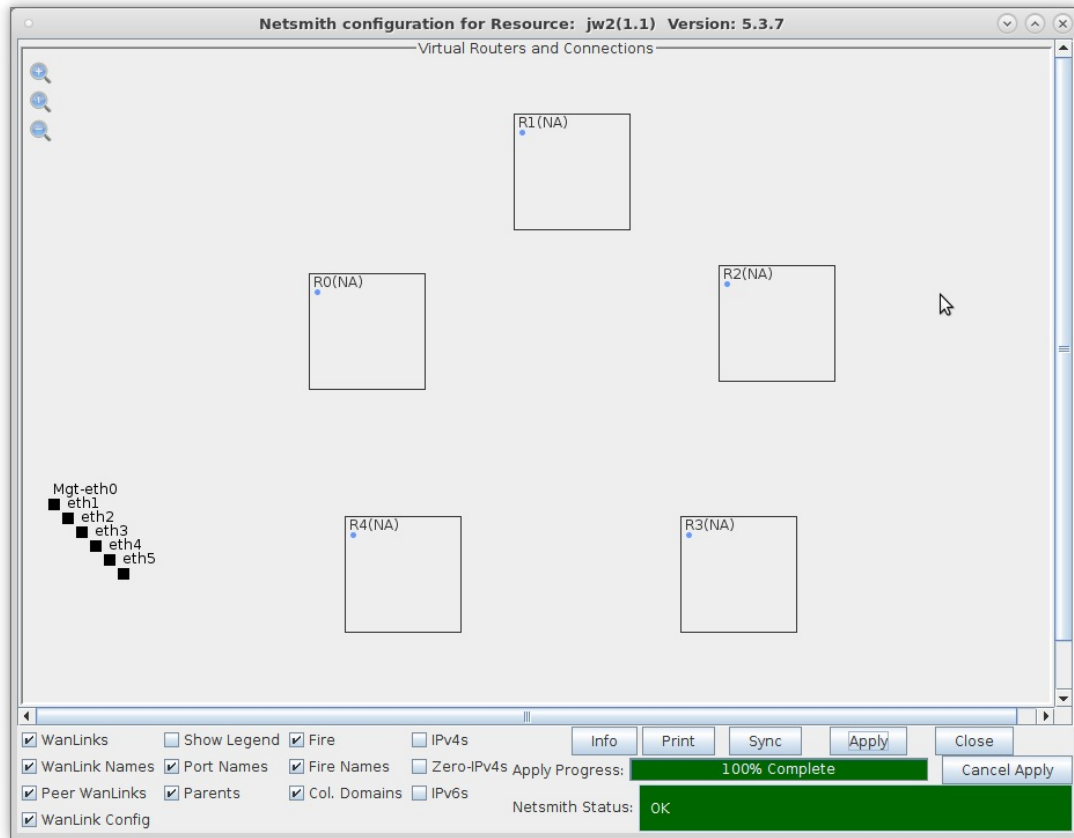


E. After creating five OSPF virtual routers, select Apply.

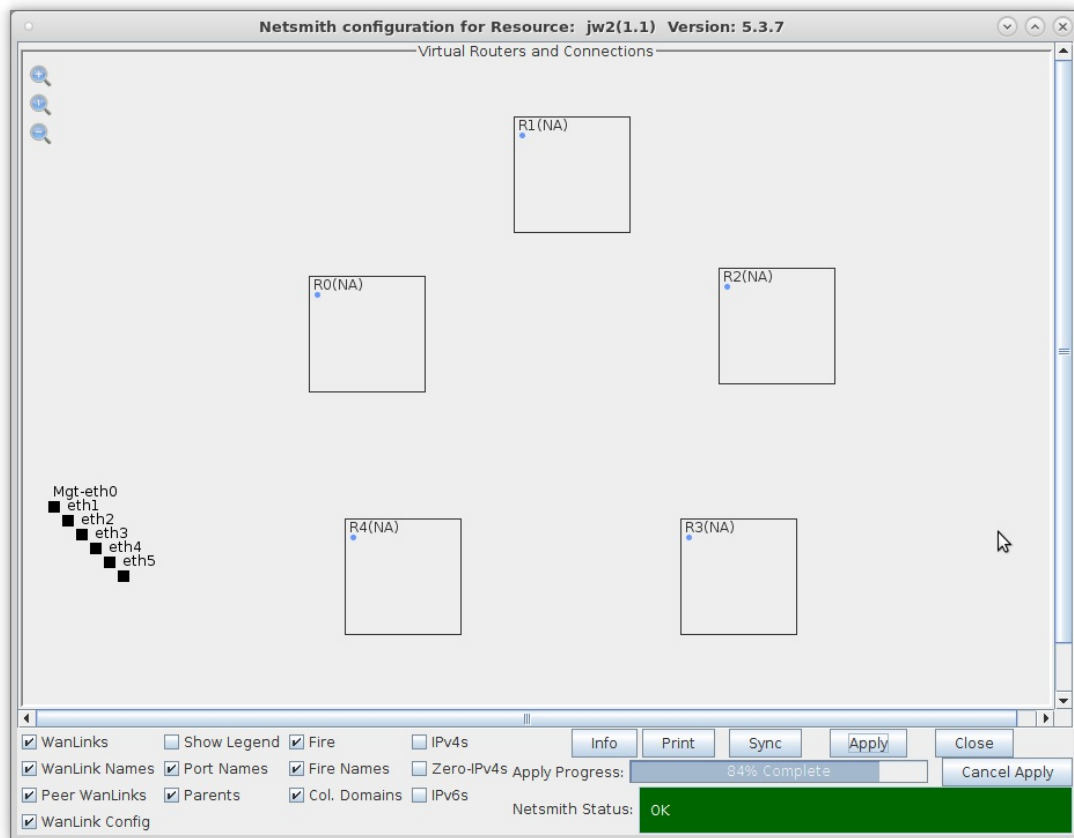


For more information see [LANforge-GUI User Guide: Netsmith](#)


2. Create four Netsmith connections to link all of the OSPF virtual routers.
 - A. Right-click in the Netsmith window and select New Connection.

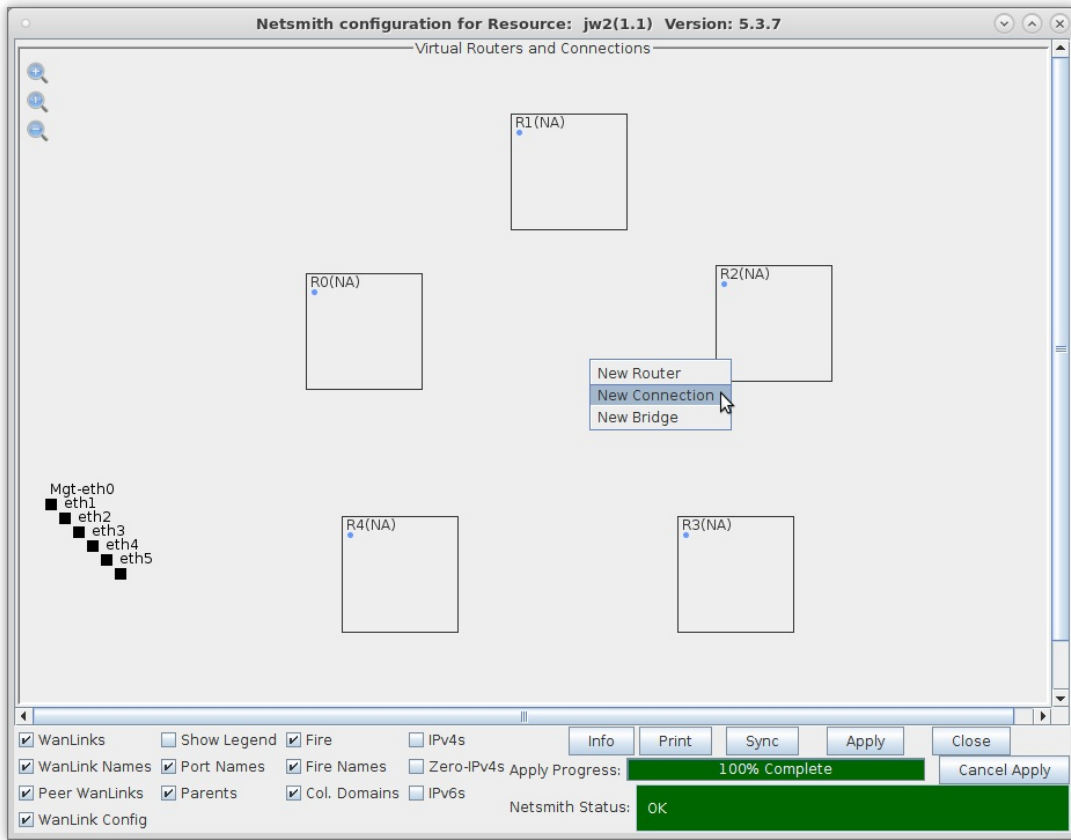


- B. Leave all the default settings and select OK.

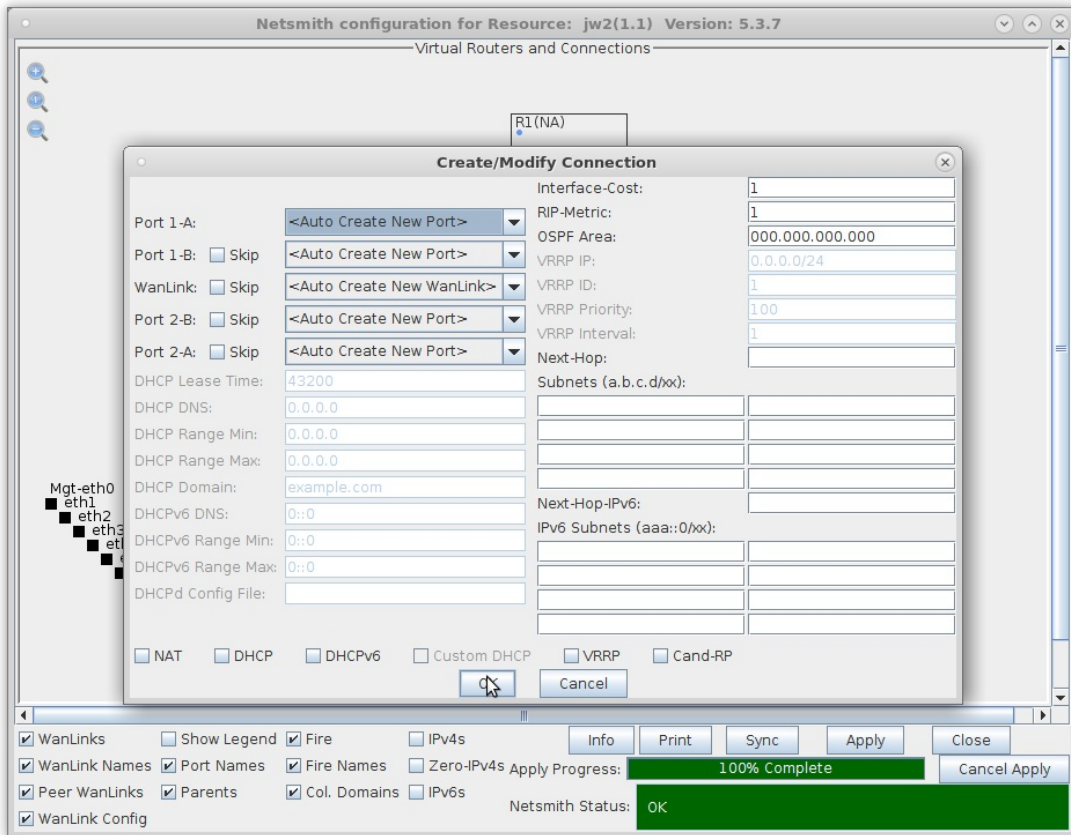

C. Create three more Netsmith connections.

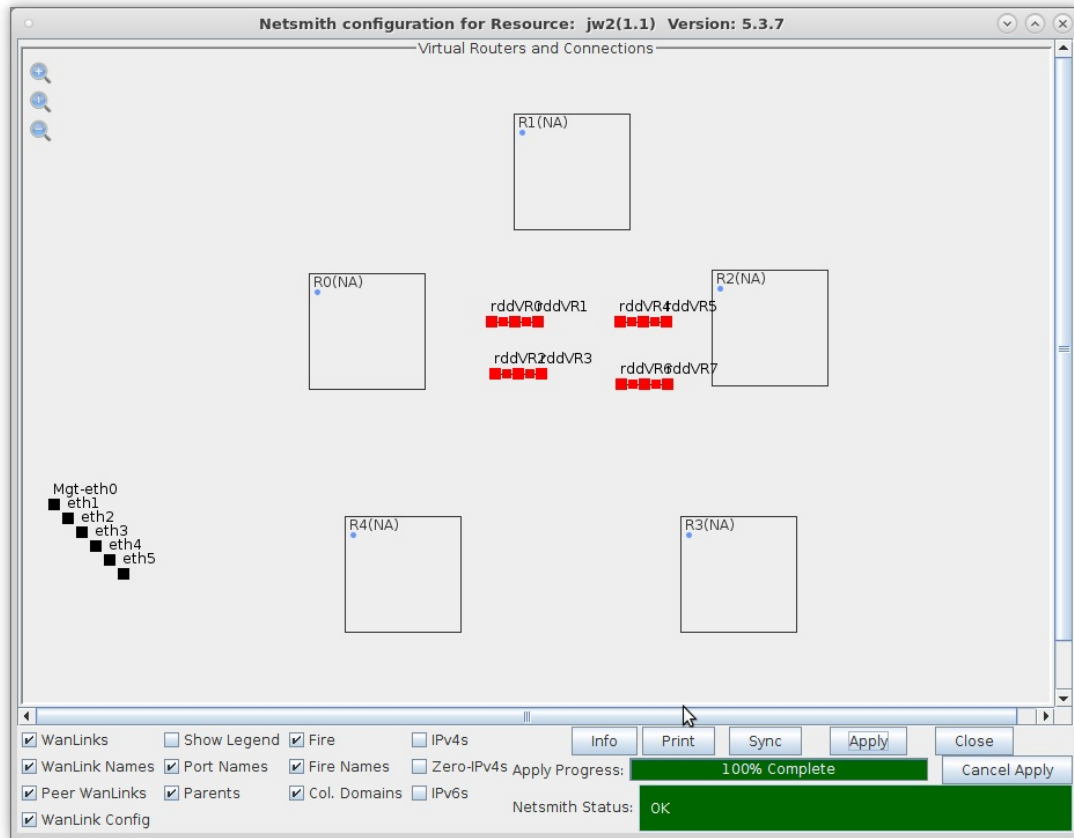


D. After creating four Netsmith connections, select Apply.

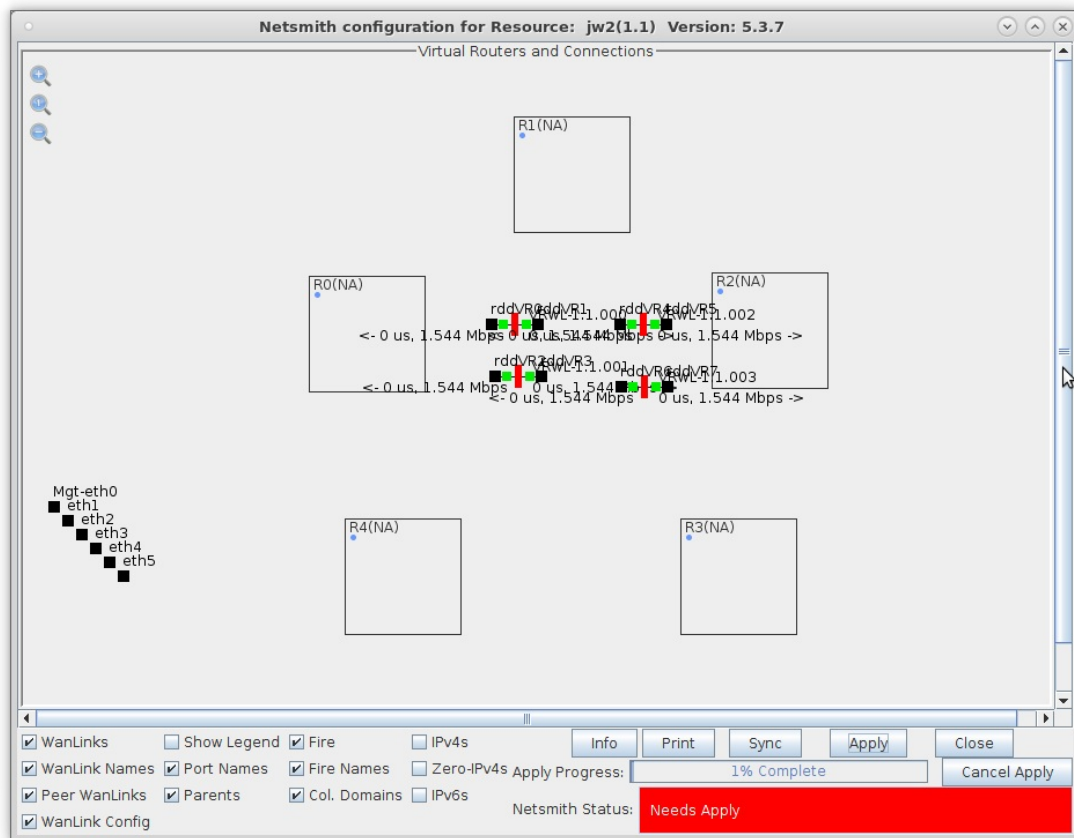


3. Assign IP addresses to either end of each of the four Netsmith connections.


A. Right-click on rddVR0 and select Modify Port.

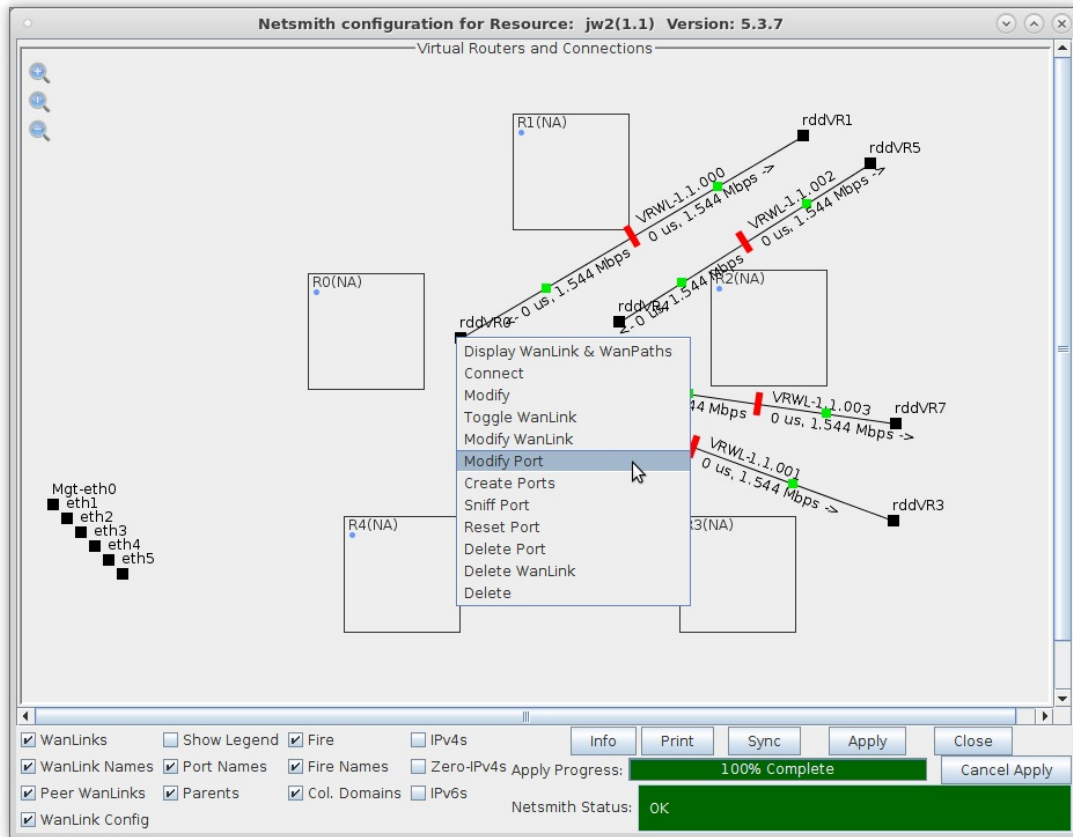


B. Set rddVR0 to 10.0.0.1/30 and select OK.

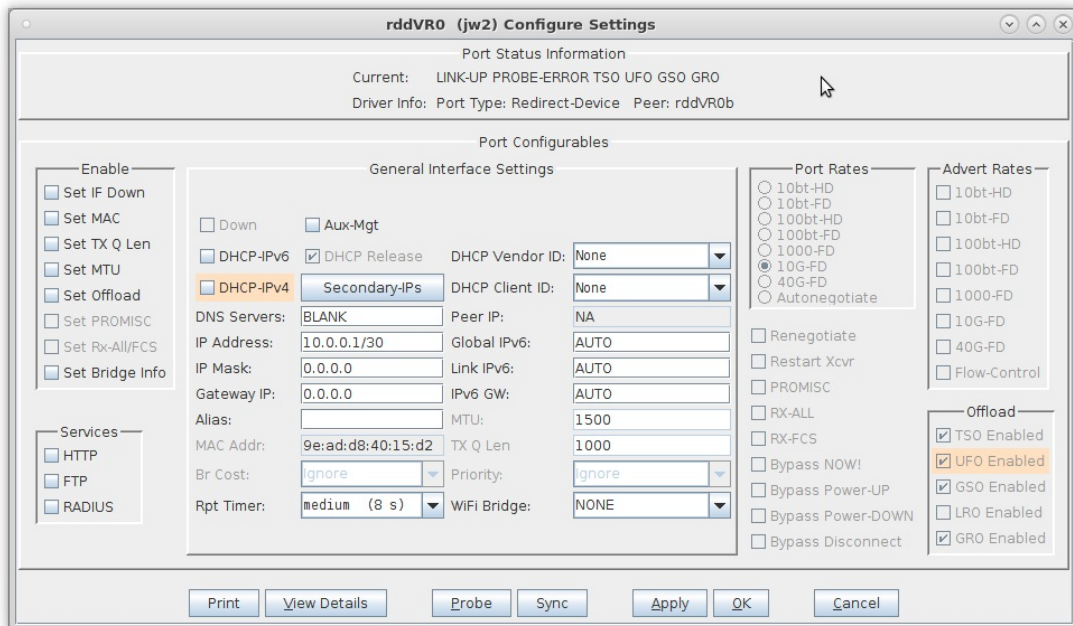


C. Right-click on rddvR1 and select Modify Port.

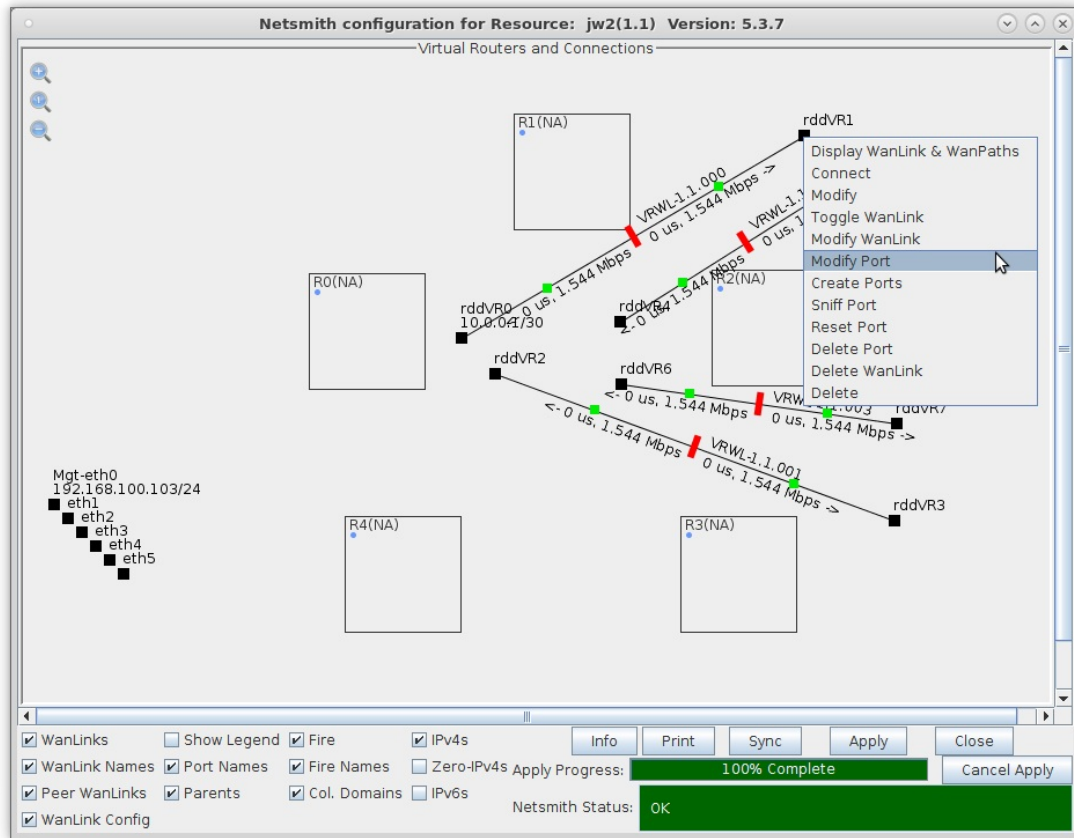

D. Set rddvR1 to 10.0.0.2/30 and select OK.

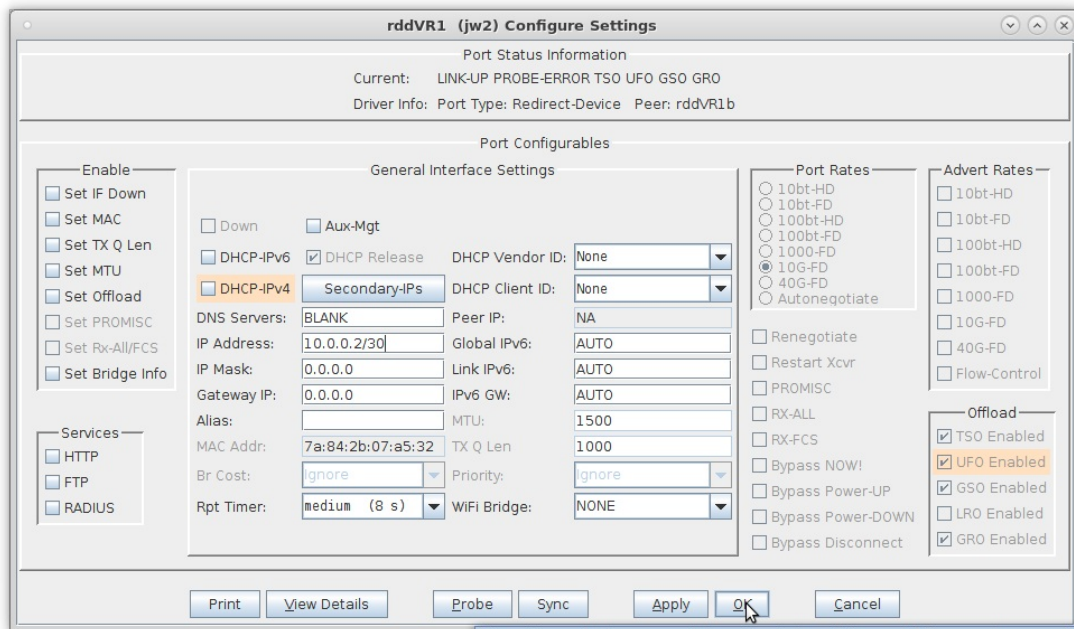


E. Repeat the steps above to complete the following:

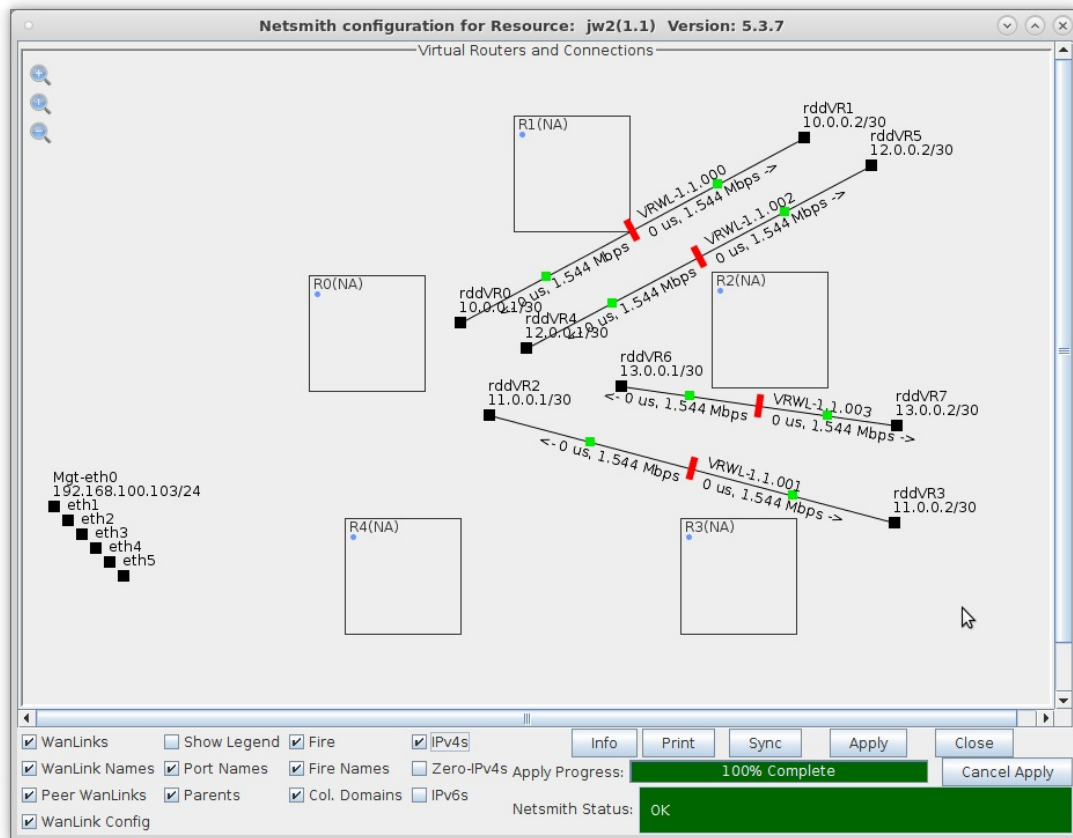

- A. rddVR2 is 11.0.0.1/30 and rddVR3 is 11.0.0.2/30
- B. rddVR4 is 12.0.0.1/30 and rddVR5 is 12.0.0.2/30
- C. rddVR6 is 13.0.0.1/30 and rddVR7 is 13.0.0.2/30

4. Drag each end of a Netsmith connection into a virtual router to setup the network.

A. A: Setup the following by dragging the interfaces into the specified virtual routers:

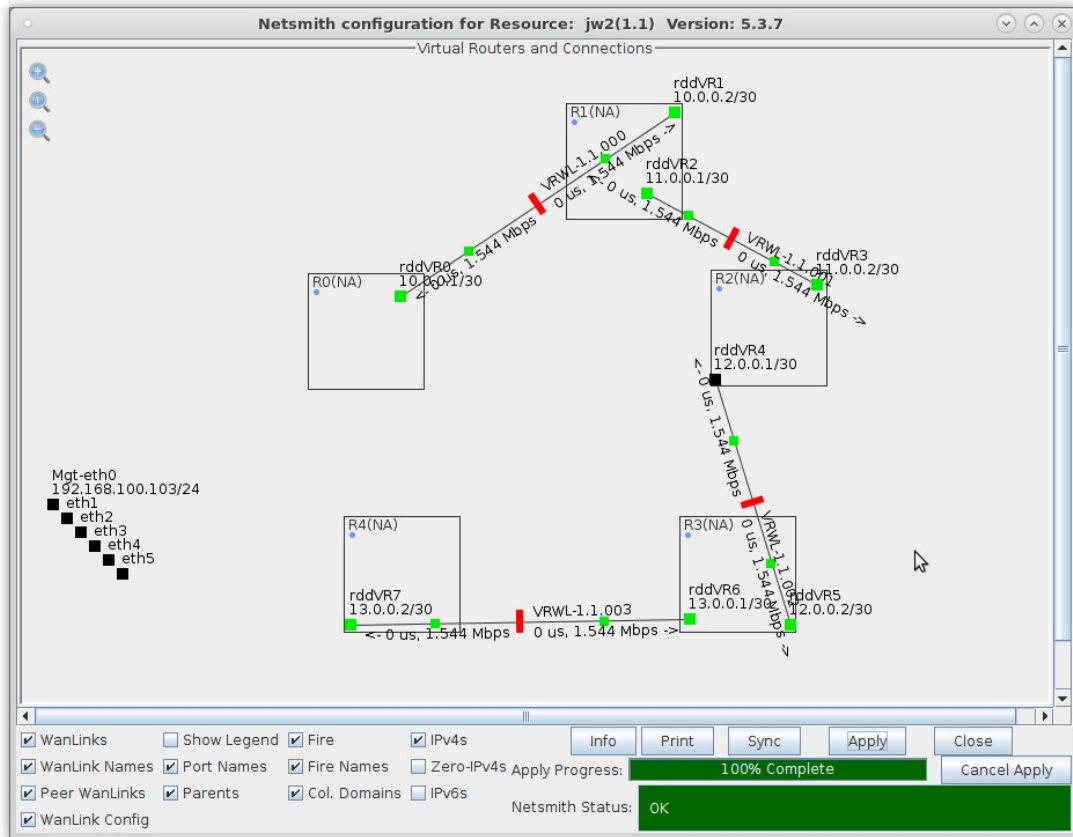


A. rddVR0 in R0 and rddVR1 in R1

B. rddVR2 in R1 and rddVR3 in R2

C. rddVR4 in R2 and rddVR5 in R3


D. rddVR6 in R3 and rddVR7 in R4

B. B: Right-click on each Wanlink (red bar) and select Toggle Wanlink (change to green bar).

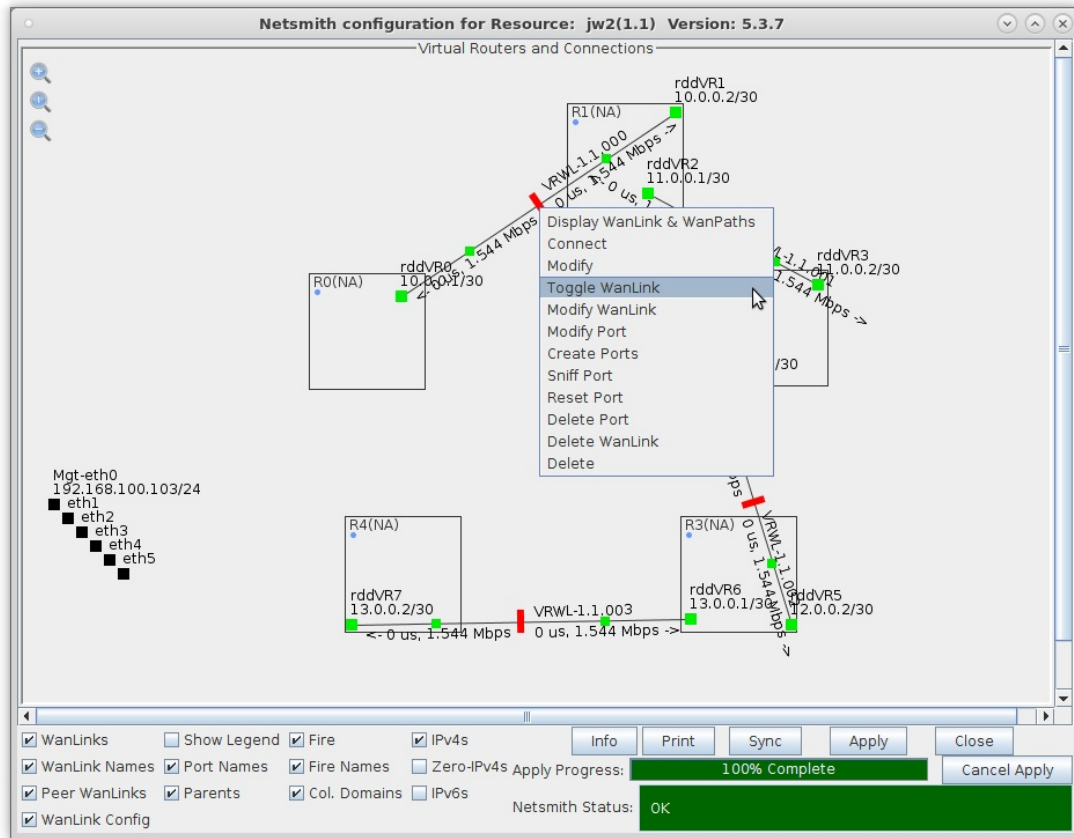


A. **Note:** If you wanted to emulate an /impaired/ multi-hop network, you could modify each Wanlink to have any LANforge impairment such as latency, jitter, dropped packets, etc...

C. After all interfaces are moved and Wanlinks started, select Apply in the Netsmith window.

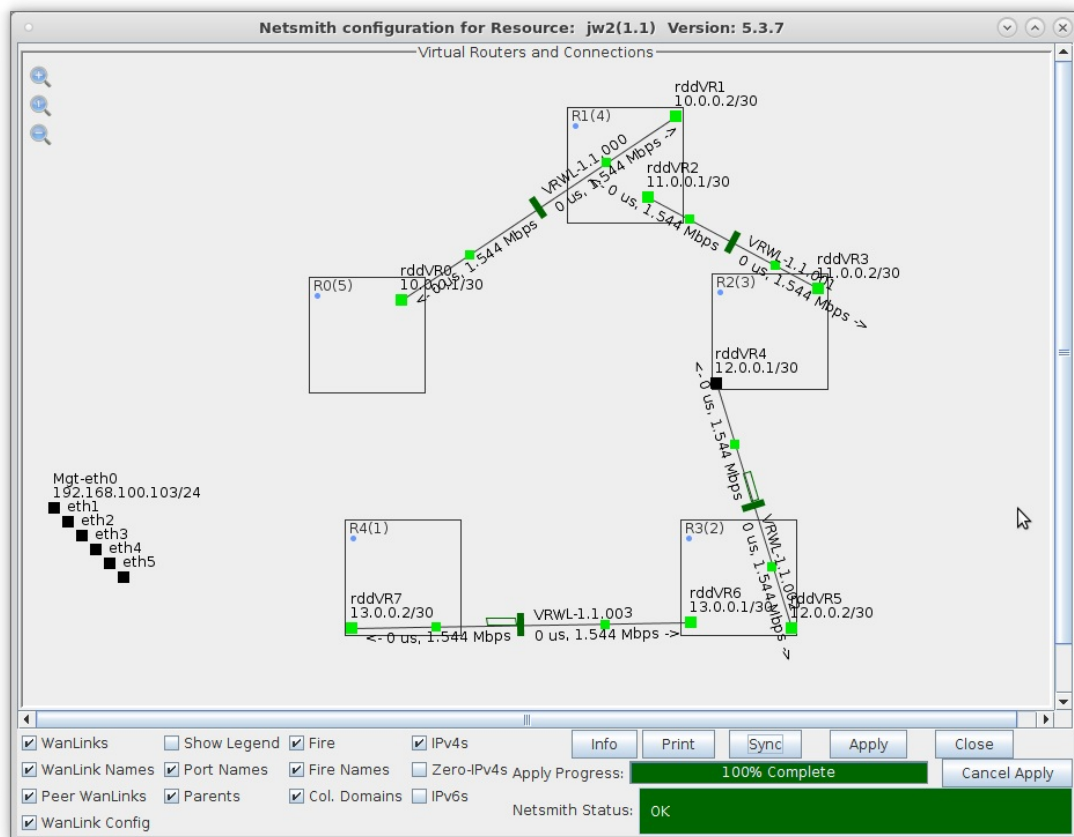


5. Assign IP addresses and Default Gateways to each of four physical interfaces.

A. Right-click on each interface and select Modify Port.

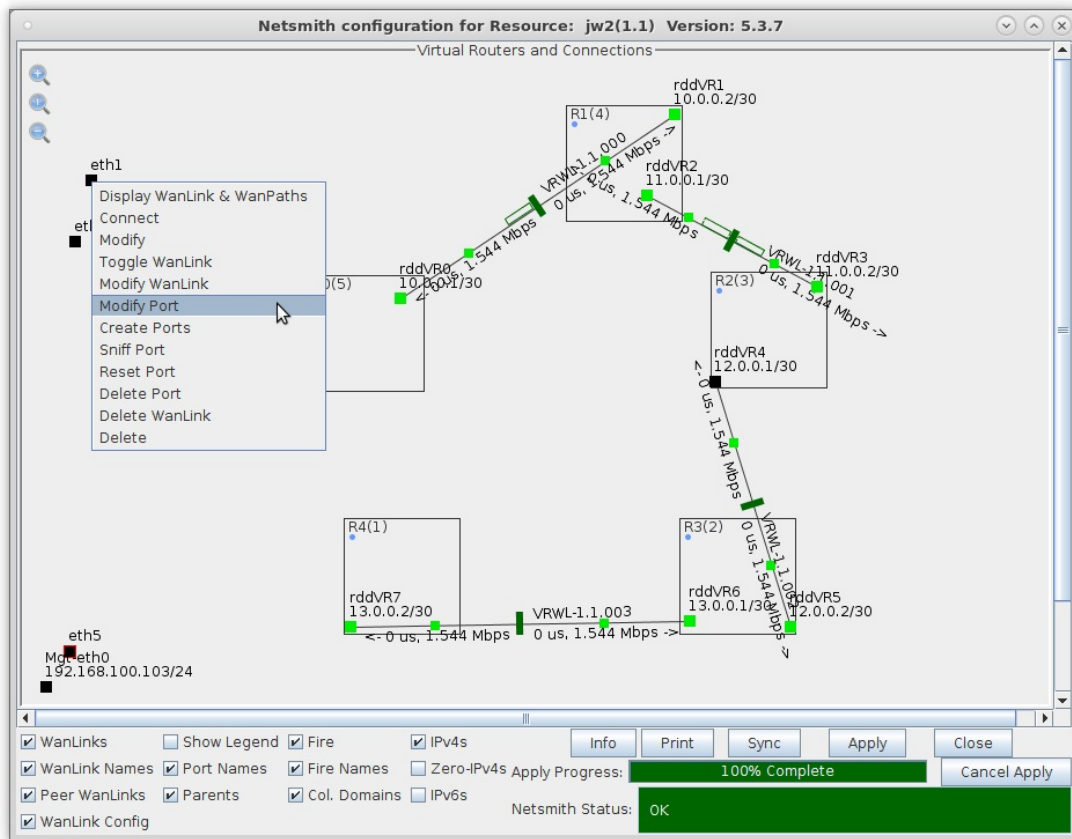


B. Setup the following IP addresses and Default Gateways:

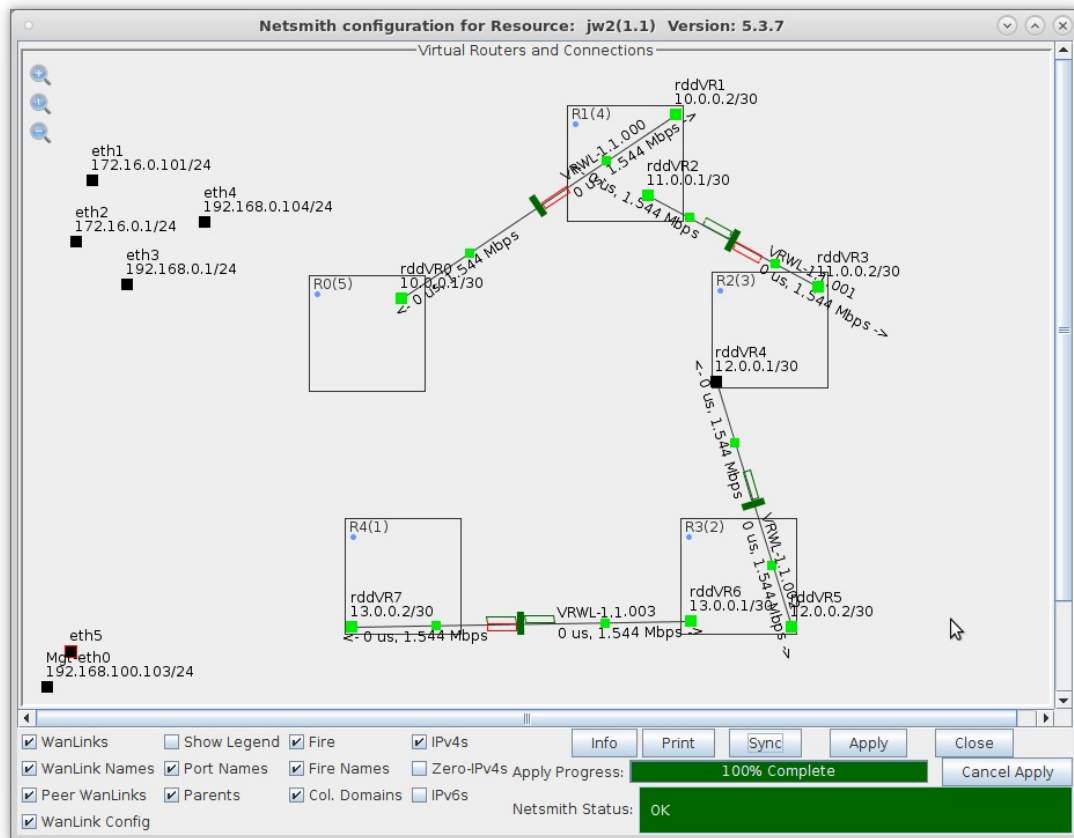


- A. eth1 IP address is 172.16.0.101/24 and Default GW is 172.16.0.1
- B. eth2 IP address is 172.16.0.1/24 and Default GW is 172.16.0.1
- C. eth3 IP address is 192.168.0.1/24 and Default GW is 192.168.0.1
- D. eth4 IP address is 192.168.0.104/24 and Default GW is 192.168.0.1

C. Drag eth2 into R0 and eth3 into R4, then Apply changes.

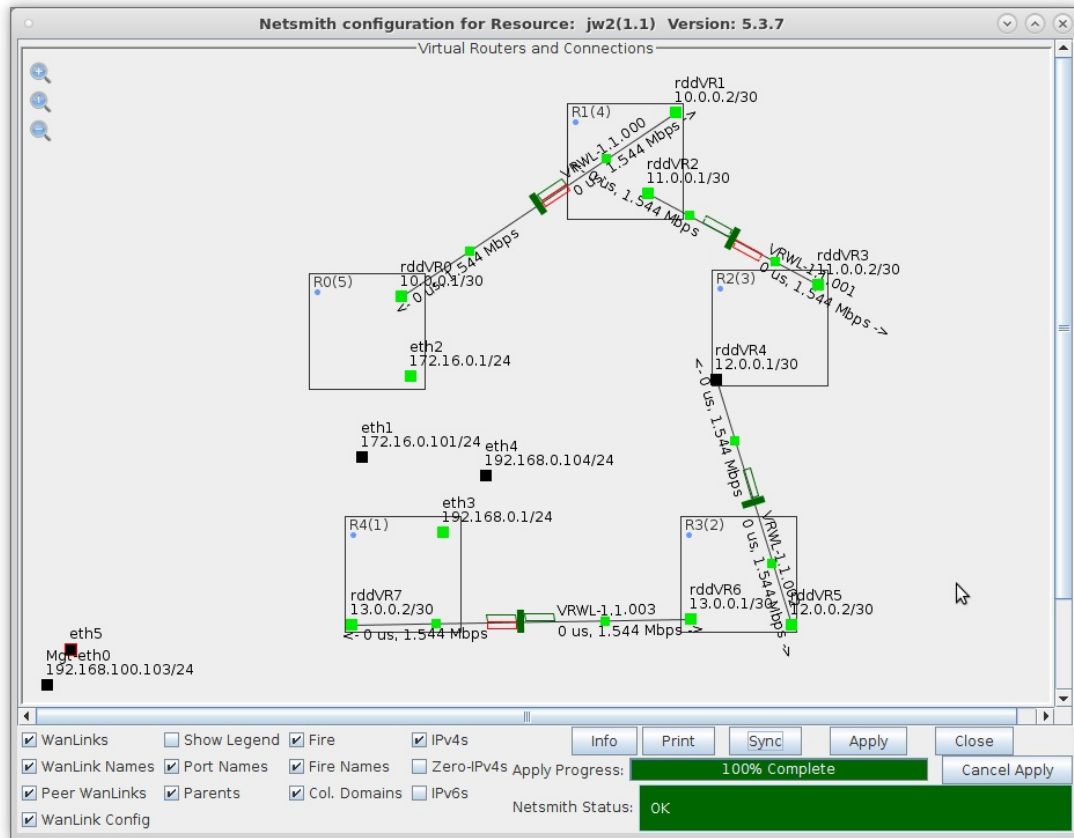


A. **Note:** In this example, four physical interfaces are used. eth1 and eth2 are physically connected with a cable, as are eth3 and eth4. This allows us to use eth1 and eth4 to generate traffic to each other through the network interfaced by eth2 and eth3.

6. Apply all changes in Netsmith, allow OSPF time to converge, and observe routing tables.
- A. After applying all Netsmith changes, right-click on a virtual router and select Show Routing Table. (Before OSPF converges, only the directly connected networks are shown.)

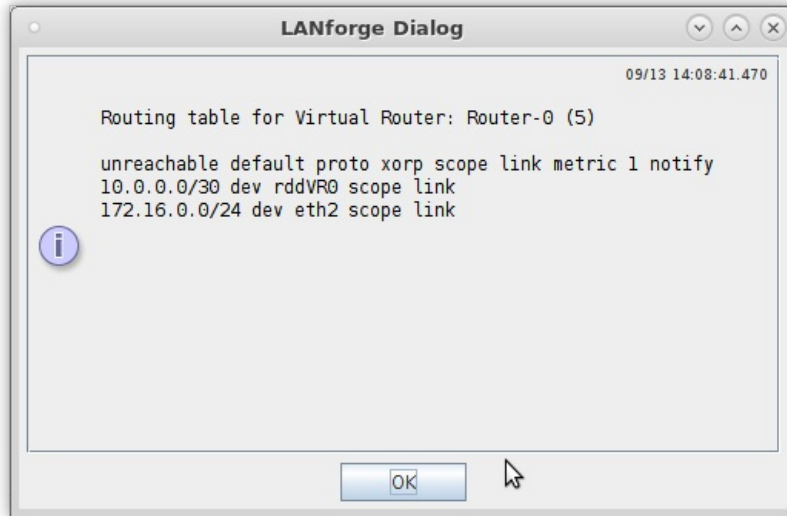


- B. After OSPF converges, each virtual router has a complete routing table for the entire network.

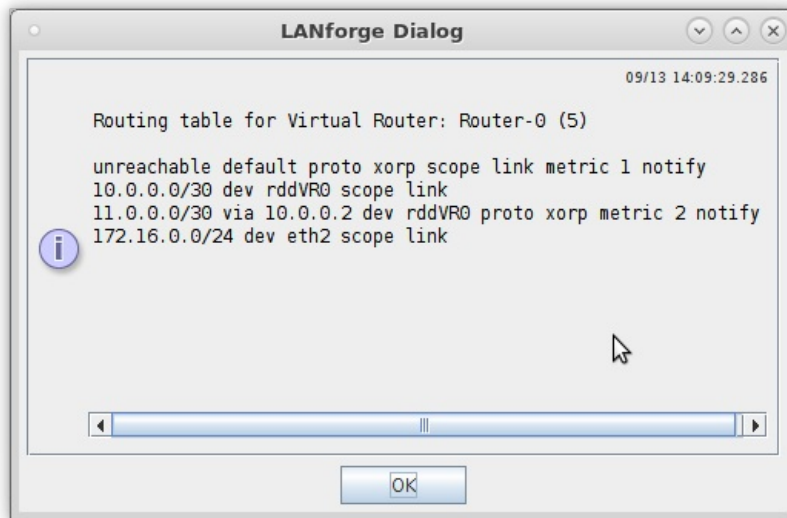

- A. **Note:** If you select Netsmith Apply again, this will restart all virtual routers and OSPF will need time to converge again.

7. Alternative method to observe routing tables of each virtual router.

- A. With OSPF virtual routers, you can right-click on a virtual router and select Virtual Router Console to bring up the underlying xorp shell for the virtual router.

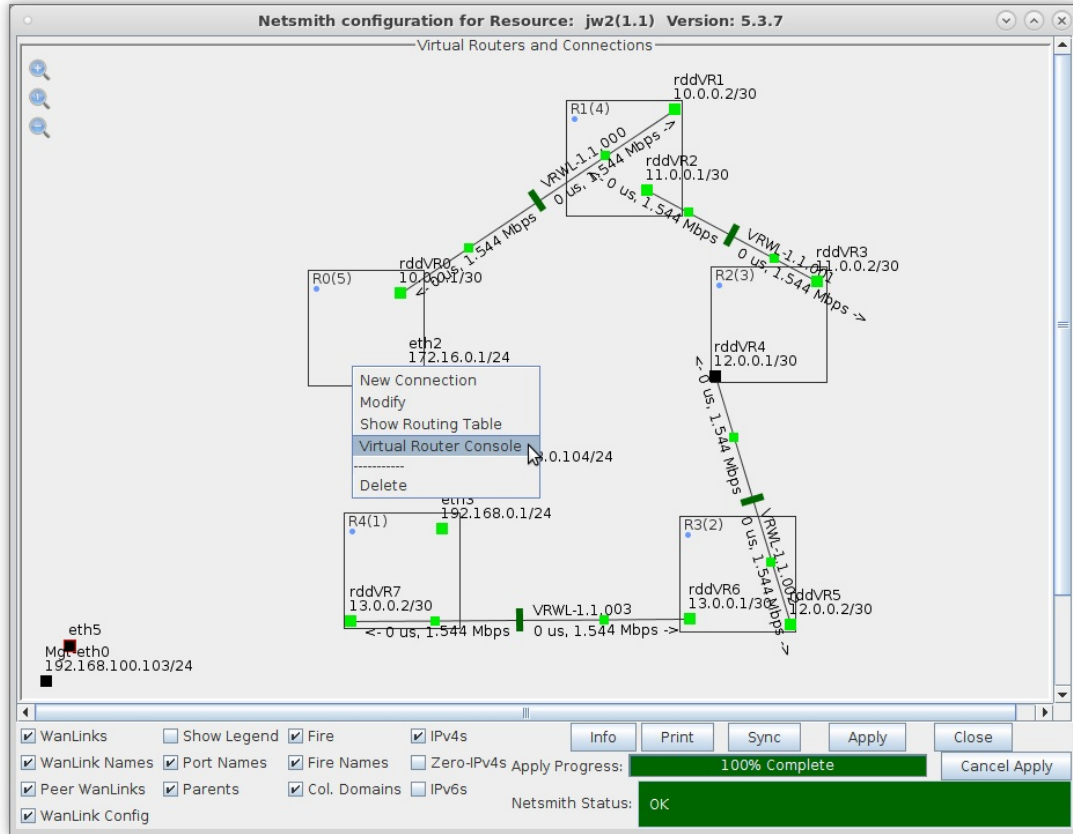


- B. Once at the xorp shell prompt, type the following to display the routing table information:

```
xorpsh for VR: 5 (on fwa710-blue)
Welcome to XORP on fwa710-blue
root@fwa710-blue> show route table ipv4 unicast final
0.0.0.0/0 [static(220)/1]
> to 0.0.0.0 via my_discard/my_discard
172.16.0.0/24 [connected(0)/0]
> via eth2/eth2
192.168.0.0/24 [ospf(110)/5]
> to 10.0.0.2 via rddVR0/rddVR0
10.0.0.0/30 [connected(0)/0]
> via rddVR0/rddVR0
11.0.0.0/30 [ospf(110)/2]
> to 10.0.0.2 via rddVR0/rddVR0
12.0.0.0/30 [ospf(110)/3]
> to 10.0.0.2 via rddVR0/rddVR0
13.0.0.0/30 [ospf(110)/4]
> to 10.0.0.2 via rddVR0/rddVR0
root@fwa710-blue>
```


- A. `show route table ipv4 unicast final`

8. Use traceroute to traverse all five hops.

A. Open a terminal window in the LANforge system.

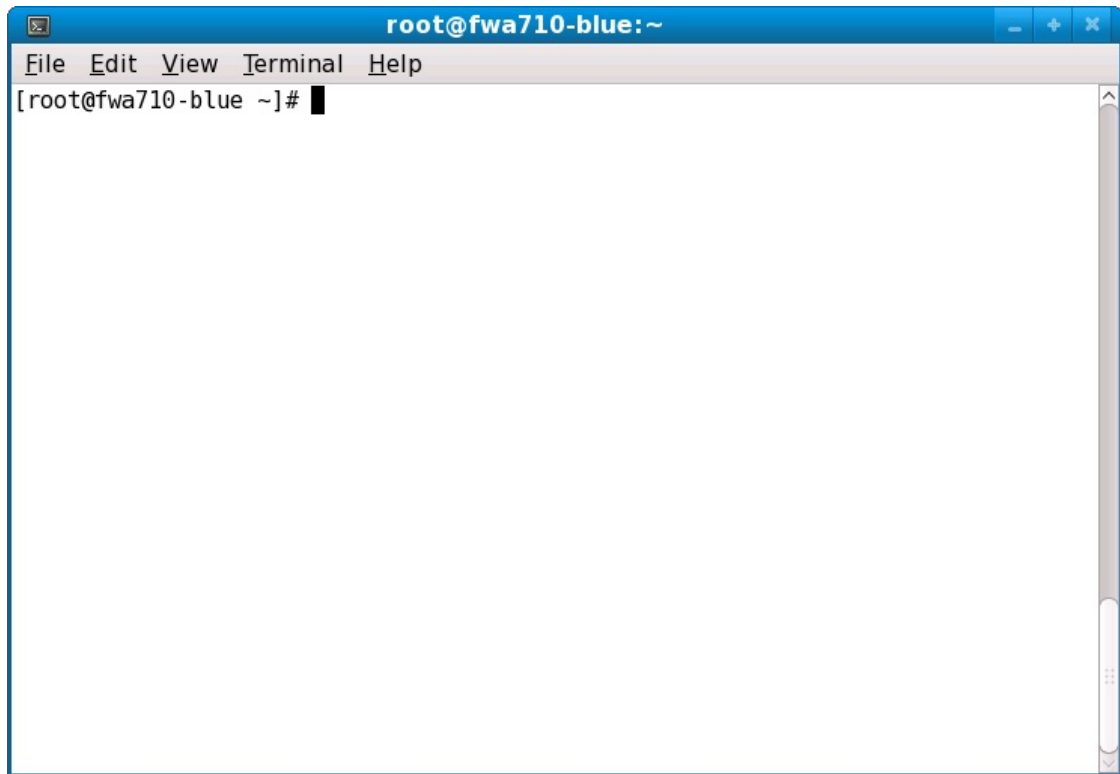

B. Type the following command at the prompt:

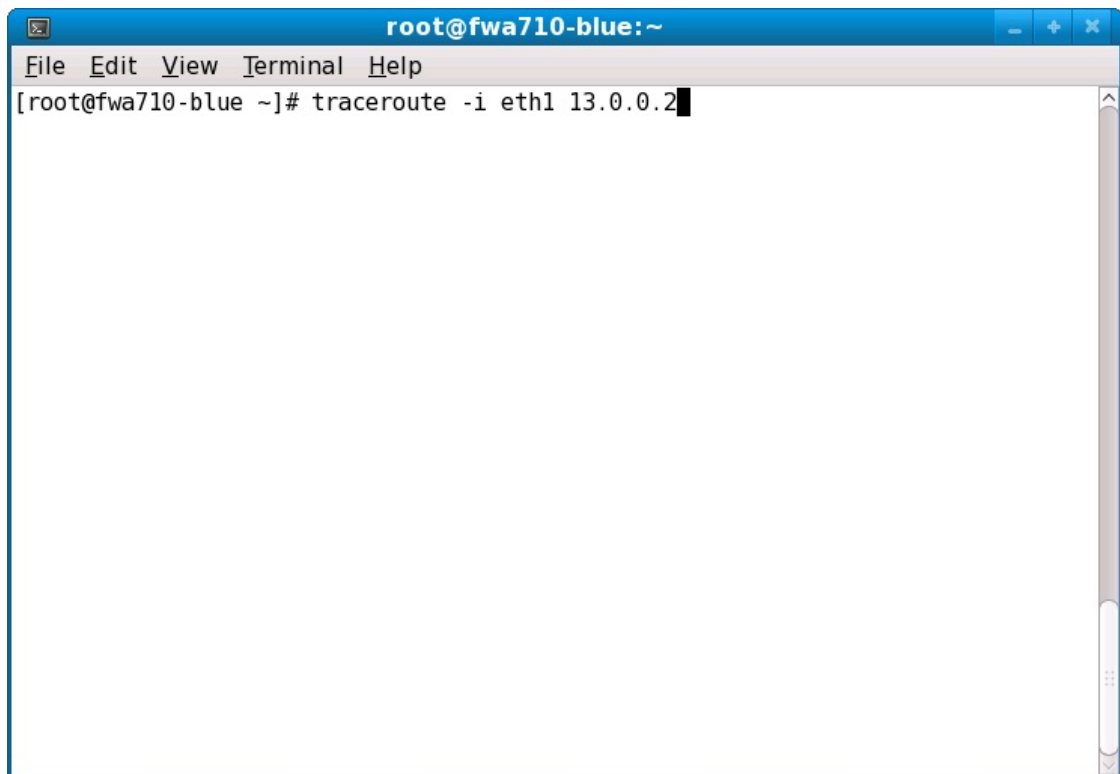

A. `traceroute -i eth1 13.0.0.2`

B. **Note:** `-i eth1` forces the traceroute program to use eth1 as its outgoing interface.

C. Observe the results of each hop in the network.

```
root@fwa710-blue:~  
File Edit View Terminal Help  
[root@fwa710-blue ~]# traceroute -i eth1 13.0.0.2  
traceroute to 13.0.0.2 (13.0.0.2), 30 hops max, 60 byte packets  
 1 172.16.0.1 (172.16.0.1) 0.129 ms 0.098 ms 0.081 ms  
 2 10.0.0.2 (10.0.0.2) 0.332 ms 0.299 ms 0.243 ms  
 3 11.0.0.2 (11.0.0.2) 0.572 ms 0.549 ms 0.449 ms  
 4 12.0.0.2 (12.0.0.2) 2.917 ms 2.902 ms 2.813 ms  
 5 13.0.0.2 (13.0.0.2) 4.808 ms 4.712 ms 4.695 ms  
[root@fwa710-blue ~]# █
```


D. Traceroute from eth4.

```
root@fwa710-blue:~  
File Edit View Terminal Help  
[root@fwa710-blue ~]# traceroute -i eth1 13.0.0.2  
traceroute to 13.0.0.2 (13.0.0.2), 30 hops max, 60 byte packets  
 1 172.16.0.1 (172.16.0.1) 0.111 ms 0.081 ms 0.105 ms  
 2 10.0.0.2 (10.0.0.2) 0.226 ms 0.338 ms 0.321 ms  
 3 11.0.0.2 (11.0.0.2) 0.640 ms 0.559 ms 0.539 ms  
 4 12.0.0.2 (12.0.0.2) 2.937 ms 2.924 ms 3.551 ms  
 5 13.0.0.2 (13.0.0.2) 4.778 ms 4.687 ms 6.603 ms  
[root@fwa710-blue ~]#  
[root@fwa710-blue ~]#  
[root@fwa710-blue ~]# traceroute -i eth4 10.0.0.1  
traceroute to 10.0.0.1 (10.0.0.1), 30 hops max, 60 byte packets  
 1 192.168.0.1 (192.168.0.1) 0.109 ms 0.081 ms 0.100 ms  
 2 13.0.0.1 (13.0.0.1) 0.243 ms 0.159 ms 0.489 ms  
 3 12.0.0.1 (12.0.0.1) 2.210 ms 2.177 ms 2.142 ms  
 4 11.0.0.1 (11.0.0.1) 3.166 ms 3.148 ms 3.177 ms  
 5 10.0.0.1 (10.0.0.1) 6.731 ms 6.719 ms 6.699 ms  
[root@fwa710-blue ~]# █
```


A. `traceroute -i eth4 10.0.0.1`

E. Generate LANforge traffic through the multi-hop network.

A. Go to the Layer-3 tab and select Create.

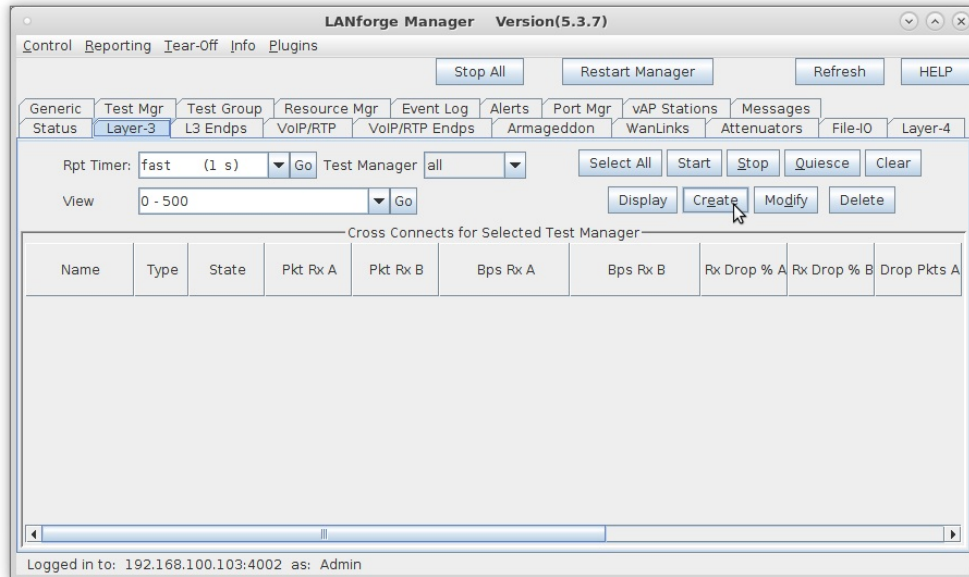

B. Set Endpoint-A to use eth1 and Endpoint-B to use eth4.

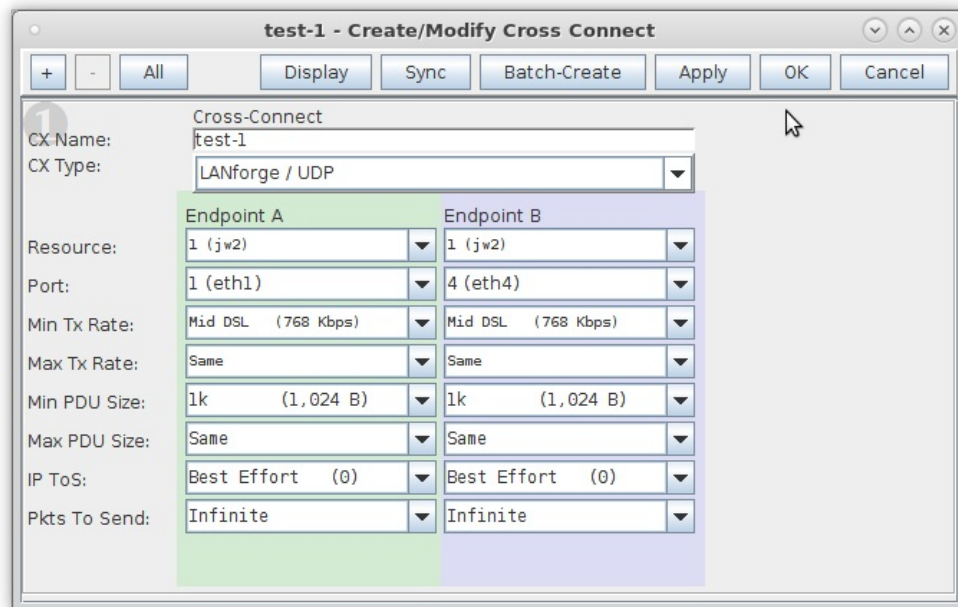


C. Start the Layer-3 connection.

The screenshot shows the LANforge Manager Version 5.1.2 interface. The main window has a menu bar (Control, Reporting, Tear-Off, Help) and a toolbar with buttons for Stop All, Restart Manager, Refresh, and HELP. Below the menu bar are several tabs: File-IO, Layer-4, Generic, Test Mgr, Resource Mgr, Serial Spans, PPP-Links, Port Mgr, and Messages. Under the Test Mgr tab, there are sub-tabs for Layer-3, L3 Endps, VoIP/RTP, VoIP/RTP Endps, Armageddon, WanLinks, and Collision-Domains. The interface includes a Rpt Timer (ms) set to 3000, a Test Manager dropdown set to 'all', and a View dropdown set to '0 - 200'. There are also buttons for Select All, Start, Stop, Quiesce, Clear, Display, Create, Modify, and Delete. A table titled 'Cross Connects for Selected Test Manager' is displayed, showing the following data:

Name	Type	State	Pkt Tx A->B	Pkt Tx A<-B	Rate A->B	Rate A<-B	Rx Drop A	Rx Drop B	Rpt Timer	EID	Endpoints (A <-> B)
test-1	LF/UDP	Run	1,554	1,573	767,583	767,710	0	0	1000	1.6	test-1-A <-> test-1-B

At the bottom of the window, it says 'Logged in to: 192.168.100.226:4002 as: Admin'.

D. Traffic flowing through the multi-hop network.

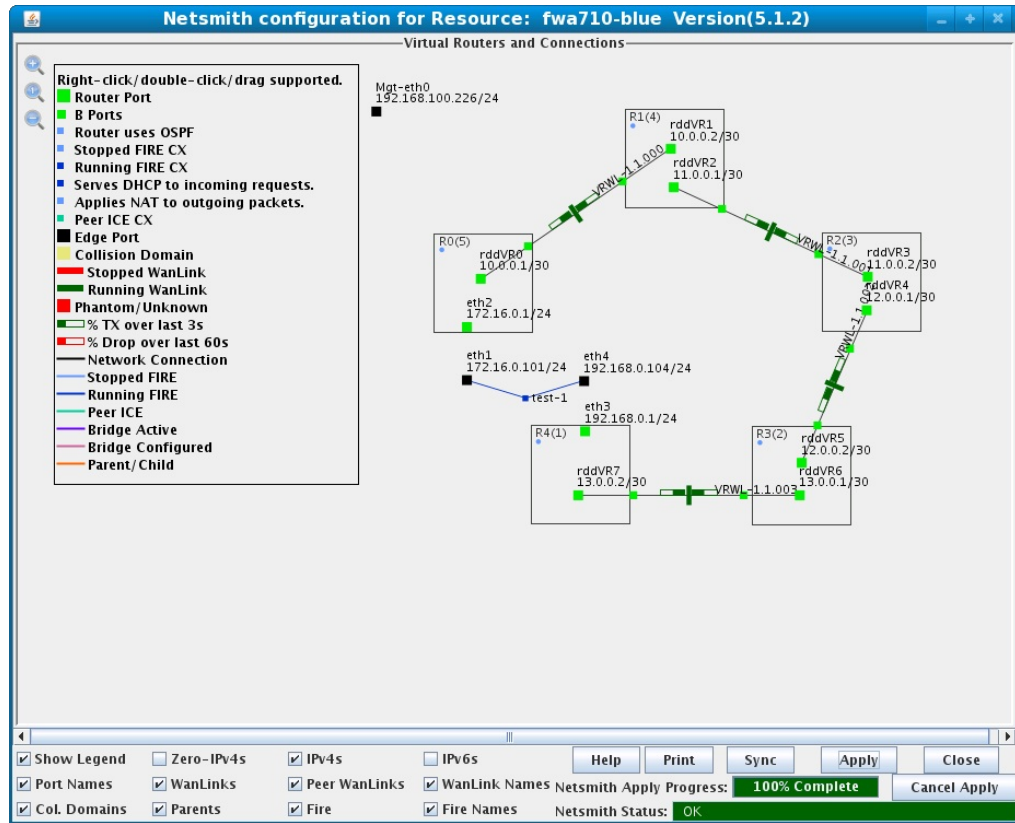

Multiple Physical Port Testing - CT970-48 Example

Goal: Use LANforge and a managed ethernet switch to create 48 unique WAN emulations.


In this example, LANforge is paired with a managed ethernet switch to create 48 unique WAN emulations. Each of the 48 ports on the ethernet switch can be connected to an end-user device such as a PC or networked gaming console to provide 48 independent emulated links each with their own set of network impairments. Please see the [CT970-48 product description](#) for more details.

NOTE: If you are attempting to run this test scenario, you will need a LANforge license key that enables the correct number of WanLinks. Please contact us at support@candelatech.com for assistance.


1. Download the CT970-48 configuration to your LANforge system. We have provided the LANforge database and managed switch configuration for this example to simplify the setup. You can download all of the [CT970-48 configuration files](#) to your `/home/lanforge/DB/CT970-48` directory.
 - A. **NOTE:** This LANforge database uses eth0 as the Management port and eth2 as the VLAN trunk port. If you need to modify these, please contact us at support@candelatech.com for assistance.
 - B. **NOTE:** The managed switch referenced in this example is a [Netgear FSM7352SNA ProSafe 48-port 10/100 L3 Managed Switch](#).

2. Save your existing database, then load the new database into your LANforge system.


- A. On the Status tab, under the Test Configuration Database Name field, type in a name for your existing configuration, then select the **Save** button.

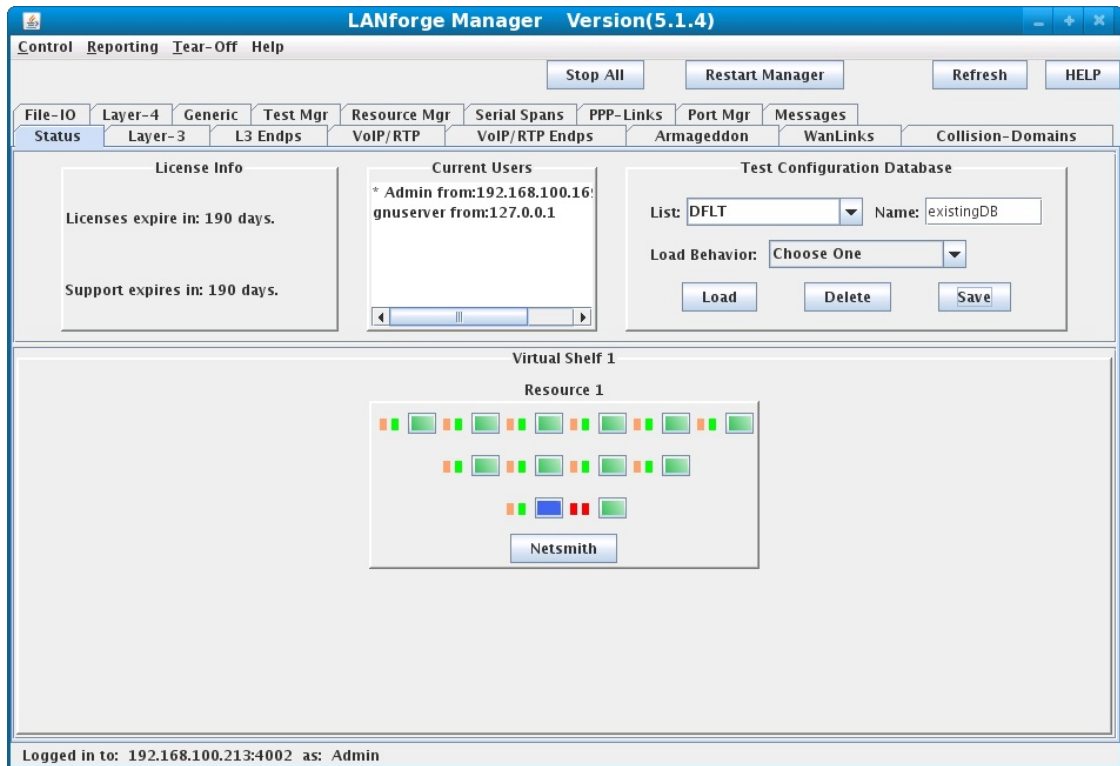


- B. Select **CT970-48** from the Test Configuration Database List box.

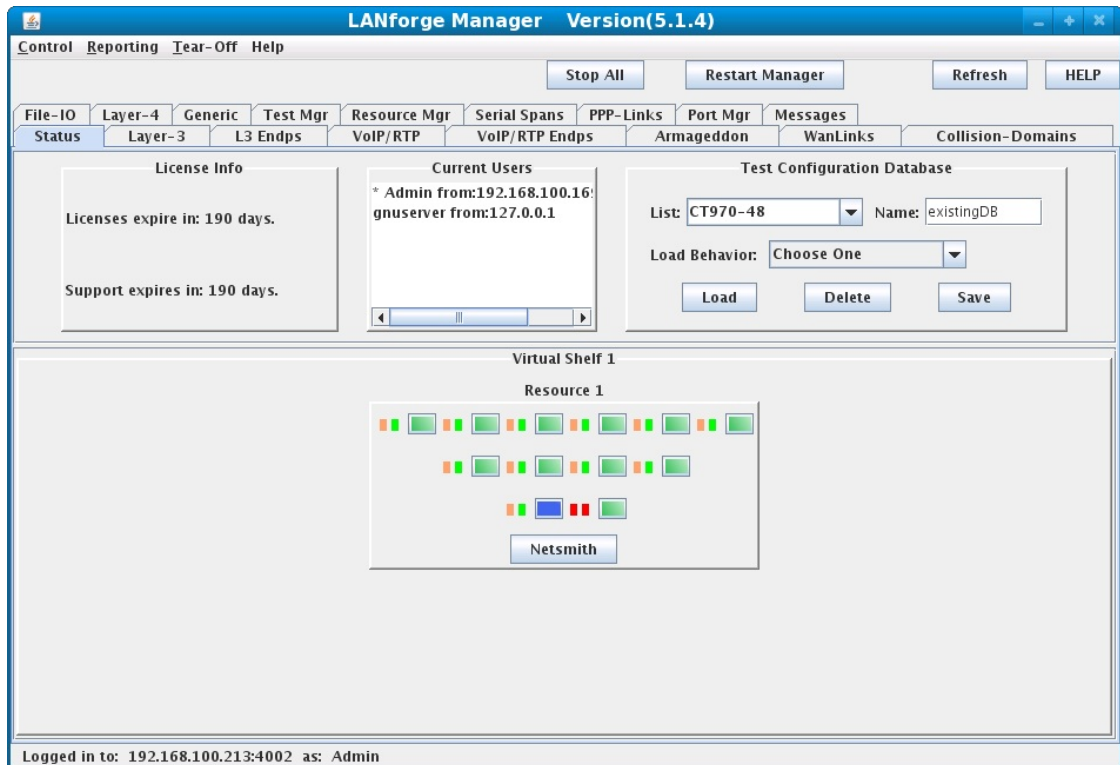

C. Select Load Behavior **Overwrite**.

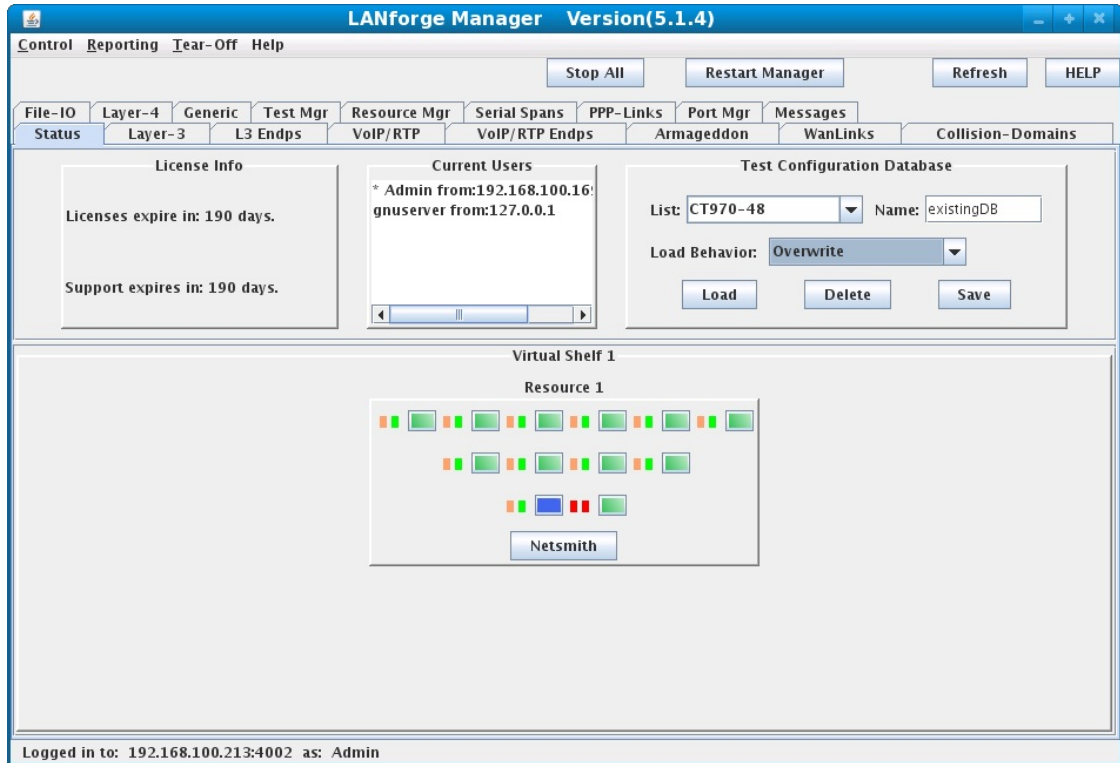


D. Select the **Load** button and acknowledge the confirmation pop-up message.

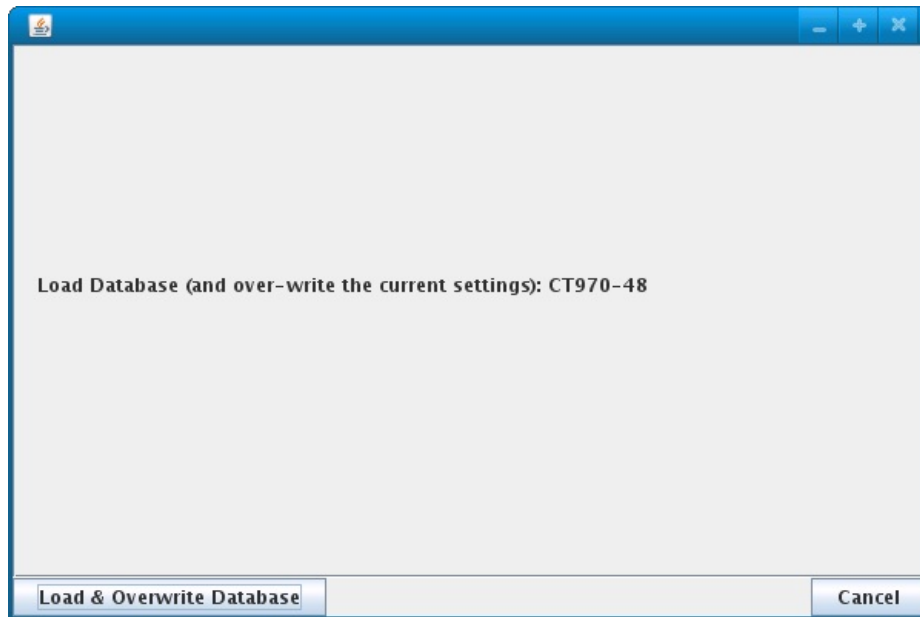


3. After LANforge is finished loading the new database, open Netsmith to view the 48 WanLinks and modify if necessary.

A. On the Status tab, under Resource 1, select the **Netsmith** button.

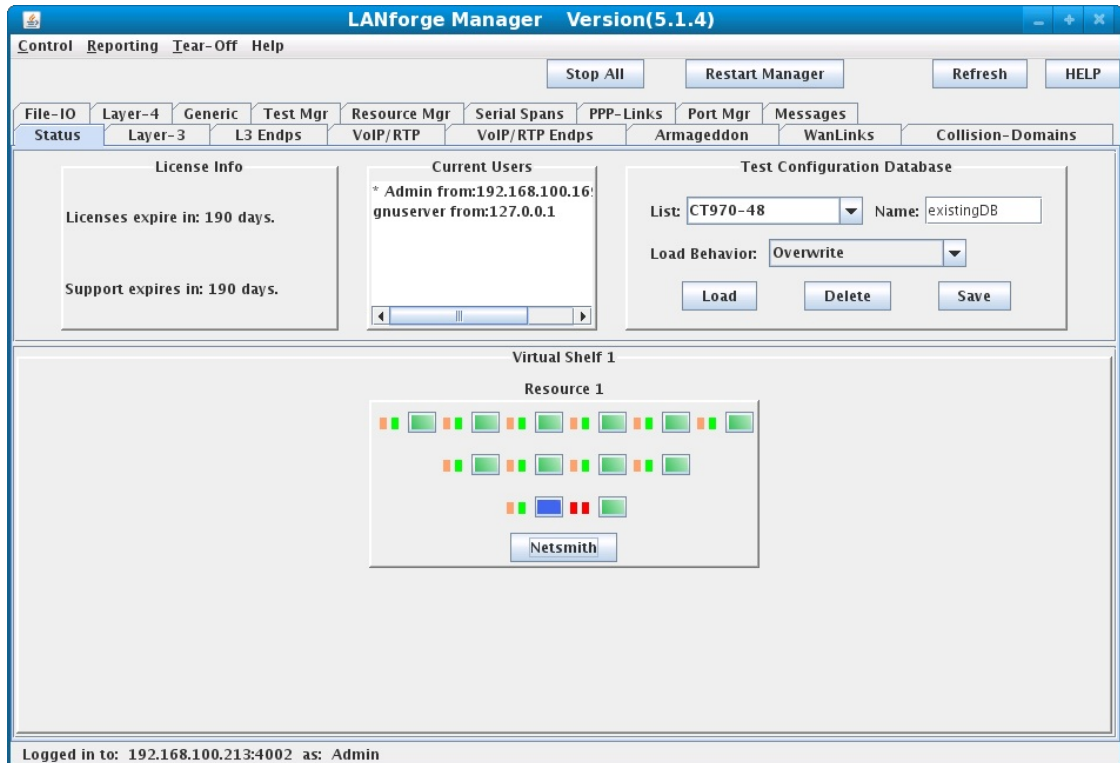


B. If any changes are made to Netsmith, then select the **Apply** button to commit the changes to the LANforge server.

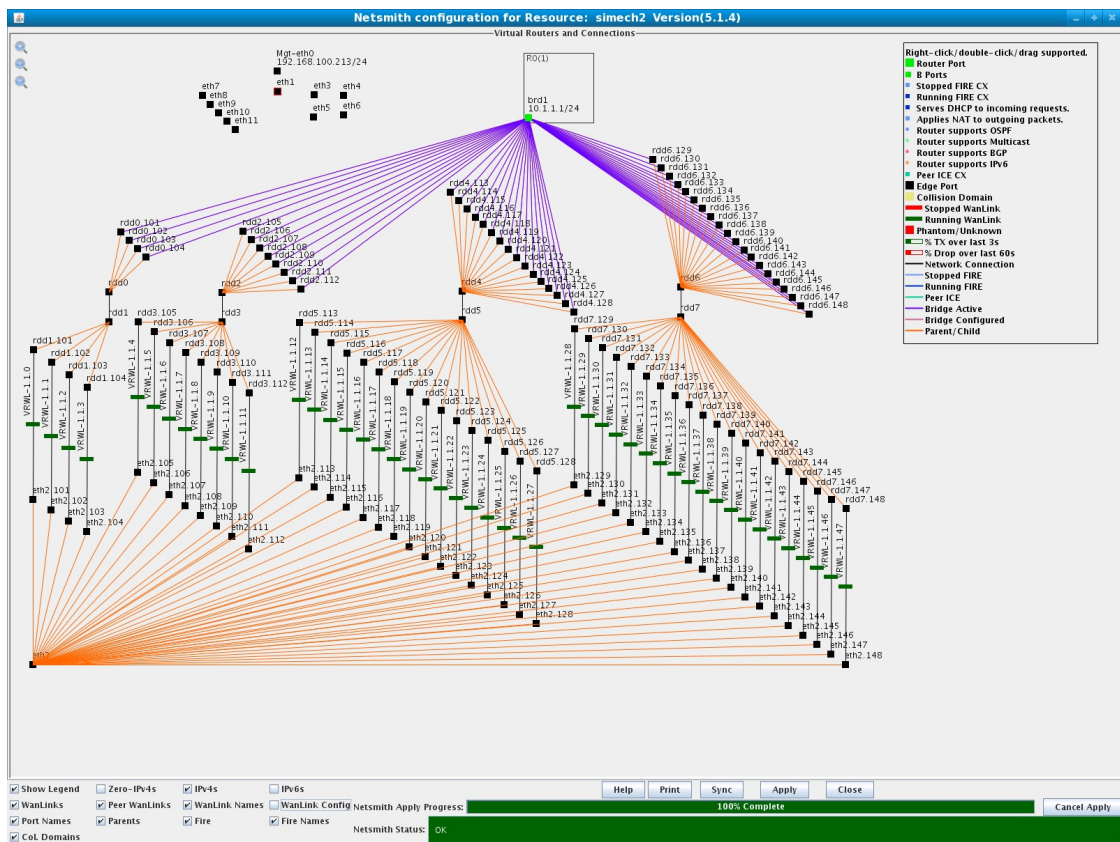

4. When the 48port-sw-config.txt is loaded into the Netgear FSM7352SNA switch, port 52 on the switch is configured as the VLAN trunk which will connect to LANforge port eth2. Each switch port and VLAN correspond to a WanLink in LANforge. Here, incoming traffic on switch port 1 is tagged for VLAN 101 and sent out switch port 52 to LANforge eth2 then on to WanLink VRWL-1.1.0 via endpoints eth2.101 and rdd1.101.

A. Connect LANforge port eth2 to the FSM7352SNA switch, port 52 which is trunking vlans 101 - 148 to the LANforge system.

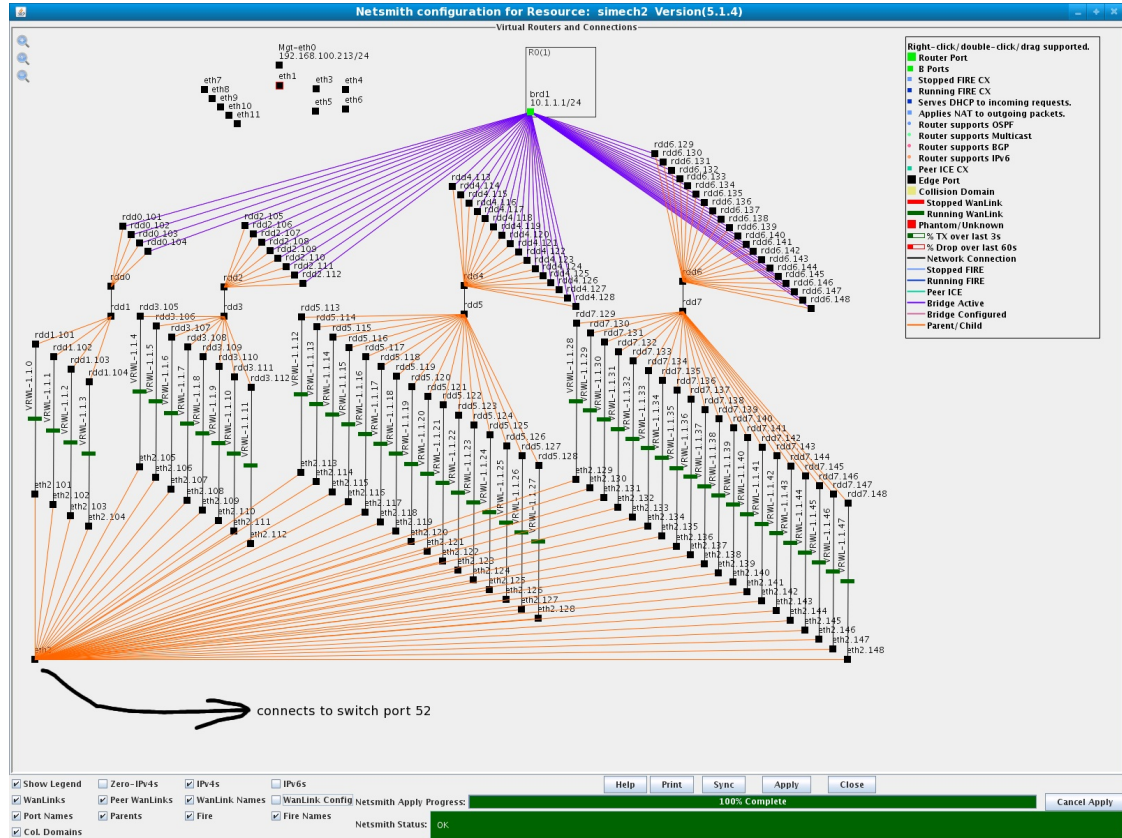

- D. Alternatively, a group of WanLinks can be modified together using the Batch Modify on the WanLinks tab in the main LANforge GUI. Highlight the group of WanLinks that you want to modify, then select **Batch Modify** to modify the highlighted set of WanLinks.

LANforge Manager Version(5.1.4)

Control Reporting Tear-Off Help

Stop All Restart Manager Refresh HELP

File-IO Layer-4 Generic Test Mgr Resource Mgr Serial Spans PPP-Links Port Mgr Messages

Status Layer-3 L3 Endps VoIP/RTP VoIP/RTP Endps Armageddon WanLinks Collision-Domains

Rpt Timer (ms): 3000 Go Test Manager all

Select All Start Switch Stop Clear

Display Create Modify Batch Modify Delete

WanLinks for Selected Test Manager

Name	EID	K-M	State	Endpoints (A <-> B)	Pkt Tx A->B	Pkt Tx A<-B	Rate A->B	Rate A<-B	Rpt Time
VRWL-1.1.11	6.6	✓	Run	VRWL-1.1.11-A <-> B	1	0	2,000,000	2,000,000	5.0
VRWL-1.1.12	6.19	✓	Run	VRWL-1.1.12-A <-> B	1	0	2,000,000	2,000,000	5.0
VRWL-1.1.13	6.18	✓	Run	VRWL-1.1.13-A <-> B	1	0	2,000,000	2,000,000	5.0
VRWL-1.1.14	6.17	✓	Run	VRWL-1.1.14-A <-> B	1	0	2,000,000	2,000,000	5.0
VRWL-1.1.15	6.16	✓	Run	VRWL-1.1.15-A <-> B	0	0	2,000,000	2,000,000	5.0
VRWL-1.1.16	6.15	✓	Run	VRWL-1.1.16-A <-> B	0	0	2,000,000	2,000,000	5.0
VRWL-1.1.17	6.14	✓	Run	VRWL-1.1.17-A <-> B	1	0	2,000,000	2,000,000	5.0
VRWL-1.1.18	6.29	✓	Run	VRWL-1.1.18-A <-> B	1	0	2,000,000	2,000,000	5.0
VRWL-1.1.19	6.28	✓	Run	VRWL-1.1.19-A <-> B	1	0	2,000,000	2,000,000	5.0

All WanLink Endpoints

Name	EID	Run	Script	Tx Rate	Tx Pkts	Rx Pkts	TX Bytes	RX Bytes	Dropped	Tx-Failed	Failed-Late	D
VRWL-1.1.10-A	1.1.43...	✓	None	2,000,000	0	1	0	90	0	0	0	0
VRWL-1.1.10-B	1.1.12...	✓	None	2,000,000	1	0	90	0	0	0	0	0
VRWL-1.1.11-A	1.1.44...	✓	None	2,000,000	0	1	0	90	0	0	0	0
VRWL-1.1.11-B	1.1.12...	✓	None	2,000,000	1	0	90	0	0	0	0	0
VRWL-1.1.12-A	1.1.61...	✓	None	2,000,000	0	1	0	90	0	0	0	0
VRWL-1.1.12-B	1.1.12...	✓	None	2,000,000	1	0	90	0	0	0	0	0
VRWL-1.1.13-A	1.1.62...	✓	None	2,000,000	0	1	0	90	0	0	0	0
VRWL-1.1.13-B	1.1.13...	✓	None	2,000,000	1	0	90	0	0	0	0	0
VRWL-1.1.14-A	1.1.63...	✓	None	2,000,000	0	1	0	90	0	0	0	0
VRWL-1.1.14-B	1.1.13...	✓	None	2,000,000	1	0	90	0	0	0	0	0
VRWL-1.1.15-A	1.1.64...	✓	None	2,000,000	0	1	0	90	0	0	0	0

Logged in to: 192.168.100.213:4002 as: Admin

- E. The Batch Modifier will apply changes to the group of highlighted WanLinks.

LANforge WanLink Batch Modifier

Transfer Rate: T1 (1.544 Mbps) Delay: high (100 ms)

Jitter-Freq: NA Jitter: NA

Drop-Freq: 1% (1%) Reorder-Freq: NA

Dup-Freq: NA Backlog Buffer: NA

Max Allowed Lateness: NA

Apply OK Cancel

5. In this example, any end-devices connected to switch ports 1 - 48 can communicate with each other. Here, an end-device such as PC1 connected to switch port 1 can communicate to PC2 connected to switch port 2 through the network path:

PC1 - switch port 1 - vlan 101 - switch port 52 - LANforge port eth2 - WanLink VRWL-1.1.0 - Virtual Router R0 - vlan 102 - WanLink VRWL-1.1.1 - LANforge port eth2 - switch port 52 - switch port 2 - PC2.

The end-devices used here are LANforge-FIRE interfaces on a separate system. Each interface has its own MAC and IP address and will generate traffic to and receive traffic from the switch port it is connected to.

- A. On the Port Mgr tab, assign an IP address on the 10.1.1.0/24 network and a default gateway 10.1.1.1

- B. On the Port Mgr tab, assign an IP address on the 10.1.1.0/24 network and a default gateway 10.1.1.1

6. The impairment settings on each WanLink will only apply to traffic that is sent or received from the switch port that it is associated with via the VLAN used with that WanLink. For example, WanLinks VRWL-1.1.0 and VRWL-1.1.1 are both set to have a total of 100ms of delay, so PC1 would see a 200ms round-trip delay when sending or receiving traffic to PC2.
 - A. The total latency of WanLinks VRWL-1.1.0 and VRWL-1.1.1 is 100ms.

The screenshot shows the LANforge Manager interface. At the top, there are menu options: Control, Reporting, Tear-Off, and Help. Below the menu are buttons for Stop All, Restart Manager, Refresh, and HELP. A series of tabs are visible: File-IO, Layer-4, Generic, Test Mgr, Resource Mgr, Serial Spans, PPP-Links, Port Mgr, Messages, Status, Layer-3, L3 Endps, VoIP/RTP, VoIP/RTP Endps, Armageddon, WanLinks, and Collision-Domains. The 'WanLinks' tab is active. Below the tabs, there are controls for Rpt Timer (ms) set to 3000, a Go button, and a Test Manager dropdown set to 'all'. Further down are buttons for Select All, Start, Switch, Stop, Clear, Display, Create, Modify, Batch Modify, and Delete.

The main data area is titled 'WanLinks for Selected Test Manager' and contains a table with the following columns: Name, EID, K-M, State, Endpoints (A <-> B), Pkt Tx A->B, Pkt Tx A<-B, Rate A->B, Rate A<-B, and Rpt Time. The table lists 17 WanLinks, all in a 'Run' state, with various endpoints and traffic rates.

Below this table is another section titled 'All WanLink Endpoints' with a table containing columns: DO Pkts, QDisc, Corrupt-0, Corrupt-1, Corrupt-2, Corrupt-3, Corrupt-4, Corrupt-5, Delay, SerDelay, MaxJitter, Reorder, and DropFreq. This table shows performance metrics for each endpoint, with most values being 0 or 50.

At the bottom of the interface, a status bar indicates 'Logged in to: 192.168.100.213:4002 as: Admin'.

- B. Each end of the connection experiences 100ms of delay which gives a total round-trip delay of 200ms.


The screenshot shows the LANforge Manager interface with a table titled "All Endpoints". The table has columns for Name, EID, Run, Mng, Script, Tx Rate, Tx Rate(1), Rx Rate, Rx Rate(1), Rx Drop %, Tx Pkts, Rx Pkts, Delay, and Dropped. The first two rows show active endpoints with high traffic rates and a 100ms delay. The remaining rows show endpoints that are not running.

Name	EID	Run	Mng	Script	Tx Rate	Tx Rate(1)	Rx Rate	Rx Rate(1)	Rx Drop %	Tx Pkts	Rx Pkts	Delay	Dropped
u001-A	1.1.10....	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	None	9,982,083	9,990,090	9,982,083	9,990,090	0	215,787	215,787	100	0
u001-B	1.1.11....	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	None	9,990,739	9,989,996	9,990,693	9,989,996	0	215,729	215,728	100	0
u002-A	1.1.12....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u002-B	1.1.13....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u003-A	1.1.14....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u003-B	1.1.15....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u004-A	1.1.16....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u004-B	1.1.17....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u005-A	1.1.18....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u005-B	1.1.19....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u006-A	1.1.20....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u006-B	1.1.21....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u007-A	1.1.22....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u007-B	1.1.23....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u008-A	1.1.24....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u008-B	1.1.25....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u009-A	1.1.26....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u009-B	1.1.27....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u010-A	1.1.28....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u010-B	1.1.29....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0
u011-A	1.1.30....	<input type="checkbox"/>	<input checked="" type="checkbox"/>	None	0	0	0	0	0	0	0	0	0

Bridging Multiple WAN-links


Goal: Create a star topology network similar to a central VPN server with remote offices.

Using LANforge Netsmith, we connect three ethernet ports with WAN-links. Each WAN-link has an ethernet port on one side and a virtual redirect on the other. The redirects are then bridged. We can then model the WAN environment by changing the latency (and other parameters) of the WANlinks. In this example, we are using ports `eth2`, `eth3` and `eth4`. This emulates a bridged network, but it is also possible to do a similar configuration using a Virtual Router instead of a bridge to emulate a routed network.

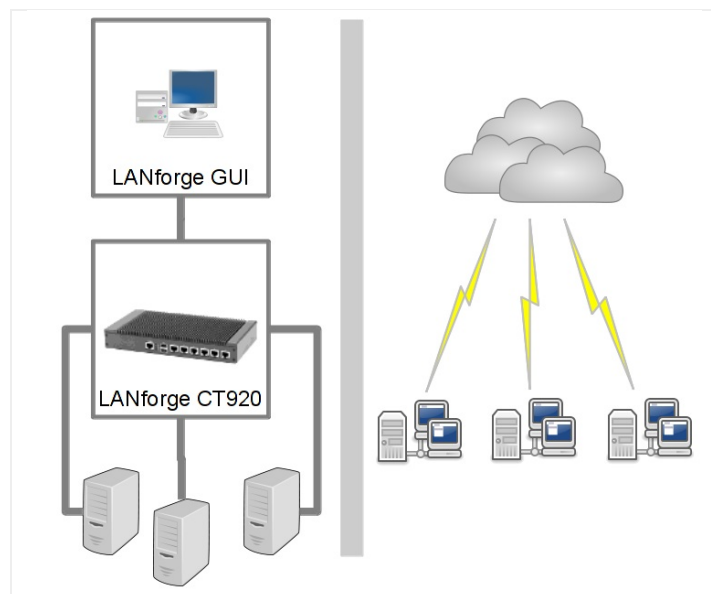


1. Use Netsmith to create three WAN links

A. In the **Status** tab, click the **Netsmith** button

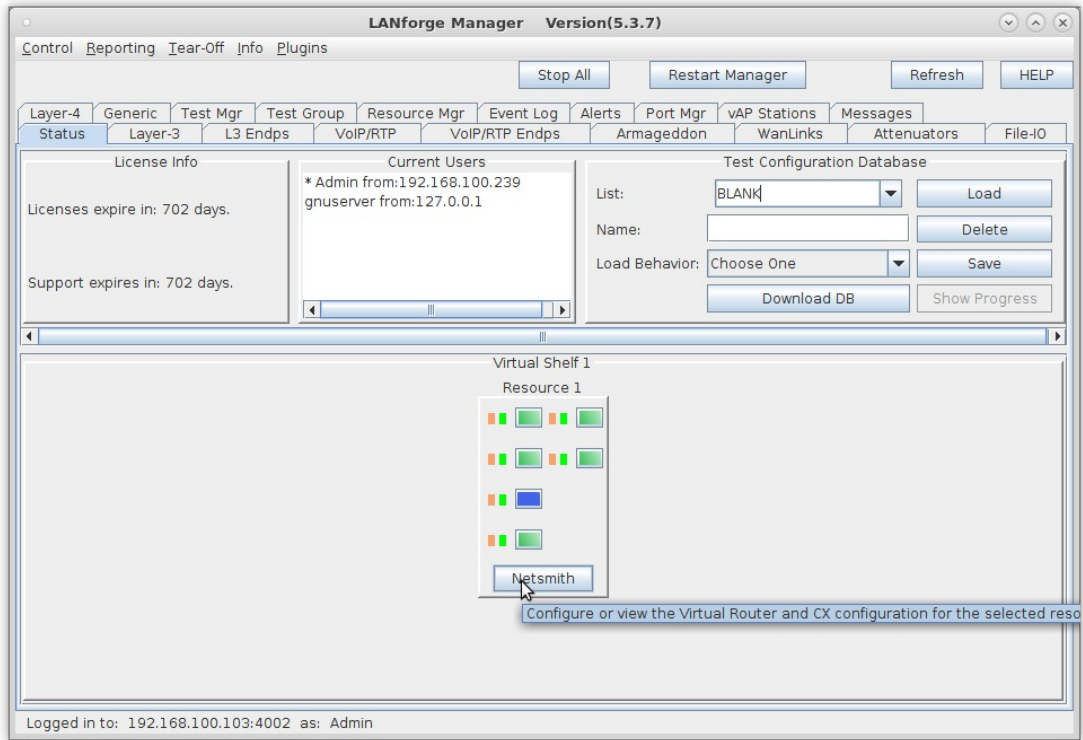


B. Right click in the Netsmith window

C. Select **New Connection**

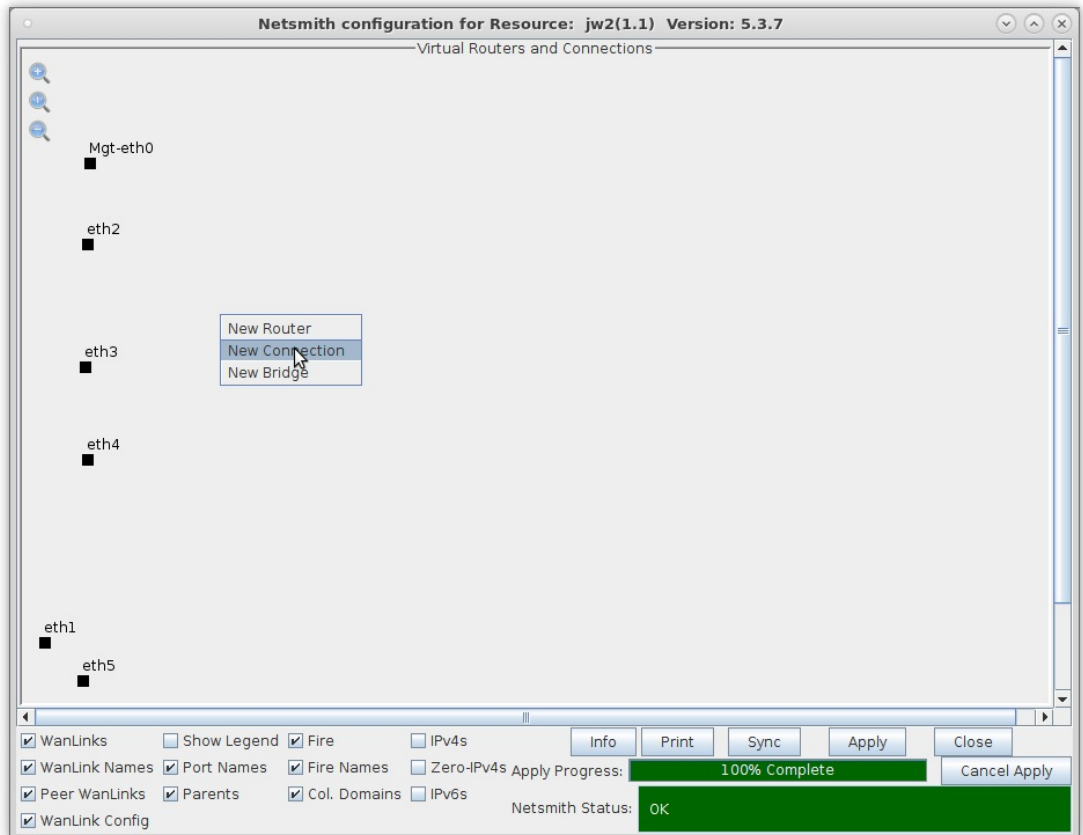

D. Create new WAN link connection

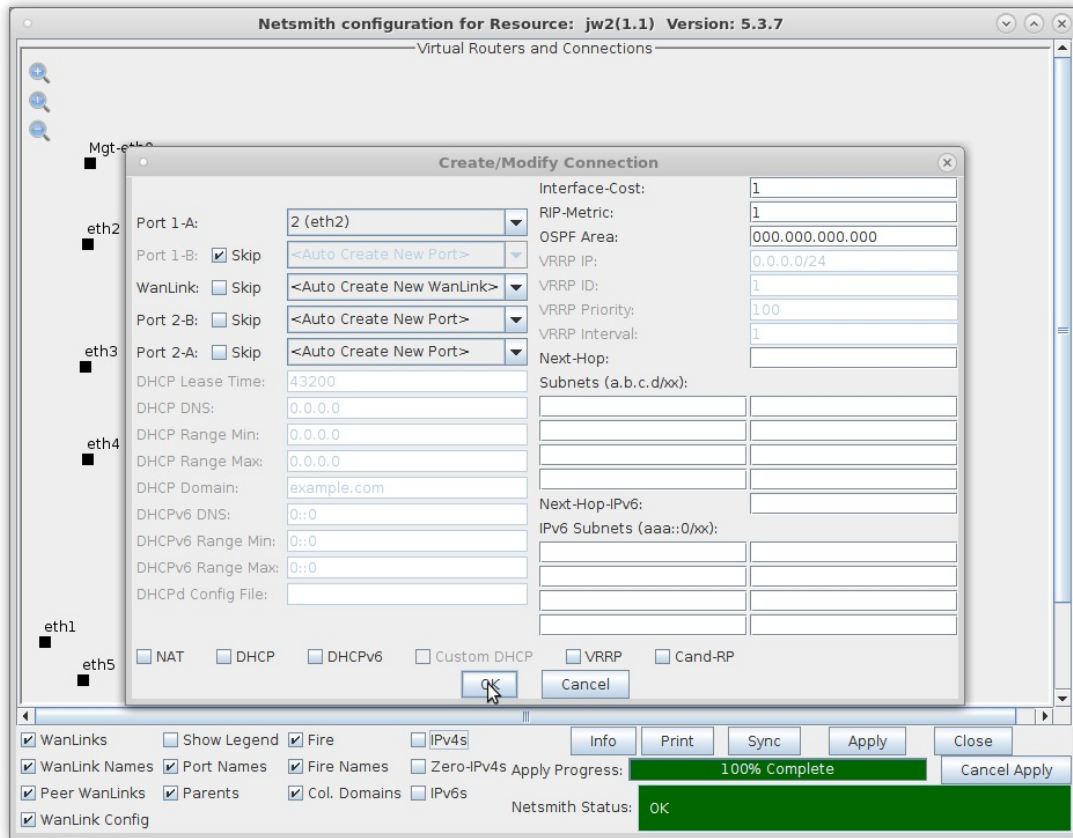


A. Select Port 1-A: **eth2**


B. Select Port 1-B:Skip

C. Click **OK**

E. A tentative WAN link is displayed

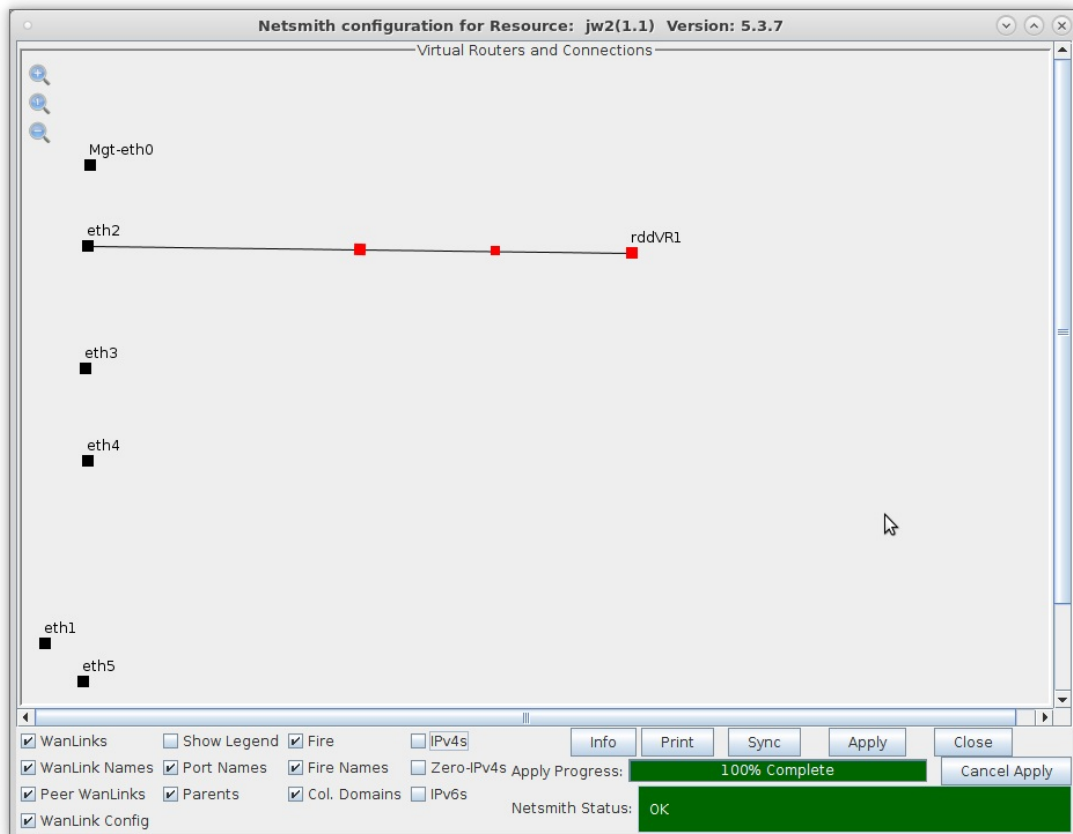


F. Click the **Apply** button at the bottom of the Netsmith window. This commits the WAN link to the resource.

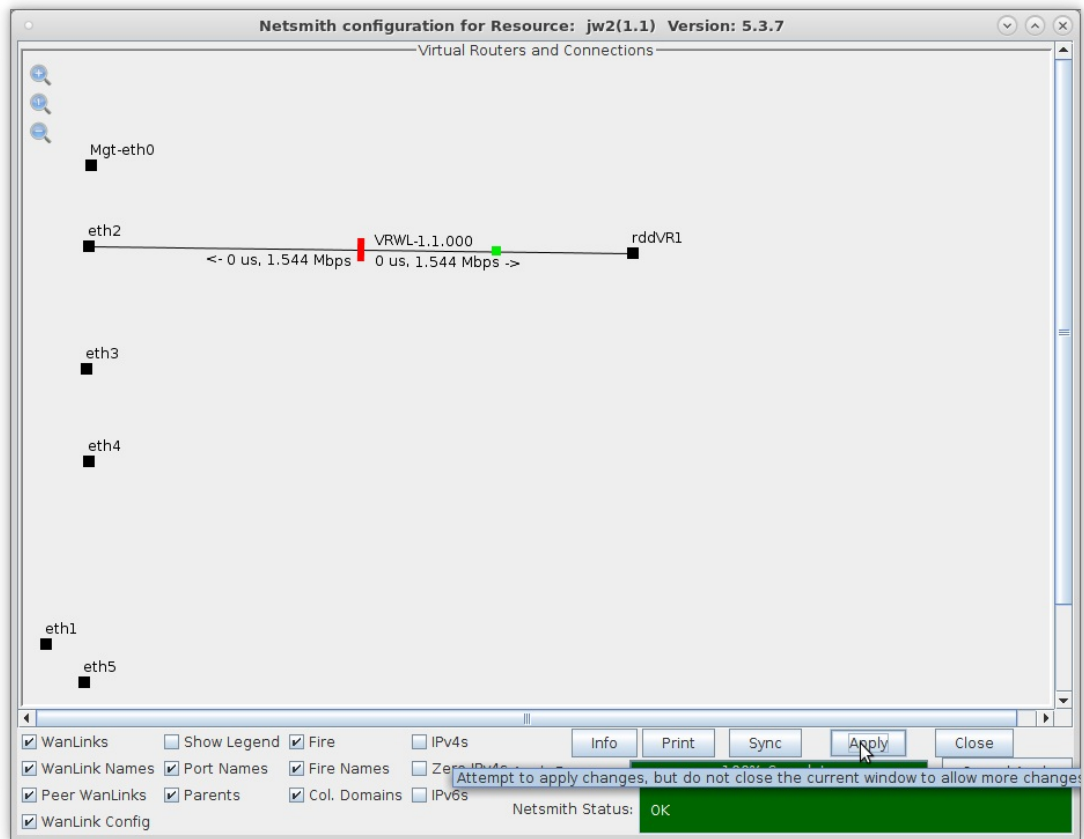

G. Creating two more WAN links is a similar process


H. Repeat these steps:

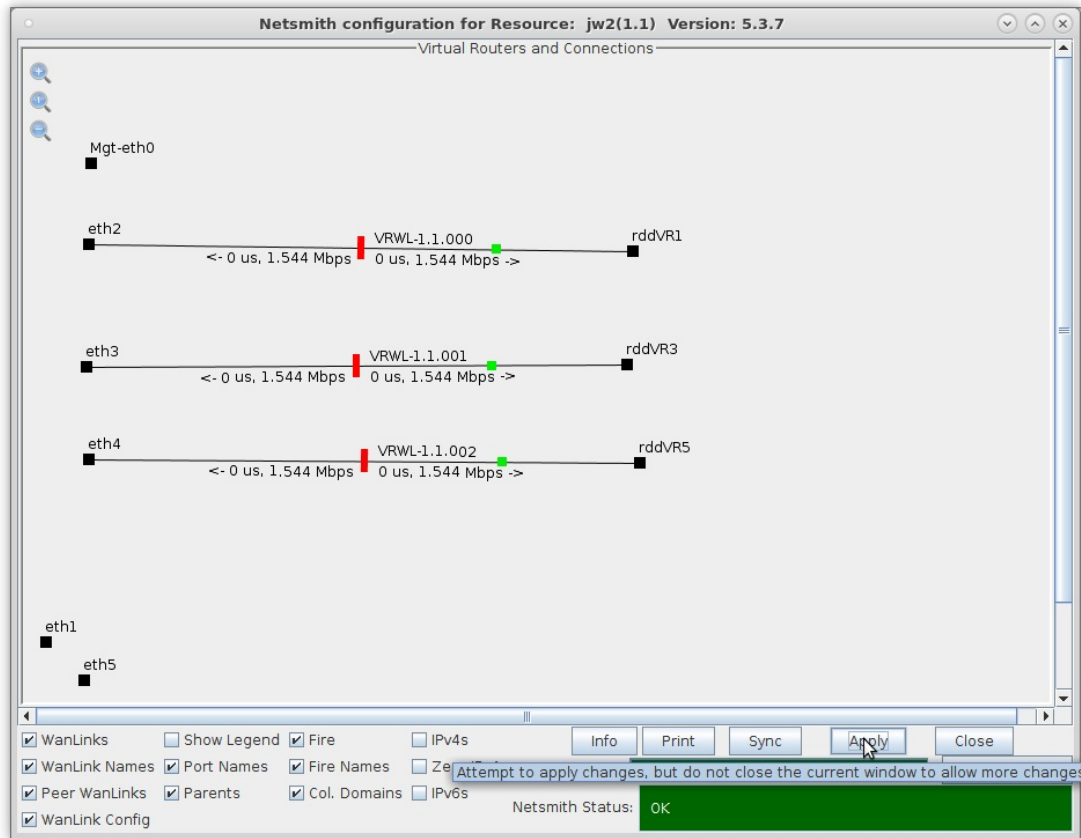


- A. Right click, **New Connection**
- B. Choose **eth3** for port 1-A and **Skip** for port 1-B, then **OK**
- C. Click Netsmith **Apply** to commit connection.
- D. Right click, **New Connection**
- E. Choose **eth4** for port 1-A and **Skip** for port 1-B, then **OK**
- F. Click Netsmith **Apply** to commit connection.

2. Use Netsmith to create a bridge port

A. Right click, Select **New Bridge**

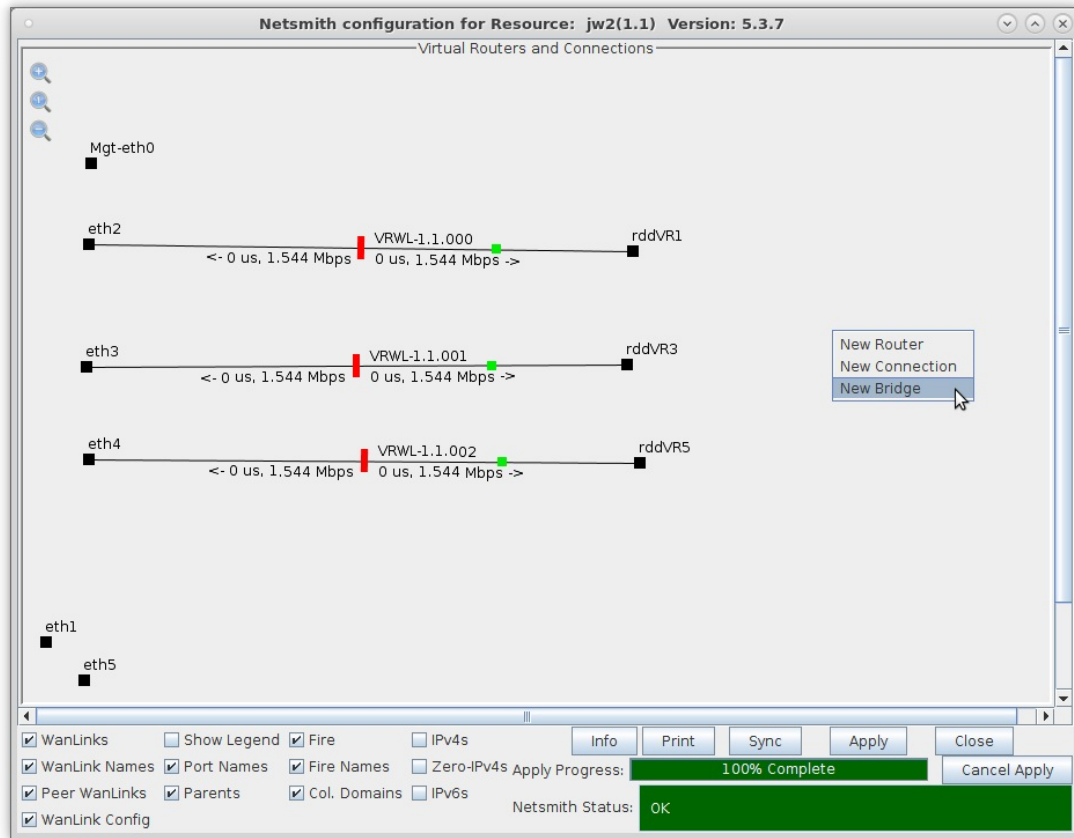

B. Create the bridge with the following attributes:

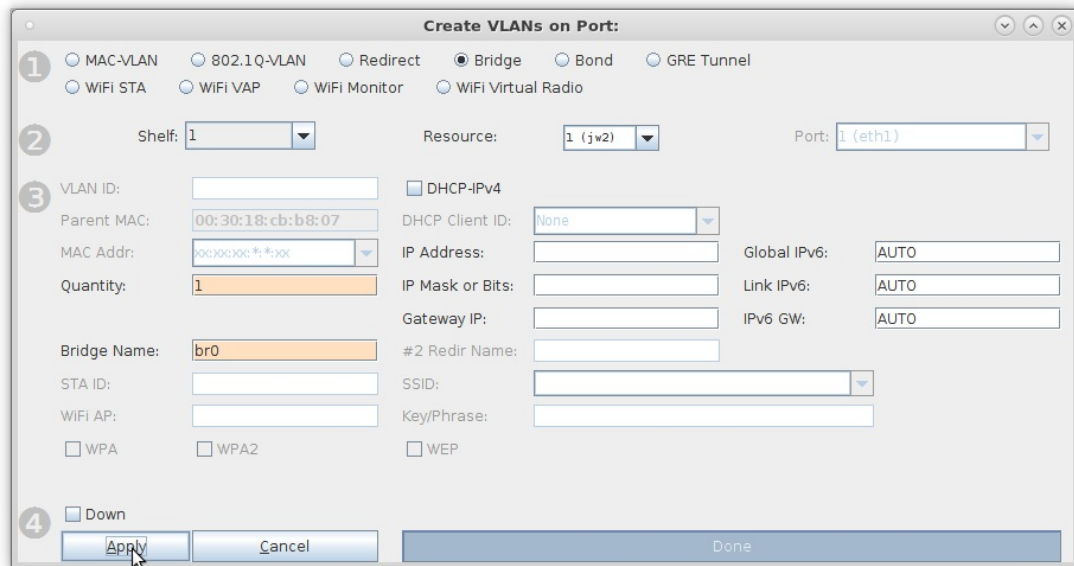


A. Select **Bridge**


B. Quantity: 1

C. Bridge Name: **br0**


C. Click Netsmith **Sync** to bring the **br0** port onto the Netsmith screen

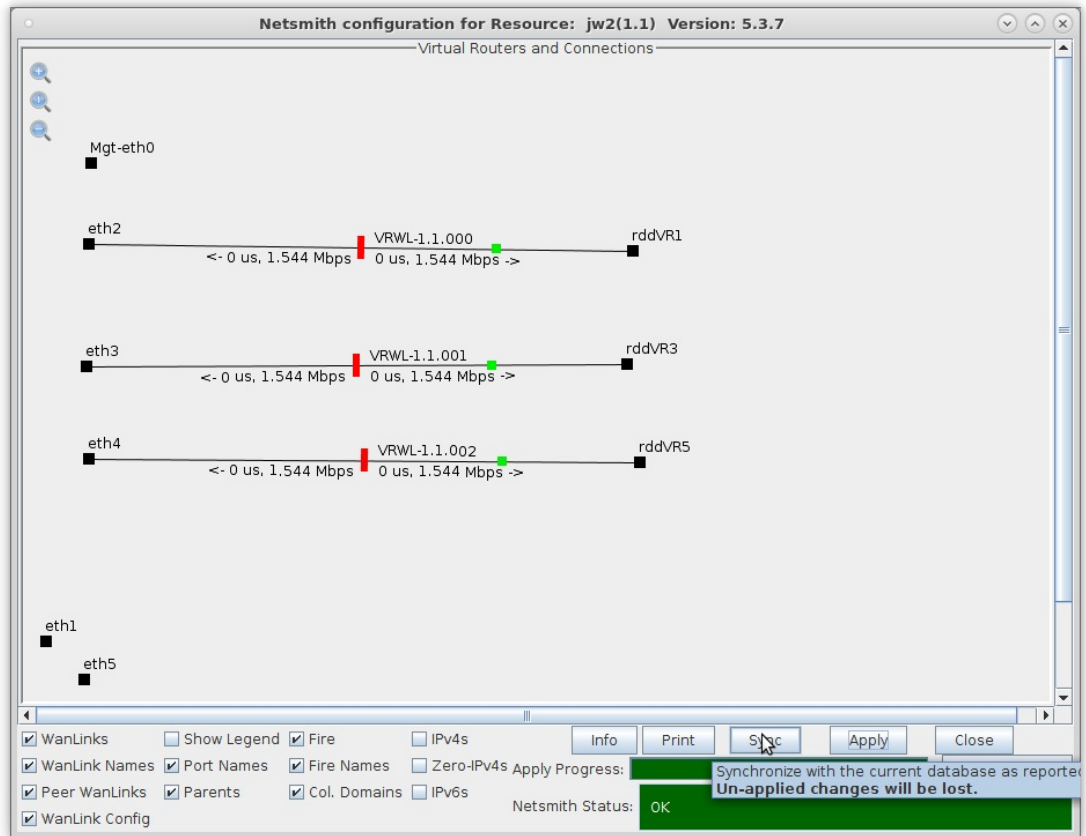

D. Right click the br0 port and select **Modify Port**

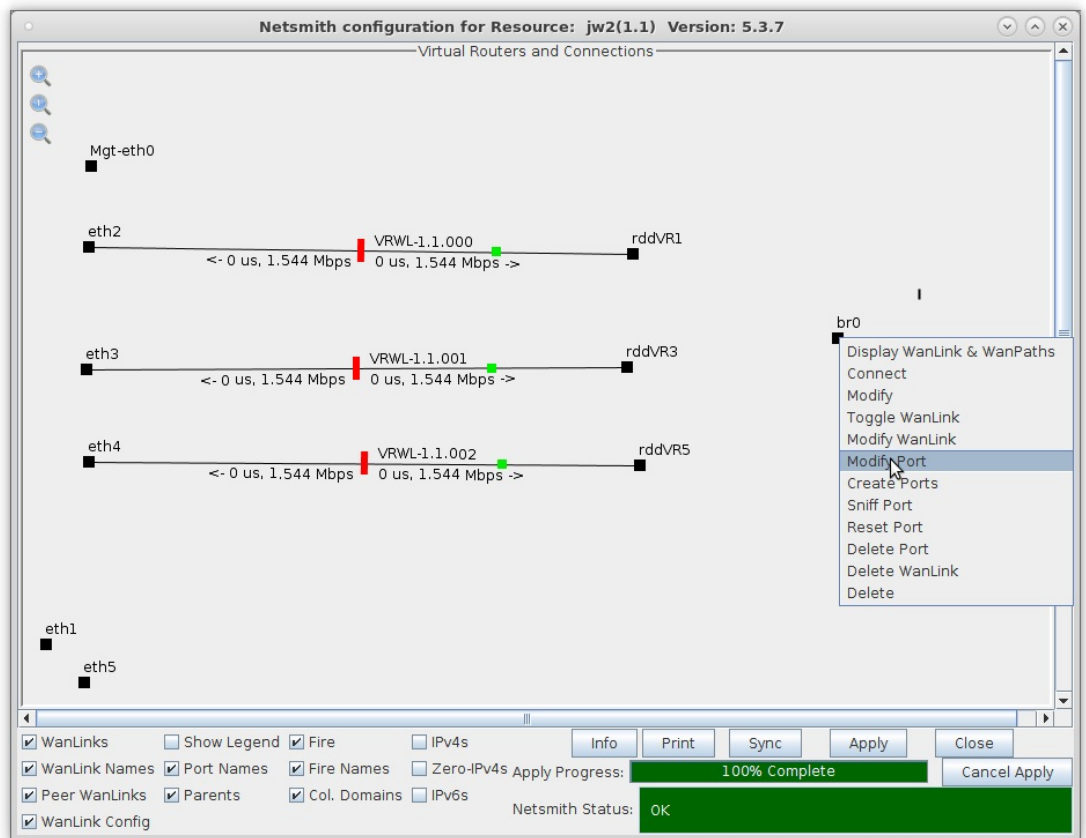


E. In the text area below the **Add Ports** button, add the three virtual WAN link endpoints:

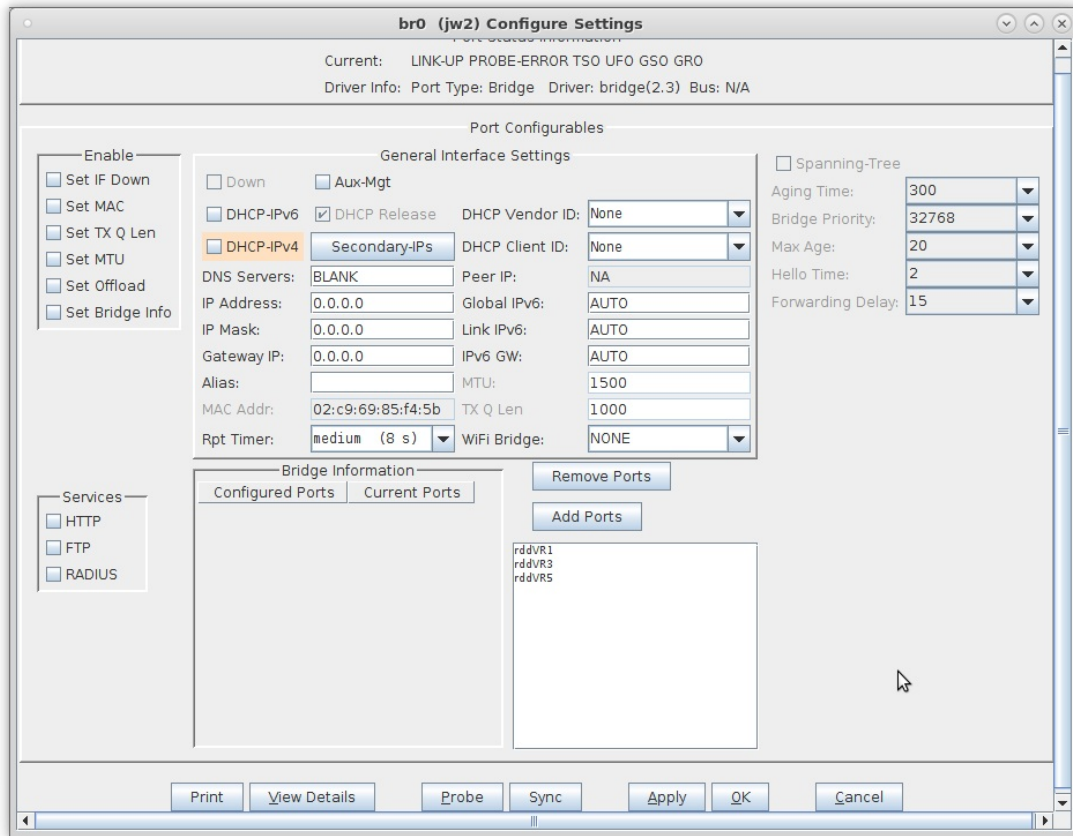


- A. rddvR1
- B. rddvR3
- C. rddvR5

F. Click **Add Ports** to enter the selection. You will see them show up in the Bridge Information table.

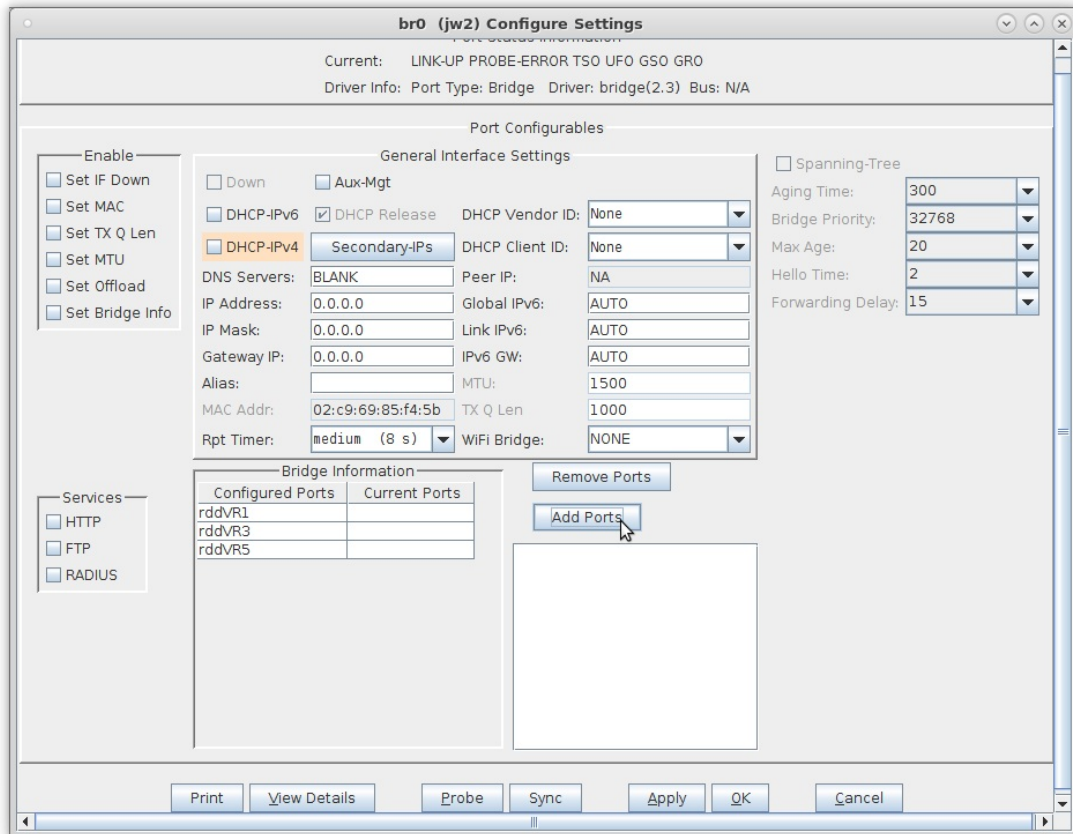

G. Click **Apply** to commit the change.


H. Click **Sync** to read-in the ports to the screen. You will see them show up in the Bridge Information table.

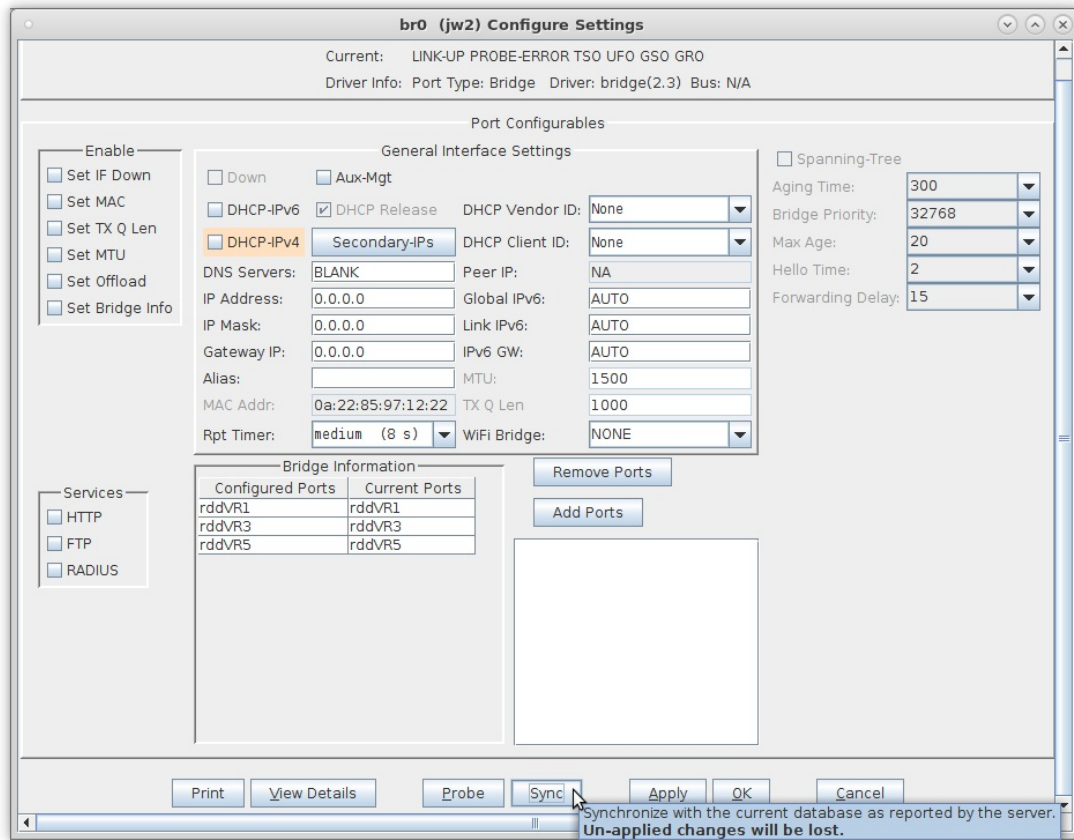

I. Click **Cancel** to close the window.


3. Enable the WAN links in Netsmith

A. In the Netsmith window, click **Sync** to bring the changes into view

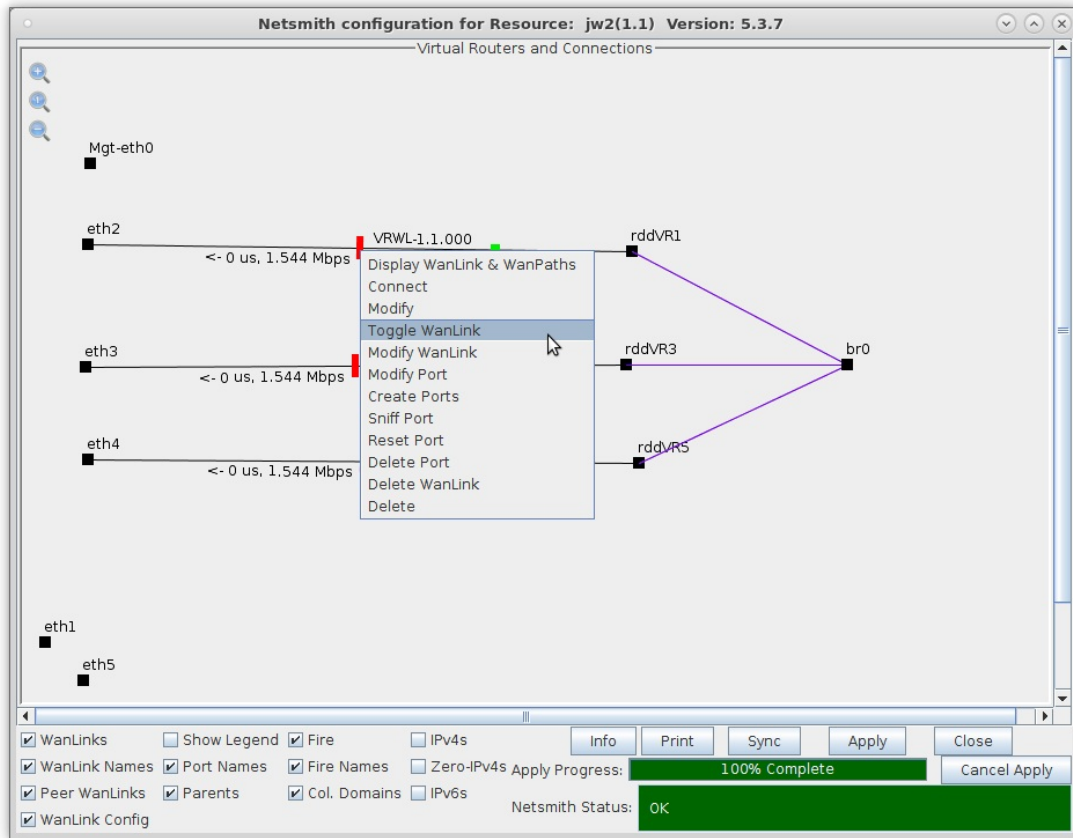

B. Right click on **VRWL-1.1** and select **Toggle WanLink**

C. Repeat the toggle for the next two WanLinks

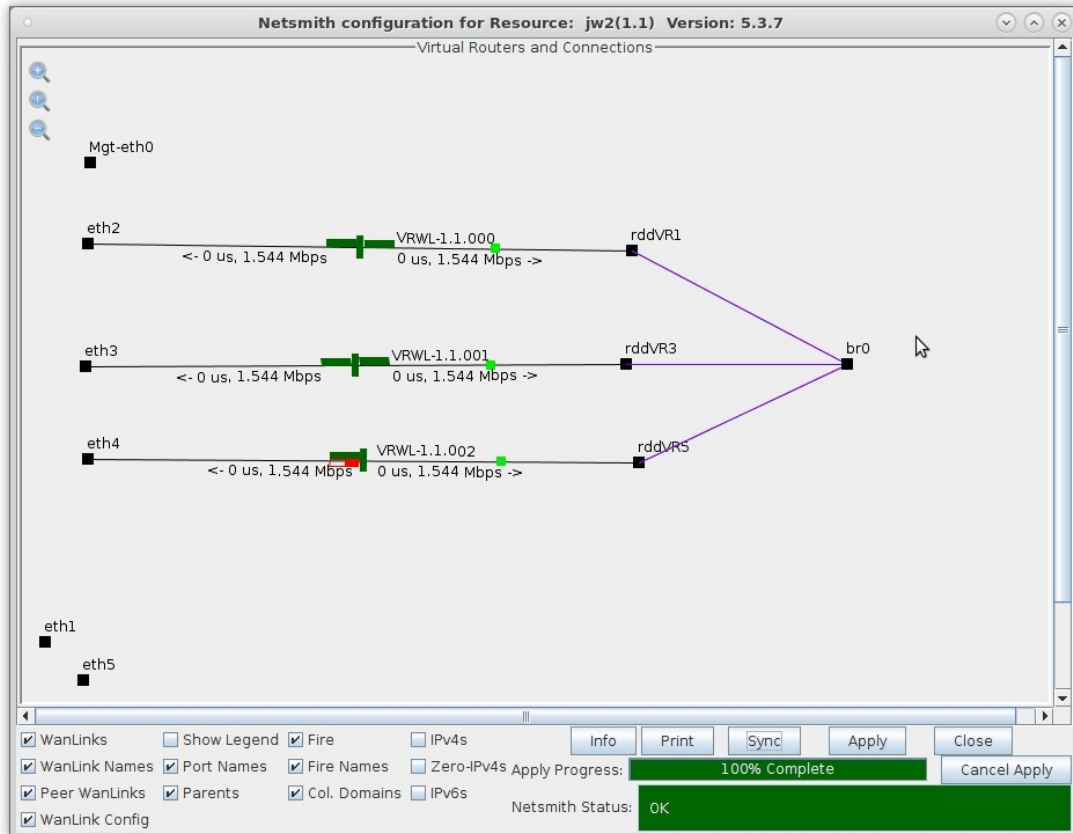

WanPath Corruptions


Goal: Setup a WanLink with WanPath Corruptions.

In this test scenario, LANforge-ICE is used to filter traffic by VLAN on a WanLink with the use of WanPaths and then use WanPath Corruptions to overwrite the DSCP field in the IP packet.

Note: VLAN filtering was recently fixed and should be used with LANforge version 5.3.7 and up.

1. Setup a WanLink connection.

A. Go to the **WanLinks** tab and select **Create**.

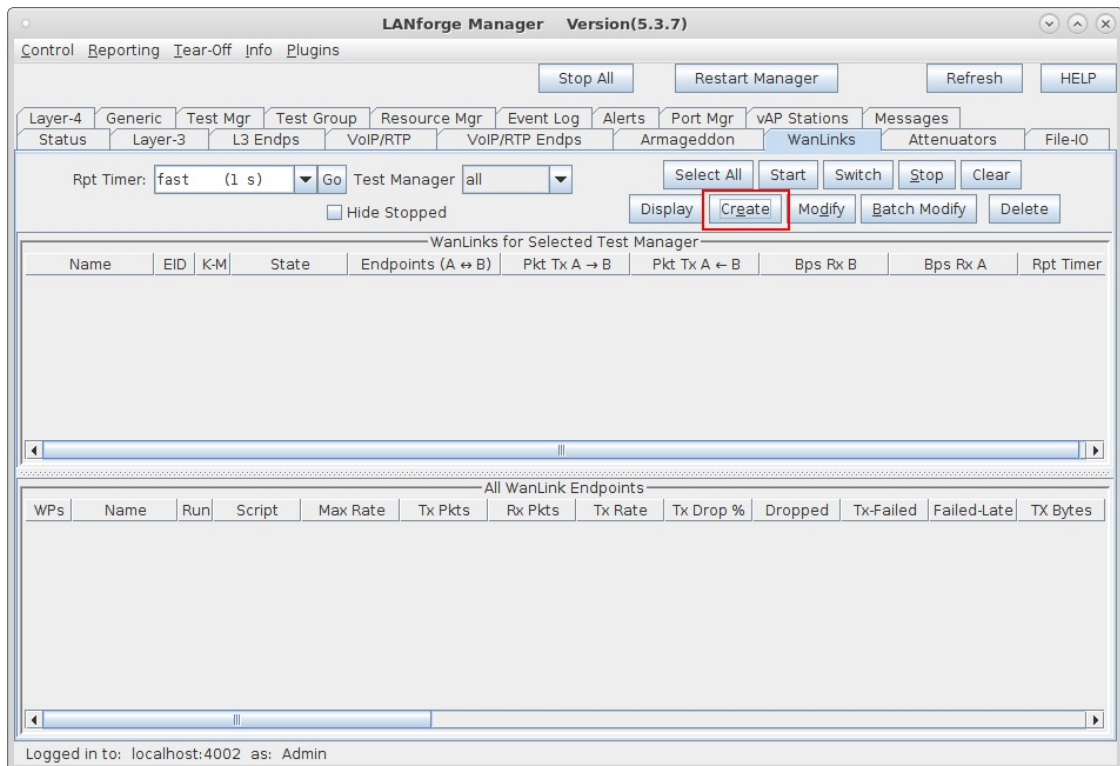

- B. Enter the WanLink name, physical ports, base transfer rate, delay, jitter etc...
These impairments will be applied to all traffic on the WanLink.

100Mbps-wan - Create/Modify WanLink

+ - All Apply OK Display WanLink & WanPaths Cancel

1 WanLink Information

Name: 100Mbps-wan

Presets: CUSTOM


	Endpoint A	Endpoint B
Port:	2 (eth2)	3 (eth3)
Transfer Rate:	100M (100 Mbps)	100M (100 Mbps)
Delay:	tiny (10 ms)	tiny (10 ms)
Drop-Freq:	zero (0%)	zero (0%)
Jitter:	zero (0 us)	zero (0 us)
Jitter-Freq:	zero (0%)	zero (0%)

- C. Select **Apply** to create the base WanLink.


For more information see [LANforge-GUI User Guide: Creating & Modifying WanLinks](#)

2. Setup the WanPaths.

A. Select **All** to un-hide the other WanLink config panels.

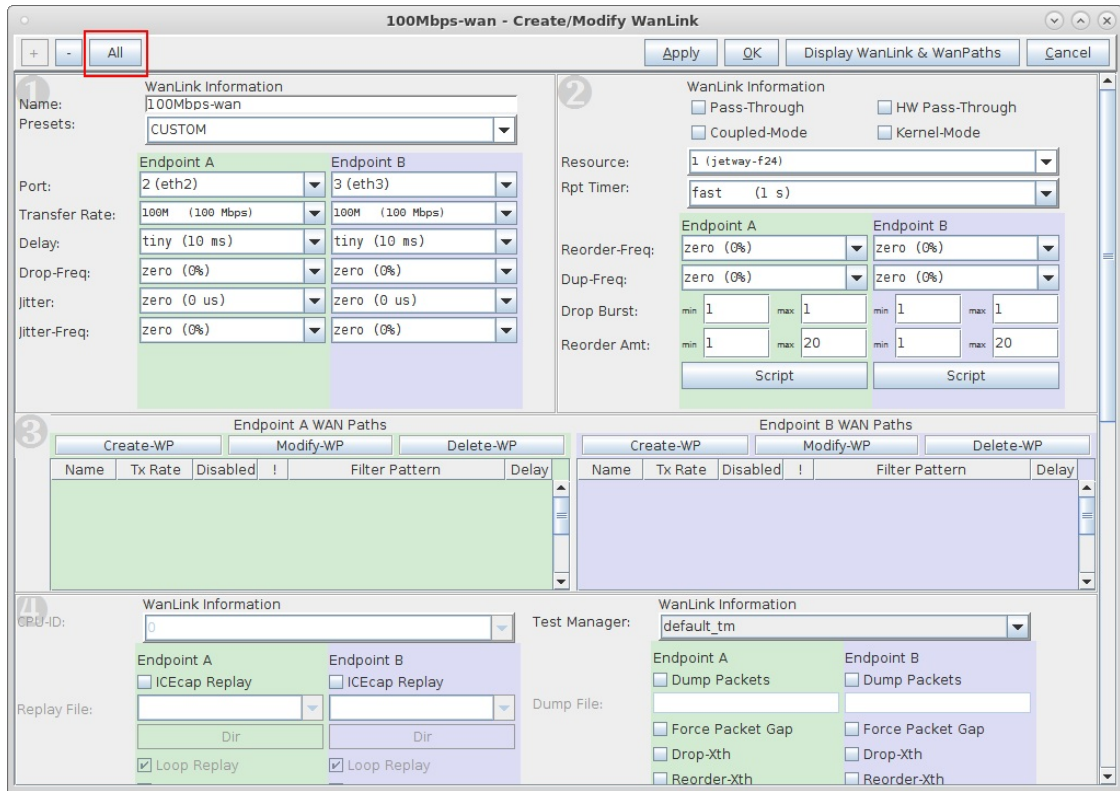

B. In panel 3, for Endpoint-A WAN Paths, select **Create-WP**.

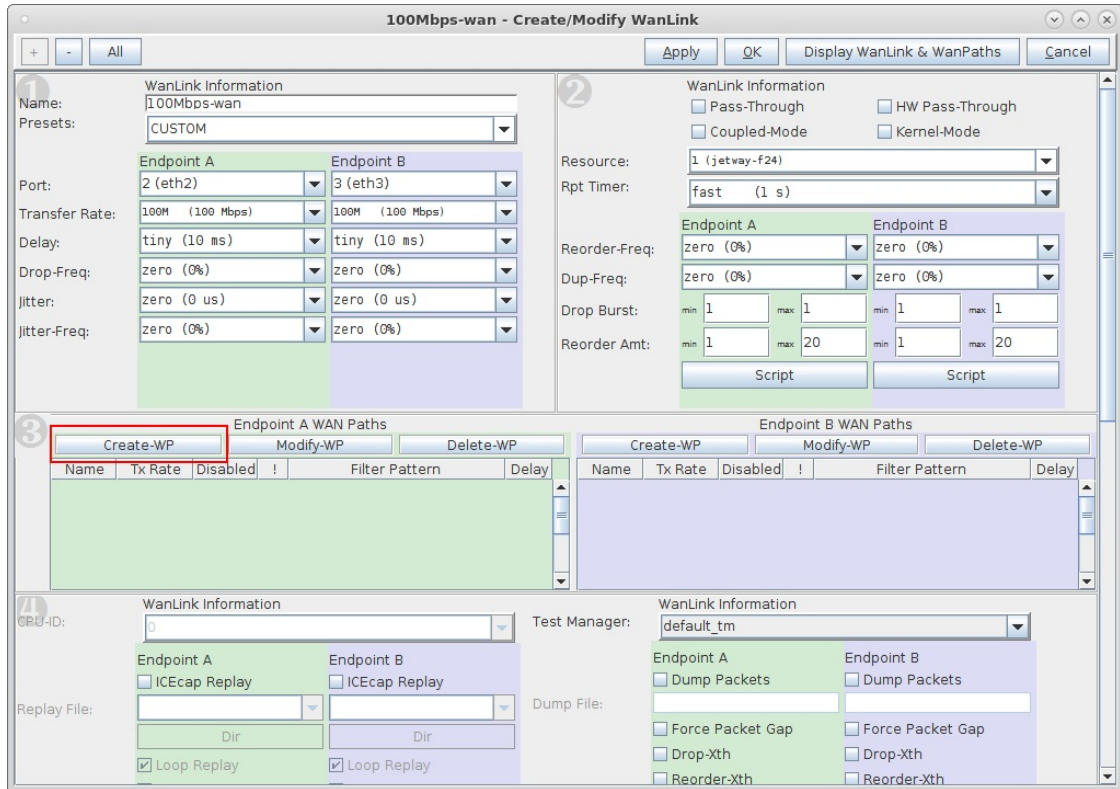

- C. Enter a Name and Transfer Rate for the WanPath.
Here we are matching the WanLink's transfer rate.

Create/Modify WanPath for Endpoint: 100Mbps-wan-A

Buttons: Display, Clear Counters, Apply, OK, Cancel

Name: wp-a Backlog Buffer: AUTO

PCAP Filter: [Empty]

Source IP/MAC: 0.0.0.0 Source Mask: 0.0.0.0

Dest IP/MAC: 0.0.0.0 Dest Mask: 0.0.0.0

Transfer Rate: 100M (100 Mbps) Delay: zero (0 us)

Jitter: zero (0 us) Drop-Freq: zero (0%)

Min Drop Burst: 1 Max Drop Burst: 1

Min Reorder Amount: 1 Max Reorder Amount: 20

Reorder-Freq: zero (0%) Dup-Freq: zero (0%)

Jitter-Freq: zero (0%) Test Manager: [Empty]

ICEcap Replay Replay File: [Empty] Dir

Disabled Loop Replay Replay Latency Replay Loss

Same As WanLink Replay Dup Replay Bandwidth Use Pcap Filter

Inverse Match Drop-Xth Duplicate-Xth Reorder-Xth

Corruption #	Rate	Corruption	Byte-to-Write	Min Offset	Max Offset	Chain-to-Next	Do Checksum
Corruption #0	0	Random Write	0	0	0	<input type="checkbox"/>	<input type="checkbox"/>
Corruption #1	0	Random Write	0	0	0	<input type="checkbox"/>	<input type="checkbox"/>
Corruption #2	0	Random Write	0	0	0	<input type="checkbox"/>	<input type="checkbox"/>
Corruption #3	0	Random Write	0	0	0	<input type="checkbox"/>	<input type="checkbox"/>
Corruption #4	0	Random Write	0	0	0	<input type="checkbox"/>	<input type="checkbox"/>
Corruption #5	0	Random Write	0	0	0	<input type="checkbox"/>	<input type="checkbox"/>

D. Select checkbox for **Use Pcap Filter**

The image shows a Windows-style dialog box titled "Create/Modify WanPath for Endpoint: 100Mbps-wan-A". At the top, there are buttons for "Display", "Clear Counters", "Apply", "OK", and "Cancel". The dialog is divided into several sections:

- Name:** wp-a
- Backlog Buffer:** AUTO
- PCAP Filter:** (empty text field)
- Source IP/MAC:** 0.0.0.0
- Source Mask:** 0.0.0.0
- Dest IP/MAC:** 0.0.0.0
- Dest Mask:** 0.0.0.0
- Transfer Rate:** 100M (100 Mbps)
- Delay:** zero (0 us)
- Jitter:** zero (0 us)
- Drop-Freq:** zero (0%)
- Min Drop Burst:** 1
- Max Drop Burst:** 1
- Min Reorder Amount:** 1
- Max Reorder Amount:** 20
- Reorder-Freq:** zero (0%)
- Dup-Freq:** zero (0%)
- Jitter-Freq:** zero (0%)
- Test Manager:** (empty dropdown)

Below these fields is the "ICEcap Replay" section:

- ICEcap Replay
- Replay File: (empty text field)
- Buttons: Disabled, Same As WanLink, Inverse Match, Loop Replay, Replay Dup, Drop-Xth, Replay Latency, Replay Bandwidth, **Use Pcap Filter** (checked and highlighted with a red box), Reorder-Xth.

The bottom section contains six "Corruption" panels, each with the following fields:

- Corruption #0, #1, #2, #3, #4, #5
- Rate: 0
- Corruption: Random Write
- Byte-to-Write: 0
- Min Offset: 0
- Max Offset: 0
- Chain-to-Next:
- Do Checksum:

- E. Enter the PCAP Filter **vlan 1010** to apply any WanPath impairment or corruptions only to packets with 802.1q vlan id 1010
Expression is based on the tcpdump expression field.

Create/Modify WanPath for Endpoint: 100Mbps-wan-A

Buttons: Display, Clear Counters, Apply, OK, Cancel

Name: wp-a Backlog Buffer: AUTO

PCAP Filter: vlan 1010

Source IP/MAC: 0.0.0.0 Source Mask: 0.0.0.0

Dest IP/MAC: 0.0.0.0 Dest Mask: 0.0.0.0

Transfer Rate: 100M (100 Mbps) Delay: zero (0 us)

Jitter: zero (0 us) Drop-Freq: zero (0%)

Min Drop Burst: 1 Max Drop Burst: 1

Min Reorder Amount: 1 Max Reorder Amount: 20

Reorder-Freq: zero (0%) Dup-Freq: zero (0%)

Jitter-Freq: zero (0%) Test Manager:

ICEcap Replay Replay File: Dir

Disabled Loop Replay Replay Latency Replay Loss

Same As WanLink Replay Dup Replay Bandwidth Use Pcap Filter

Inverse Match Drop-Xth Duplicate-Xth Reorder-Xth

Corruption #0: Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

Corruption #1: Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

Corruption #2: Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

Corruption #3: Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

Corruption #4: Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

Corruption #5: Rate: 0 Corruption: Random Write Byte-to-Write: 0 Min Offset: 0 Max Offset: 0 Chain-to-Next Do Checksum

- F. Select **Apply** to create the WanPath.

For more information see [Tcpdump man page](#) , [Pcap Filter Syntax](#)

3. Setup the Corruptions.

A. Enter the following values into **Corruption #0** fields

- A. Rate **100000**
(how often, per million packets, should the corruption be applied)
- B. Corruption **Write Byte**
- C. Byte-to-Write **40**
(hex 0x00-0xff or decimal 0-255)
If you enter 0x28 and select OK, the GUI will translate it to decimal 40.
- D. Min Offset **19**
- E. Max Offset **20**

The Differentiated Services Field is in byte 20 of the ethernet frame which corresponds to the 2nd byte of the IP header.

B. Select checkbox **Do Checksum** which will re-calculate the checksum after making the errors so that the packet is still valid.

The screenshot shows the 'Create/Modify WanPath for Endpoint: 100Mbps-wan-A' configuration window. The window has a title bar with standard window controls and a toolbar with buttons for 'Display', 'Clear Counters', 'Apply', 'OK', and 'Cancel'. The main area is divided into several sections:

- General Settings:** Name: wp-a, Backlog Buffer: AUTO, PCAP Filter: wlan 1010, Source IP/MAC: 0.0.0.0, Source Mask: 0.0.0.0, Dest IP/MAC: 0.0.0.0, Dest Mask: 0.0.0.0, Transfer Rate: 100M (100 Mbps), Delay: zero (0 us), Jitter: zero (0 us), Drop-Freq: zero (0%), Min Drop Burst: 1, Max Drop Burst: 1, Min Reorder Amount: 1, Max Reorder Amount: 20, Reorder-Freq: zero (0%), Dup-Freq: zero (0%), Jitter-Freq: zero (0%), Test Manager: (empty), ICEcap Replay: (unchecked), Replay File: (empty), Dir: (empty).
- Replay Options:** Disabled (radio), Same As WanLink (radio), Inverse Match (checkbox), Loop Replay (checkbox), Replay Dup (checkbox), Drop-Xth (checkbox), Replay Latency (checkbox), Replay Bandwidth (checkbox), Duplicate-Xth (checkbox), Replay Loss (checkbox), Use Pcap Filter (checkbox), Reorder-Xth (checkbox).
- Corruption #0:** Rate: 100000, Corruption: Write Byte, Byte-to-Write: 40, Min Offset: 19, Max Offset: 20, Chain-to-Next (checkbox), **Do Checksum (checkbox)** (checked and highlighted with a red box).
- Corruption #1:** Rate: 0, Corruption: Random Write, Byte-to-Write: 0, Min Offset: 0, Max Offset: 0, Chain-to-Next (checkbox), Do Checksum (checkbox).
- Corruption #2:** Rate: 0, Corruption: Random Write, Byte-to-Write: 0, Min Offset: 0, Max Offset: 0, Chain-to-Next (checkbox), Do Checksum (checkbox).
- Corruption #3:** Rate: 0, Corruption: Random Write, Byte-to-Write: 0, Min Offset: 0, Max Offset: 0, Chain-to-Next (checkbox), Do Checksum (checkbox).
- Corruption #4:** Rate: 0, Corruption: Random Write, Byte-to-Write: 0, Min Offset: 0, Max Offset: 0, Chain-to-Next (checkbox), Do Checksum (checkbox).
- Corruption #5:** Rate: 0, Corruption: Random Write, Byte-to-Write: 0, Min Offset: 0, Max Offset: 0, Chain-to-Next (checkbox), Do Checksum (checkbox).

C. Select **OK** then create a second WanPath for this WanLink on Endpoint-B using the same values.

D. Verify that the WanPaths on this WanLink are setup correctly, then select **OK** on the Create/Modify WanLink window shown here

Name	Tx Rate	Disabled	!	Filter Pattern	Delay
wp-a	100 M	<input type="checkbox"/>	<input type="checkbox"/>	Pcap: vlan 1010	0

Name	Tx Rate	Disabled	!	Filter Pattern	Delay
wp-b	100 M	<input type="checkbox"/>	<input type="checkbox"/>	Pcap: vlan 1010	0

4. Run traffic through LANforge-ICE ports **eth2** and **eth3**, and capture traffic on eth2.


- A. Here we are using LANforge-FIRE on a secondary resource to send a 10Mbps bi-directional UDP flow between 802.1q VLAN endpoints eth2.1010 and eth3.1010 with an IP ToS value of decimal 184 which corresponds to DSCP value decimal 46 or Expedited Forwarding

- B. Go to the **Port Mgr** tab and highlight WanLink port eth2, then select the **Sniff Packets** button to bring up Wireshark.

Port	Pha...	Down	IP	SEC	Alias	Parent Dev	RX Bytes	RX Pkts	Pps RX	bps RX	TX Bytes	TX Pkts	Pps
1.1.00			192.168.100.198	0	eth0		5,529,927,...	8,709,413	55	143,334	5,281,552,...	9,617,541	
1.1.01		<input checked="" type="checkbox"/>	0.0.0.0	0	eth1		0	0	0	0	0	0	0
1.1.02			0.0.0.0	0	eth2		3,482,049,...	2,399,718	0	4	7,757,660,...	4,297,3...	
1.1.03			0.0.0.0	0	eth3		3,482,026,...	2,399,705	0	0	7,757,666,...	4,297,3...	
1.1.04			0.0.0.0	0	eth4		0	0	0	0	12,506	147	
1.1.05			0.0.0.0	0	eth5		0	0	0	0	12,234	147	
1.1.06			0.0.0.0	0	wiphy0		0	0	0	0	0	0	0
1.1.07			0.0.0.0	0	wiphy1		0	0	0	0	0	0	0
1.1.08		<input checked="" type="checkbox"/>	0.0.0.0	0	wlan0	wiphy0	0	0	0	0	0	0	0
1.1.09		<input checked="" type="checkbox"/>	0.0.0.0	0	wlan1	wiphy1	0	0	0	0	0	0	0
1.2.00			192.168.100.103	0	eth0		653,572,601	5,346,946	13	15,109	5,202,101,...	4,863,373	
1.2.01		<input checked="" type="checkbox"/>	0.0.0.0	0	eth1		0	0	0	0	0	0	0
1.2.02			172.16.0.102	0	eth2		3,460,380,...	2,384,176	0	0	3,482,059,...	2,399,880	
1.2.03			172.16.0.103	0	eth3		3,460,386,...	2,384,178	0	0	3,482,036,...	2,399,868	
1.2.04			0.0.0.0	0	eth4		2,394	7	0	0	9,852	138	
1.2.05			0.0.0.0	0	eth5		2,052	6	0	0	9,852	138	
1.2.06			192.168.9.29	0	eth3.1009	eth3	0	0	0	0	9,306	131	
1.2.07			192.168.8.28	0	eth3.1008	eth3	0	0	0	0	9,306	131	
1.2.08			192.168.1.11	0	eth2.1001	eth2	84,760,294	68,374	0	0	85,730,804	68,508	
1.2.09			192.168.9.19	0	eth2.1009	eth2	0	0	0	0	9,236	130	
1.2.10			192.168.5.15	0	eth2.1005	eth2	0	0	0	0	9,236	130	
1.2.11			192.168.7.17	0	eth2.1007	eth2	0	0	0	0	9,306	131	

Logged in to: localhost:4002 as: Admin

- C. The capture will show that periodically the DSCP field gets overwritten per the WanPath corruption logic of writing a decimal value 40 in the IP ToS field which corresponds to a DSCP value of decimal 10 or Assured Forwarding 11.

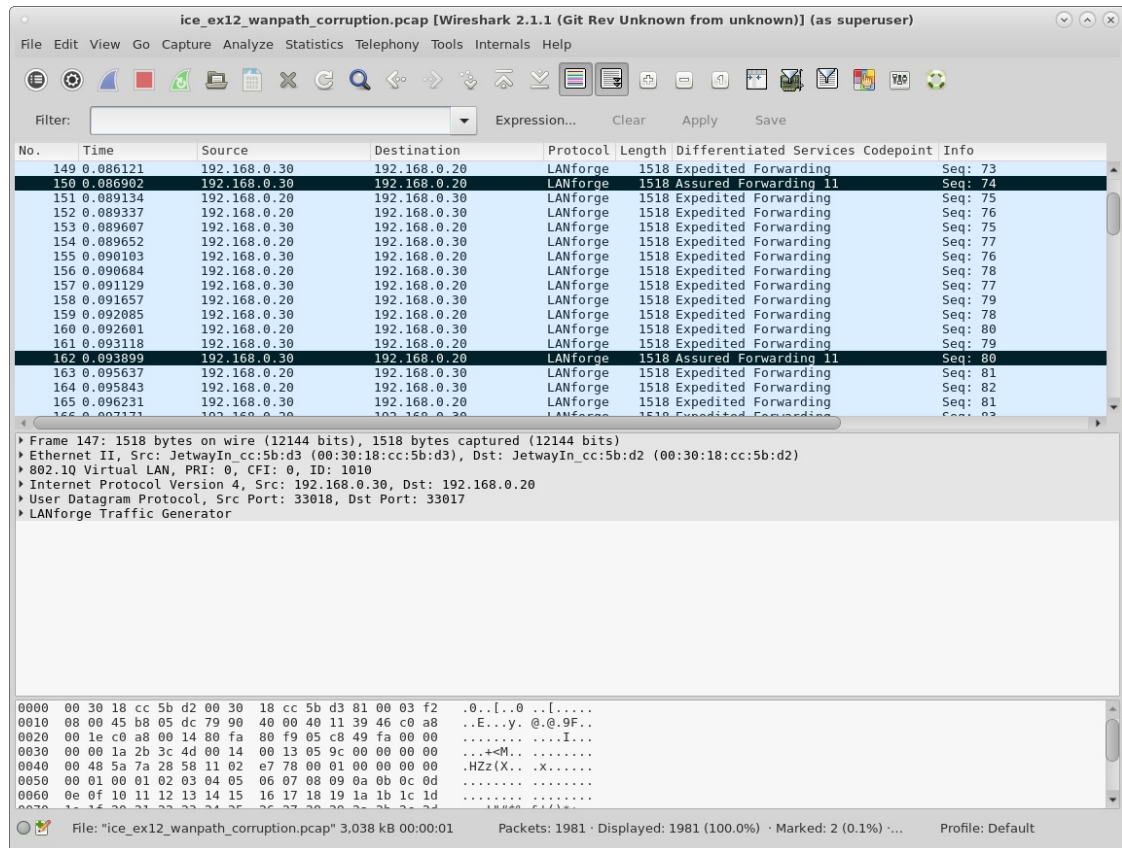

For more information see [LANforge-GUI User Guide: Layer-3 Cross-Connects](#)

WanLink Queue Discipline


Goal: Setup a WanLink with an alternate queue discipline.

In this test scenario, the default WanLink queue discipline of FIFO (First In First Out) is replaced with WRR (Weighted Round Robin) to demonstrate how to setup queuing that will prioritize traffic flows based on IP ToS.


Note: WRR can only be used with **User Mode** WanLinks.

1. Setup a WanLink connection.

A. Go to the **WanLinks** tab and select **Create**.

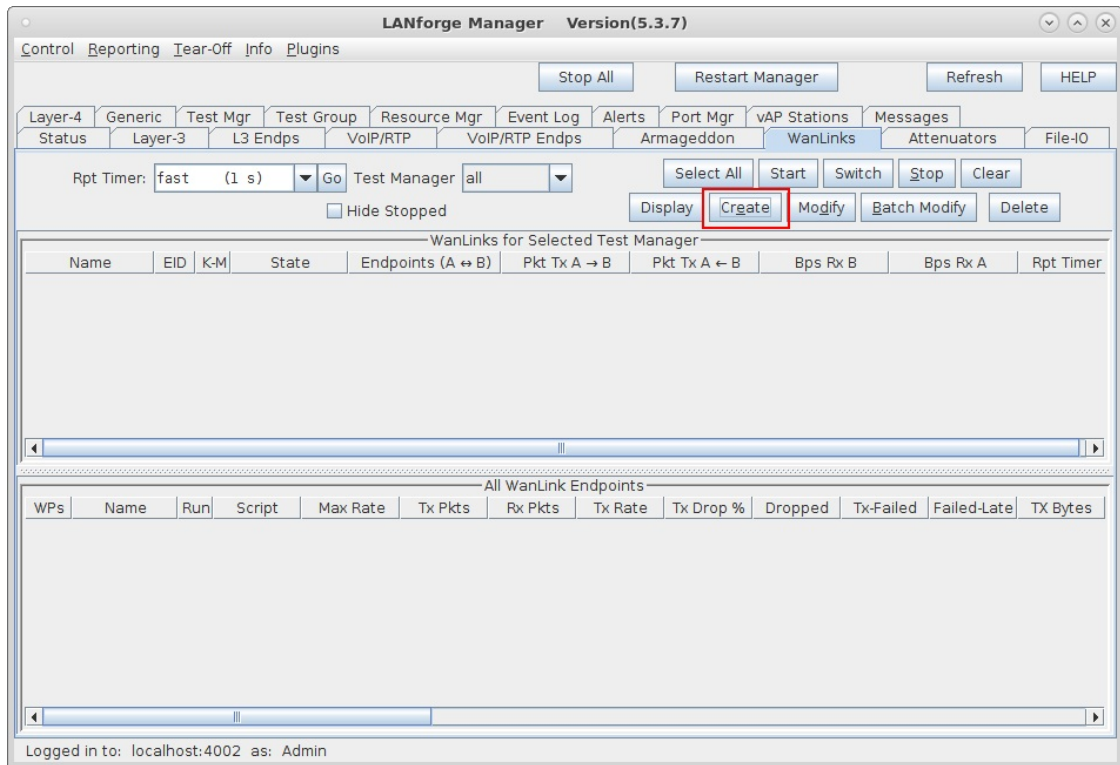

B. Enter the WanLink name, physical ports, base transfer rate, delay, jitter etc...
These impairments will be applied to all traffic on the WanLink.

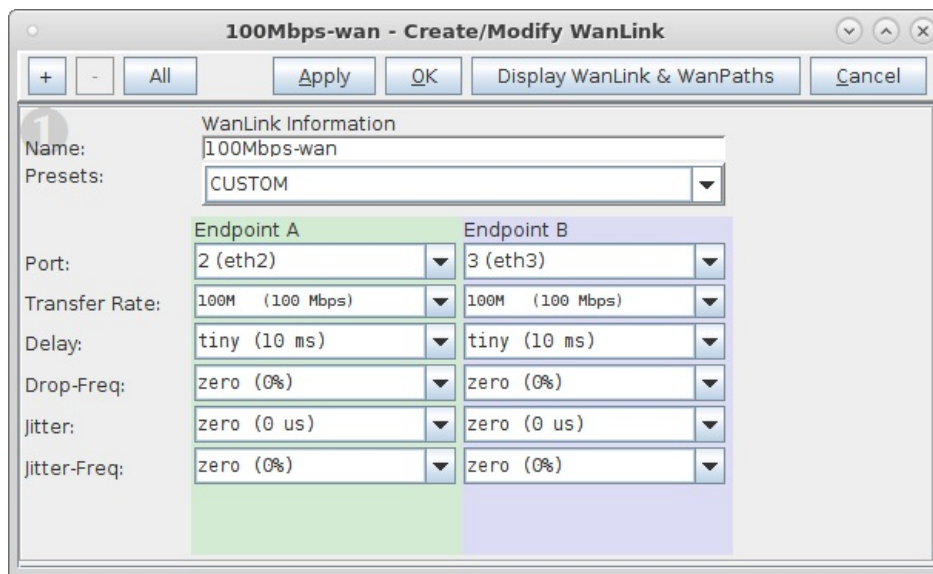


C. Select **Apply** to create the base WanLink.


For more information see [LANforge-GUI User Guide: Creating & Modifying WanLinks](#)

2. Setup WanLink for **User Mode**.

A. Select **All** to un-hide the other WanLink config panels.

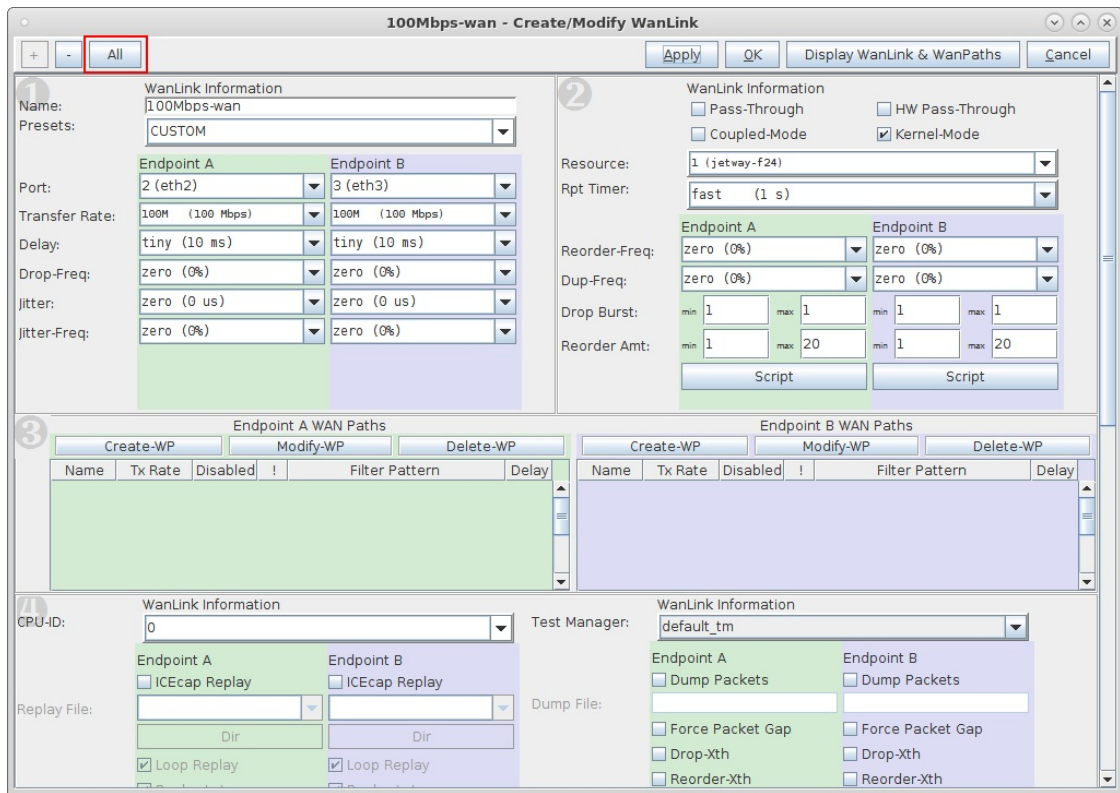

B. In panel 2, un-check the **Kernel-Mode** box.

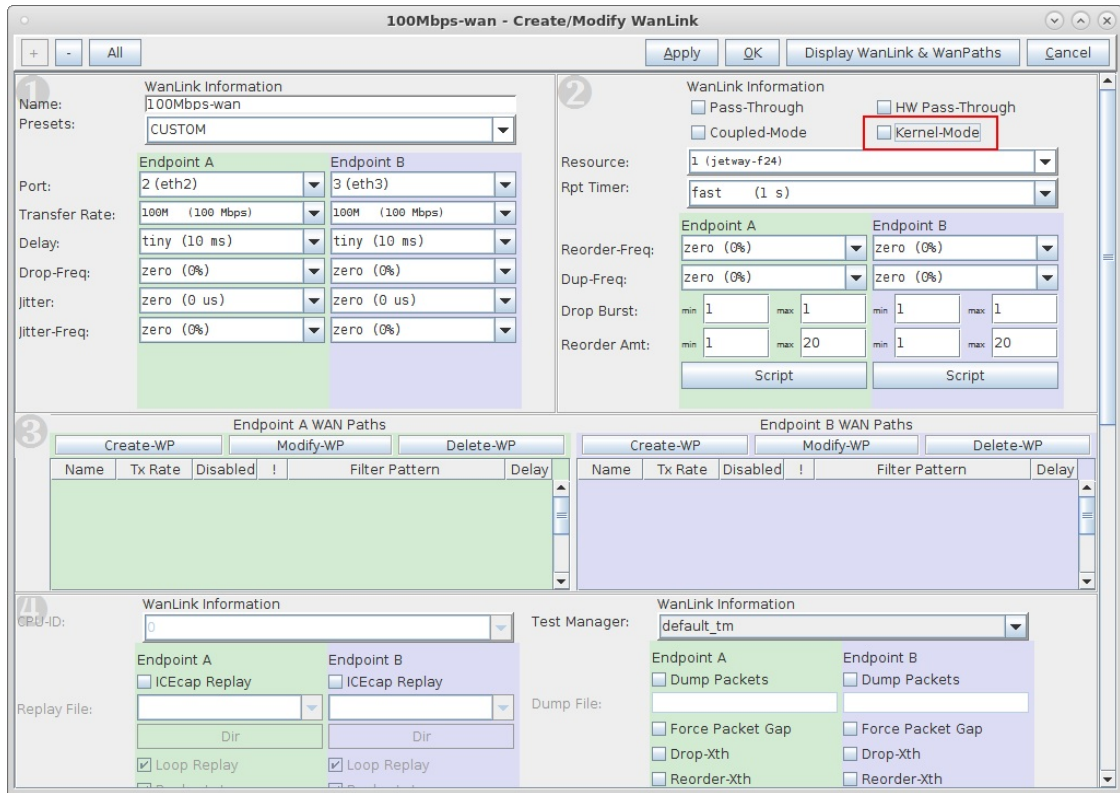

C. Select **Apply** to change the WanLink.

For more information see [LANforge-GUI User Guide: Creating & Modifying WanLinks](#)

3. Demonstrate the FIFO Queue Discipline.

A. Start the WanLink, then run traffic through LANforge-ICE ports **eth2** and **eth3**.

Here we are using LANforge-FIRE on a secondary resource to over-subscribe the 100Mbps WanLink with five 30Mbps traffic flows each with a different IP ToS value set to show that the FIFO WanLink ignores the ToS bits by treating all packets equally and processing them in the order they enter the queue.

The screenshot shows the LANforge Manager interface. The 'Cross Connects for Selected Test Manager' table is as follows:

Name	Type	State	Pkt Rx A	Pkt Rx B	Bps Rx A	Bps Rx B	Rx Drop % A	Rx Drop % B	Drop Pkts A	Drop
udp-001-ToS-0	LF/UDP	Stopped	0	0	0	0	0	0	0	0
udp-002-ToS-64	LF/UDP	Stopped	0	0	0	0	0	0	0	0
udp-003-ToS-96	LF/UDP	Stopped	0	0	0	0	0	0	0	0
udp-004-ToS-128	LF/UDP	Stopped	0	0	0	0	0	0	0	0
udp-005-ToS-192	LF/UDP	Stopped	0	0	0	0	0	0	0	0

B. The dropped packet percentages show that even with a high value ToS, no priority is observed.


The screenshot shows the LANforge Manager interface. The 'Cross Connects for Selected Test Manager' table is as follows:

Name	Type	State	Pkt Rx A	Pkt Rx B	Bps Rx A	Bps Rx B	Rx Drop % A	Rx Drop % B	Drop Pkts A	Drop
udp-001-ToS-0	LF/UDP	Run	30,986	29,019	24,731,675	23,640,798	15.753	15.913	5,794	
udp-002-ToS-64	LF/UDP	Run	31,203	32,229	25,341,139	26,170,783	4.697	12.647	1,733	
udp-003-ToS-96	LF/UDP	Run	24,693	26,359	20,052,738	21,405,667	22.327	28.551	8,237	1
udp-004-ToS-128	LF/UDP	Run	18,211	18,788	14,787,804	15,256,343	39.887	49.07	14,714	1
udp-005-ToS-192	LF/UDP	Run	16,050	14,245	12,948,194	11,490,452	49.169	61.644	18,261	2

For more information see [LANforge-GUI User Guide: Layer-3 Cross-Connects](#)

4. Change the WanLink queue discipline to WRR.

A. Select the **Stop All** button to stop all connections, then **Modify** the WanLink.

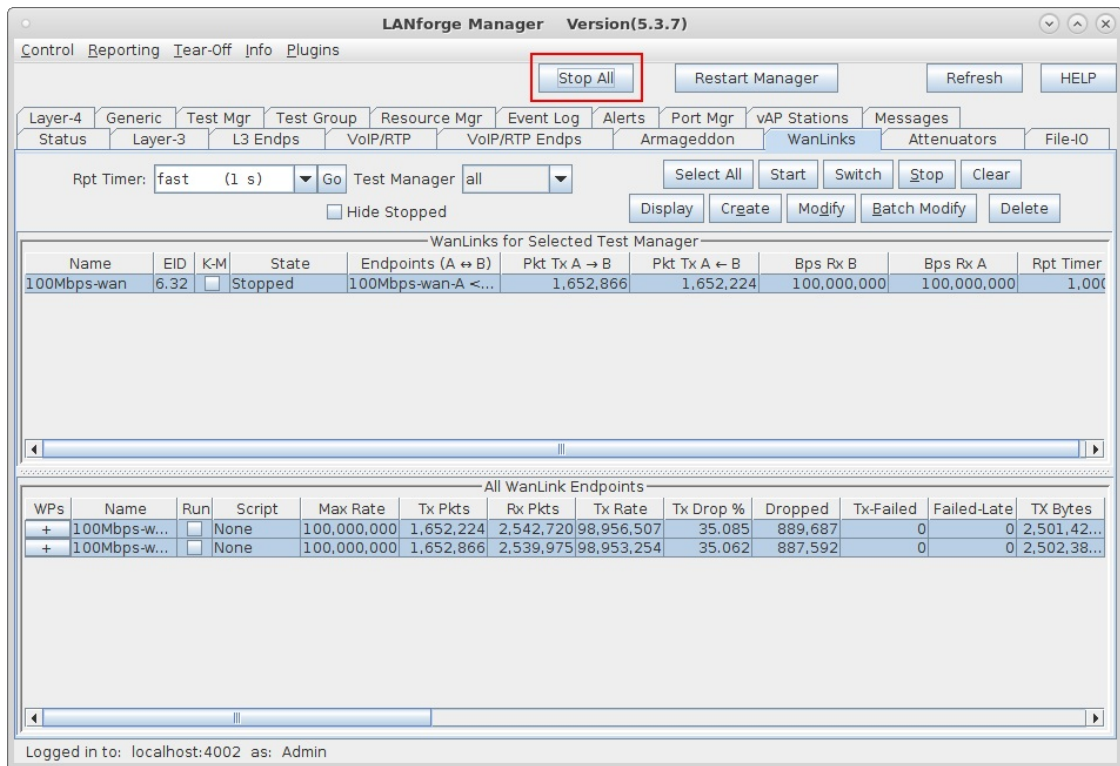


B. In panel 4, change the **QDisc** field to the following string:

WRR,2000-0-255,4000-64-255,8000-96-255,16000-128-255,32000-192-255 for both Endpoint-A and Endpoint-B.

The WRR string format is weight-ToS-mask where higher weights are given higher priority to packets matching the ToS and bit mask.

Note: Minimum weighting should be equal to or greater than your MTU.

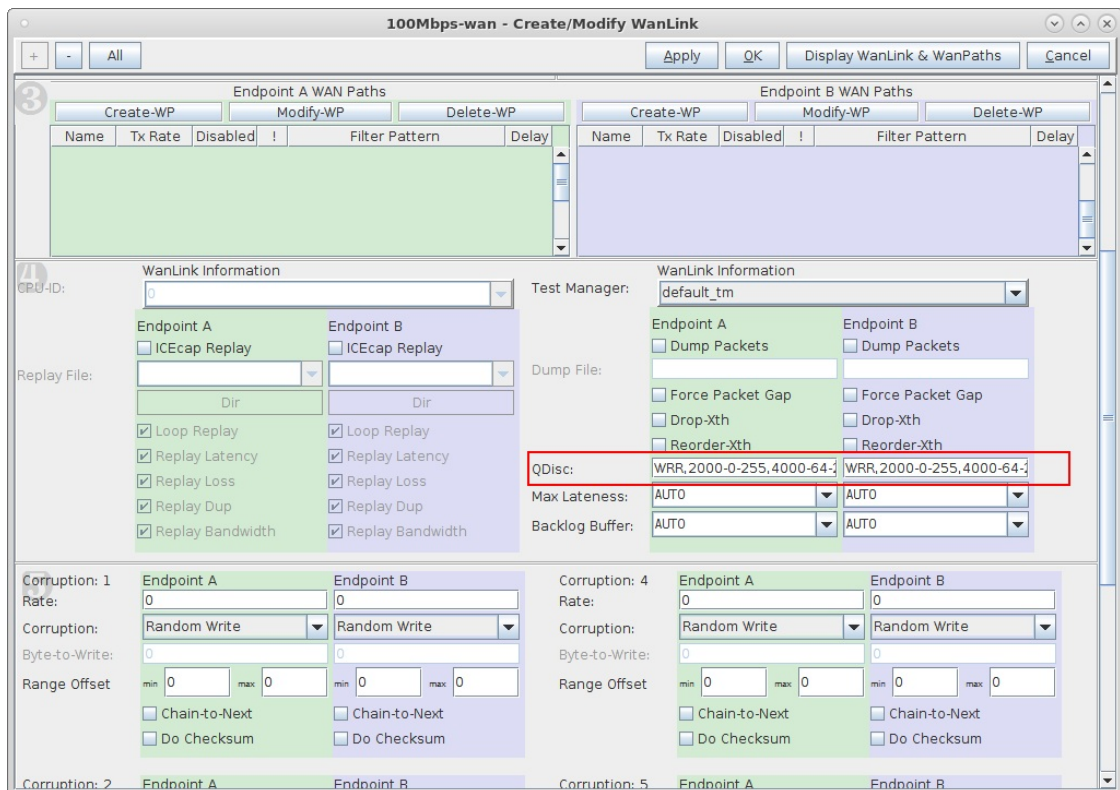

C. Select **OK** to apply changes to the WanLink and close the modify window.

5. Demonstrate the WRR Queue Discipline.

A. Run the WanLink and the same five UDP traffic flows through LANforge-ICE ports **eth2** and **eth3**.

LANforge Manager Version(5.3.7)

Control Reporting Tear-Off Info Plugins

Stop All Restart Manager Refresh HELP

Layer-4 Generic Test Mgr Test Group Resource Mgr Event Log Alerts Port Mgr vAP Stations Messages

Status Layer-3 L3 Endps VoIP/RTP VoIP/RTP Endps Armageddon WanLinks Attenuators File-IO

Rpt Timer: fast (1 s) Go Test Manager all

Select All Start Switch Stop Clear

Hide Stopped Display Create Modify Batch Modify Delete

WanLinks for Selected Test Manager

Name	EID	K-M	State	Endpoints (A ↔ B)	Pkt Tx A → B	Pkt Tx A ← B	Bps Rx B	Bps Rx A	Rpt Timer
100Mbps-wan	6.32	<input type="checkbox"/>	Run	100Mbps-wan-A <...>	0	0	100,000,000	100,000,000	1.000

All WanLink Endpoints

WPs	Name	Run	Script	Max Rate	Tx Pkts	Rx Pkts	Tx Rate	Tx Drop %	Dropped	Tx-Failed	Failed-Late	TX Bytes
+	100Mbps-w...	<input checked="" type="checkbox"/>	None	100,000,000	0	0	0	0	0	0	0	0
+	100Mbps-w...	<input checked="" type="checkbox"/>	None	100,000,000	0	0	0	0	0	0	0	0

Logged in to: localhost:4002 as: Admin

B. This time, the higher valued ToS UDP flows are experiencing less drops due to the WRR priorities setup in the WanLink.

LANforge Manager Version(5.3.7)

Control Reporting Tear-Off Info Plugins

Stop All Restart Manager Refresh HELP

Layer-4 Generic Test Mgr Test Group Resource Mgr Event Log Alerts Port Mgr vAP Stations Messages

Status Layer-3 L3 Endps VoIP/RTP VoIP/RTP Endps Armageddon WanLinks Attenuators File-IO

Rpt Timer: fast (1 s) Go Test Manager all

Select All Start Stop Quiesce Clear

View 0 - 500 Go Display Create Modify Delete

Cross Connects for Selected Test Manager

Name	Type	State	Pkt Rx A	Pkt Rx B	Bps Rx A	Bps Rx B	Rx Drop % A	Rx Drop % B	Drop Pkts A	Drop Pkts B
udp-001-ToS-0	LF/UDP	Run	5,785	3,705	6,763,717	4,331,818	66.944	84.413	17,056	2,152
udp-002-ToS-64	LF/UDP	Run	38,161	41,833	13,897,326	15,332,256	52.24	43.04	41,741	2,152
udp-003-ToS-96	LF/UDP	Run	43,067	34,538	15,736,044	12,619,674	44.292	53.409	36,468	2,152
udp-004-ToS-128	LF/UDP	Run	80,270	62,238	25,151,921	19,501,747	10.9	28.267	10,152	2,152
udp-005-ToS-192	LF/UDP	Run	104,400	77,234	32,449,505	24,003,895	0	15.729	0	1,076

Logged in to: localhost:4002 as: Admin

For more information see [LANforge-GUI User Guide: Layer-3 Cross-Connects](#)

WiFi: Gaming Test: video demonstration

Goal: Learn about how to combine the WAN emulation and programmable attenuation to emulate different network environments for game consoles.

Watch a demonstration of how to modify the gaming experience using WAN links to drop packets and combining that with attenuating the wifi signal in an isolation chamber. This scenario requires LANforge version 5.3.9, two isolation chambers, one or more programmable attenuators a DUT and three mesh AP nodes.



WiFi Gaming Test demonstration

Using Custom DNS on LANforge with DNSmasq

Goal: Create a nameserver for your test network when no Internet access is available.

Isolated testbeds still regularly require their DUTs to resolve hostnames. The `dnsmasq` package on Linux provides this feature. Requires release 5.4.6 or later.

Role of dnsmasq and how to combine it with Virtual Routers

The `dnsmasq` service provides BOTH DHCP and DNS services.

i If the `dhcp-range` directive is present in the `/etc/dnsmasq.conf` file, then it will respond to DHCP requests.

This setting is NOT governed by the Netsmith -> Virtual Router -> Modify -> DHCP setting. You can accidentally leave DNSmasq running in DHCP serving mode and use Chamber View test scenarios that also create a new DHCP service in a virtual router. LANforge does not track the status of DNSmasq like it does the dhcpd process it starts in a virtual router. You can end up running two DHCP services if you are not careful

The two modes you would configure are:

- **DNS mode** and use virtual routers for DHCP. Configure the DNS entry of the virtual router to let clients see the nameserver entry.
- **DNS and DHCP mode** and never use the DHCP option of the virtual router.

We suggest configuring DNSmasq in a DNS-only mode most of the time.

Typical Port Setup

If you are crafting a test scenario where you are providing DHCP as an upstream port, create a Virtual Router and drag your upstream port into it. You will probably want a static IP on the port. For this example, we will use `eth1` with address `10.45.0.1`.

- Right-click the port and select **Modify**
- In the Create/Modify Connection window:
 - Select DHCP
 - Configure DHCP DNS to be the IP of the port (10.45.0.1)

Enable the DNS service on the port

- Open the Port modify window by either double-clicking on the row in the Port Mgr tab or selecting the **Modify Port** option from the Netsmith right-click menu.
- At the lower left of the window, in the Services box, select **DNS**.
- Click **OK**.

You have now enabled DHCP in the virtual router.

Configure DNSmasq

The `/etc/dnsmasq.conf` file controls the behavior of the DNSmasq service. The configuration below will serve entries out of `/etc/hosts`. This example is configured to run on interface `eth1`.

`/etc/dnsmasq.conf`

Hosts file `/etc/hosts`

Running DNSmasq:

- Check for configuration errors using `dnsmasq --test`.
- Restart DNSmasq to apply changes: `sudo systemctl restart dnsmasq.service`.